
ASSEMBLY AND INSTALLATION INSTRUCTIONS

T0547

WARNING: Turn off the main power at circuit breaker before installing fixture. AVERTISSEMENT: Coupez la source d'alimentation principale au panneau central de disjoncteurs avant d'installer le luminaire.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

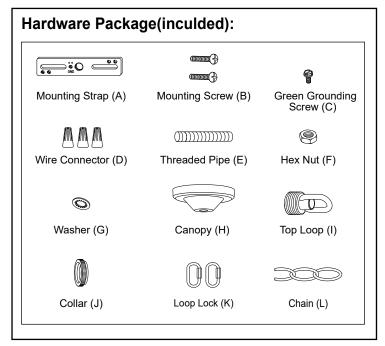




Installation Steps

Turn off the power at fuse or circuit box.

- 1. Attach threaded pipe (E) to the mounting strap (A), then secure it with a washer (G) and hex nut (F).
- 2. Attach the mounting strap (A) to the outlet box by using two mounting screws (B).
- 3. Secure the top loop (I) to threaded pipe (E).
- 4. Choose the length of the chain (L) you need, then weave the fixture wire and the fixture grounding wire through the chain (L), collar (J) and canopy (H).
- 5. Connect one end of the chain (L) with the loop by using a loop lock (K).
- 6. Connect the other end of the chain (L) with the top loop (I) by using another loop lock (K).
- 7. Thread the fixture wire and fixture grounding wire through the top loop (I), threaded pipe (E) and mounting strap (A).

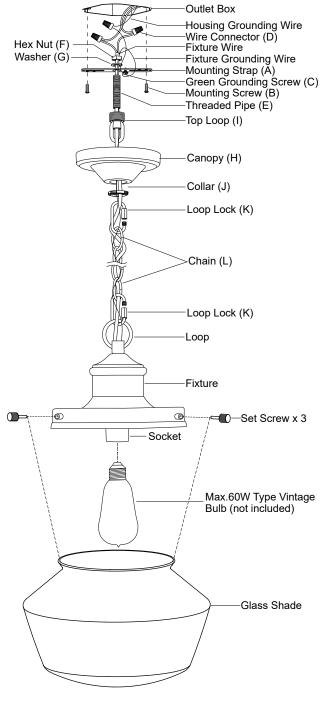

- 8. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire connectors (D):
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap (A) with the green grounding screw (C). Then connect it to the house grounding wire with a wire connector (D).

Carefully put the wires back into the outlet box.

- 9. Attach the canopy (H) to the mounting strap (A) by inserting the top loop (I), then secure it with the collar (J).
- 10. Install bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.
- 11. Attach the glass shade to the fixture, secure it with three set screws.

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

