

Norman Pendant

6551701, 6551801 | 1.0

GENERATION LIGHTING

Pendant

CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


GENERATION LIGHTING

7400 Linder Ave, Skokie, IL 160077

800.969.3347


www.generationlighting.com

© 2020 Generation Lighting. All rights reserved.
The "Generation Lighting" graphic is a registered trademark of Generation Lighting. Generation Lighting reserves the right to change specifications for product improvements without notification.

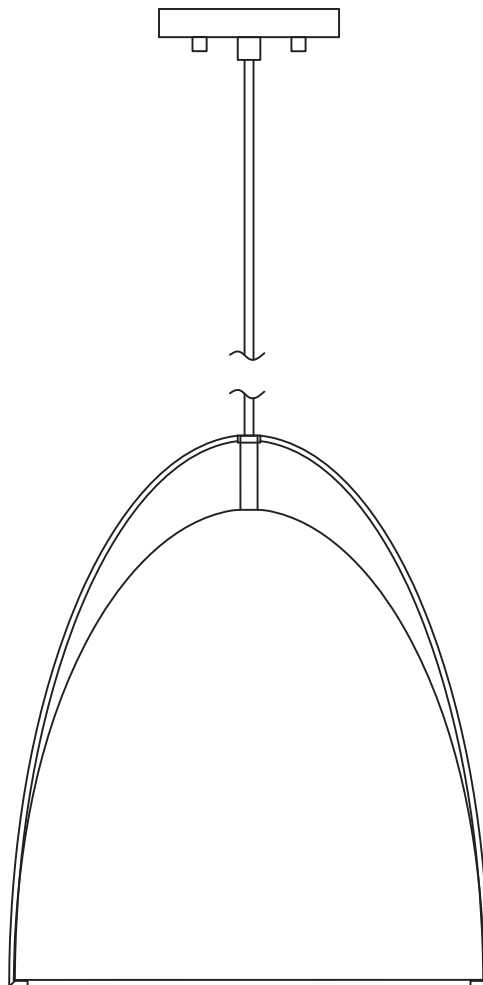

SAVE THESE INSTRUCTIONS!

Install the Fixture

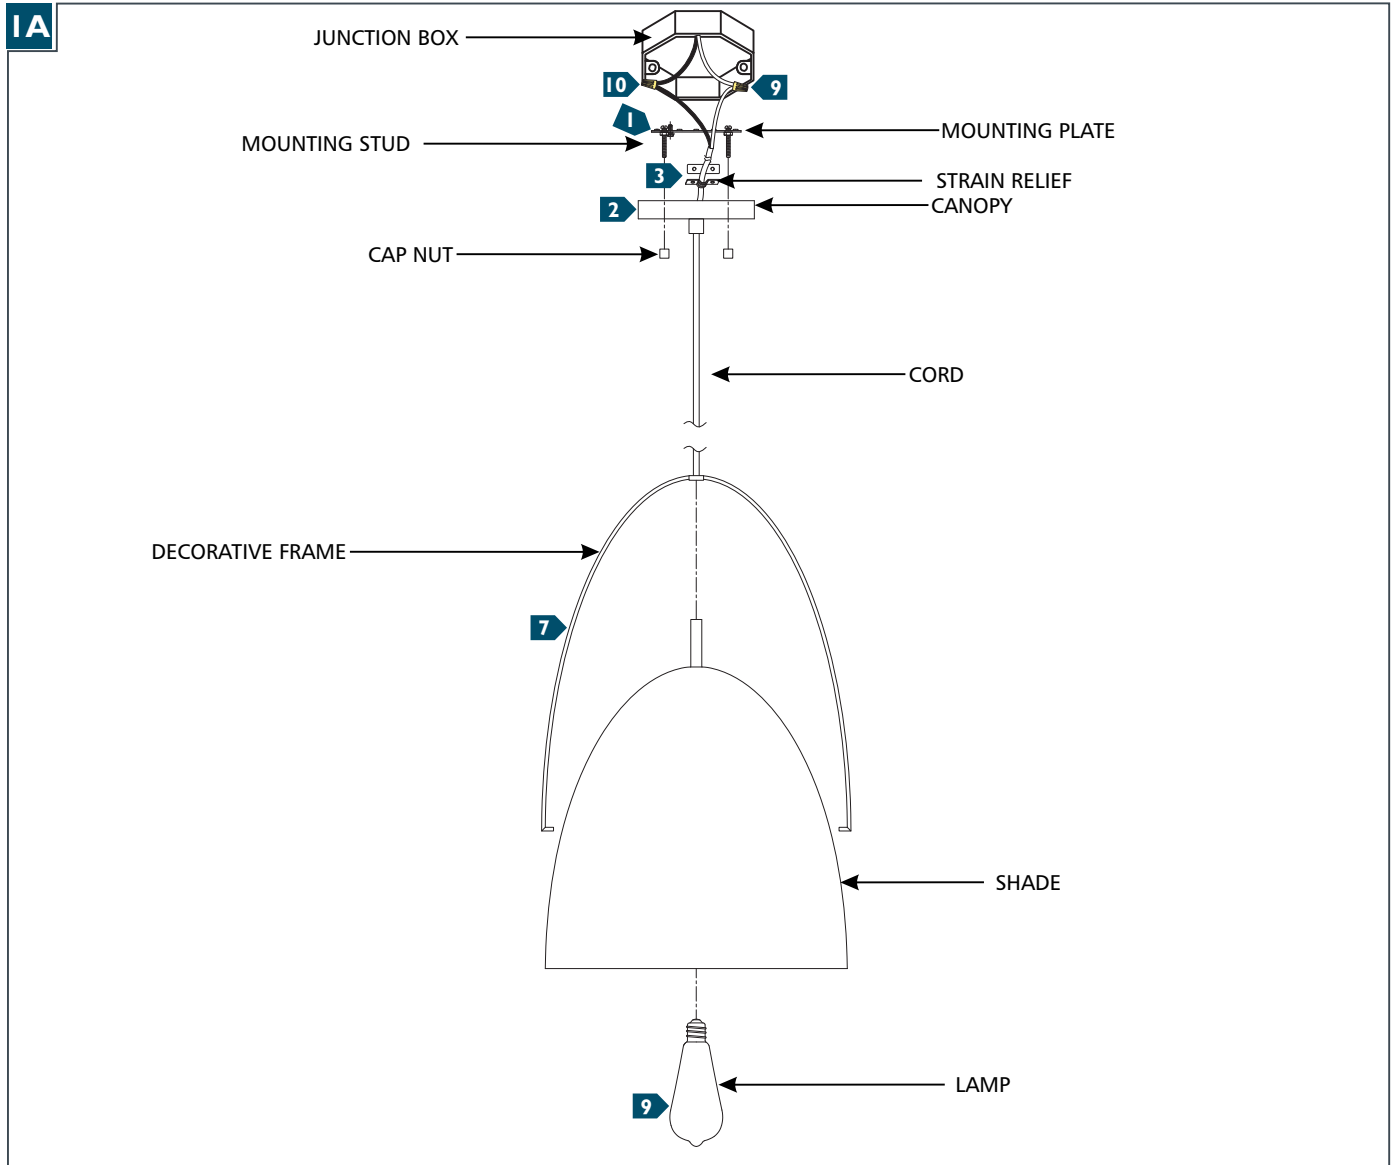

- 1 Secure the mounting plate to the junction box.
- 2 Feed the cord through the decorative frame and canopy.
- 3 Determine the wanted height of the fixture and adjust the cord accordingly, then clamp the strain relief on to the cord inside the canopy.
- 4 Trim the cord leaving enough for electrical connections. From the end of the cord, strip the insulation 4" and then strip the end of the wires. **Note: Make sure not to nick the inner wires.**
- 5 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 6 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 7 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 8 Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the cap nuts onto the mounting studs.
- 9 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.