


ASSEMBLY INSTRUCTION FOR L311029

1. FASTEN SOCKET ASSEMBLY ONTO BASE. BE CAREFUL NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
2. SCREW BULB INTO SOCKET, BULB (MAX 3-WAY 150W) NOT INCLUDED.
3. PLACE HARP ONTO SADDLE.
4. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LUMINAIRE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

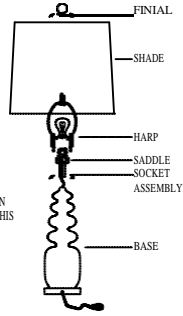

ASSEMBLY INSTRUCTION FOR L311029

1. FASTEN SOCKET ASSEMBLY ONTO BASE. BE CAREFUL NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
2. SCREW BULB INTO SOCKET, BULB (MAX 3-WAY 150W) NOT INCLUDED.
3. PLACE HARP ONTO SADDLE.
4. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LUMINAIRE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

