


## WARNING DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE.

READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

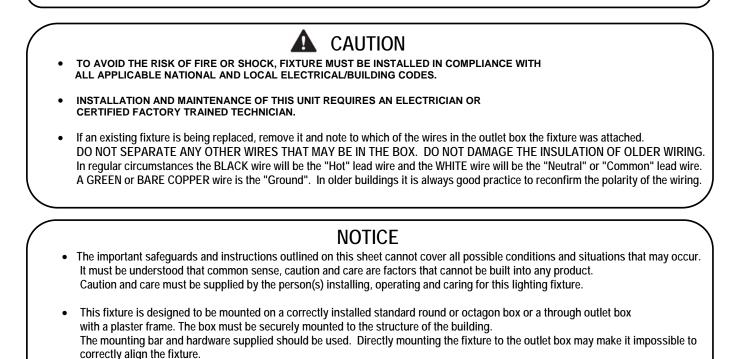

• NOTE: For your safety be certain that the circuit breakers controlling outdoor lighting and equipment are GFI breakers.

## FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE:


Before discarding the carton, double check to make certain that all parts are found.

## FIXTURE INSTALLATION


- Thread the 2 longest screws into the mounting ring and the hext nut onto the screws (The green ground screw is the front). Attach the mounting ring to the outlet box. (The green screw should face the floor).
- 2. Thread the small hex nuts onto the screws. Adjust the screws so that they extend 3/16" beyond the back of the fixture, Lock the hex nuts against the crossbar.
- 3. Determine the overall desired length of the fixture. Thread the cord through tubes. Guide the leads and ground wire to the canopy. Measure 6" of lead and ground wire beyond the center of the fixture. Cut off excess wire. Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together.
- 4. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.

## 

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

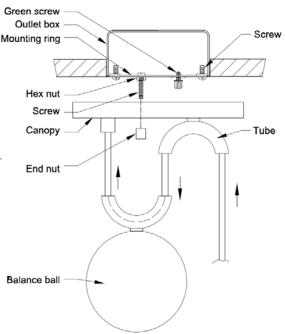

5. Fasten the white fixture lead wire to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, Tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

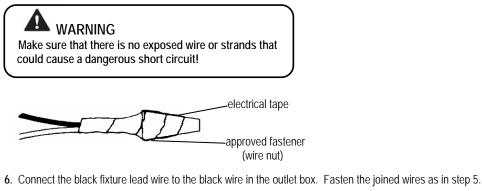

- 7. Using the end nut, fasten the canopy to the mounting ring.
- Install the LED diffuser. NOTE: This fixture is rated for Max 24 watt type LED diffuser (Include).



- 9. Install the glass into the fitter with thumb screw.
- 10. Adjust the balance ball and keep it in place.
- 11. Restore power to circuit at breaker or fuse box.

