







 









ASSEMBLY AND INSTALLATION INSTRUCTIONS

LK33012WP-C

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.



NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included): For Ceiling Light

AA		Mounting Strap X1	EE		Fixture Mounting Screw X2	II		Washer X2	MM		Fixture Ground Wire X1
BB		Wire Connector X3	FF		Lock Nut X2	JJ		Threaded Pipe X1	NN		Coupling X1
CC		Hex Nut X2	GG		Canopy X1	KK		Bolt Nut X2	OO		Ground Pad X1
DD		Mounting Screw X2	HH		Green Ground Screw X1	LL		Tube X1	PP		Finial X1

Hardware Package (included): For Light Kit


QQ		Hex Nut X1	RR		Washer X1	SS		Set Screw X2	TT		Wood Bead X1
----	---	------------	----	---	-----------	----	---	--------------	----	---	--------------

	Glass Shade 10102FS X1		Candelabra 4W LED Bulb 8096LD X2
---	------------------------	--	----------------------------------

For Light Kit: Installation Steps

Turn off the power at fuse or circuit box.

1. Remove the switch box cover from the switch box of the fan by loosening the three switch box screws.
2. Unscrew the center plug from the switch box cover and discard it.
3. Attach the threaded pipe (-a) of the light kit to the hole of the switch box cover, then thread the wires through the washer (RR) and hex nut (QQ), then secure them tightly.
4. Thread the fixture wire through the switch box cover. Then attach the light kit to the switch box cover, then secure it with two set screws (6x32 20mmL) (SS).
5. Pull out the wires from the switch box. Make wire connections using the wire connectors (BB).
 - The black wire from light kit to the black or blue wire from the fan.
 - The white wire from light kit to the white wire from the fan.
 - Carefully put wires back into the switch box.

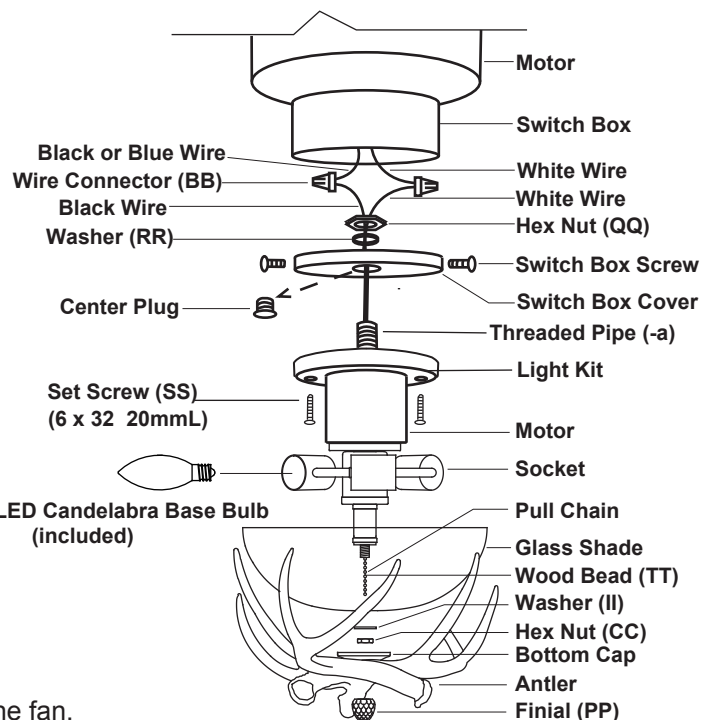

- Restore the switch box cover back to the switch box by using the three switch box screws.
- Install 2 x 4W LED candelabra base bulbs (included). See relamping label at socket area or packaging for maximum wattage allowed.
- Thread the wood bead (TT) through the glass shade, then attach the glass shade to the socket , by securing the washer (II) and hex nut (CC). Thread the wood bead (TT) through the antler and finial (PP), then attach the antler to the glass shade by securing the finial (PP).


Turn on the power at fuse or circuit box.

For Ceiling Light:

Turn off the power at fuse or circuit box.

- Take out the washer (II), ground pad (OO), canopy (GG), tube (LL), threaded pipe (JJ), two bolt nuts (KK) and two hex nuts (CC) from the hardware package for ceiling light.
- Secure the coupling (NN) onto threaded pipe (-a). Then secure threaded pipe (JJ) into the other end of the coupling (NN) and secure with a hex nut (CC) and washer (II).
- Slip the tube (LL) and the canopy (GG) and through threaded pipe (JJ), secure them together with a washer (RR), ground pad (OO), fixture ground wire (MM) and hex nut (QQ).
- Attach two fixture mounting screws (EE) to the mounting strap (AA) , then secure them with two lock nuts (FF). Adjust the length of the screws if necessary.
- Attach the mounting strap (AA) to the outlet box by using two mounting screws (DD).
- Pull out the outlet wires and the house ground wire from the outlet box. Make wire connections using the wire connectors (BB):
 - The black wire from fixture to the black wire from the outlet box.
 - The white wire from fixture to the white wire from the outlet box.
 - Attach the fixture grounding wire to the mounting strap with the green ground screw (HH). Then connect it to the house ground wire with a wire connector (BB).
 Carefully put the wires back into the outlet box.
- Attach the canopy (GG) to the mounting strap (AA) by inserting two fixture mounting screws (EE), then secure them with the bolt nuts (KK).
- Install 2 x 4W LED candelabra base bulbs (included). See relamping label at socket area or packaging for maximum wattage allowed.
- Thread the wood bead (TT) through the glass shade, then attach the glass shade to the socket by securing the washer (II) and hex nut (CC). Thread the wood bead through the antler and finial (PP), then attach the antler to the glass shade by inserting securing the finial (PP).

Turn on the power at fuse or circuit box.

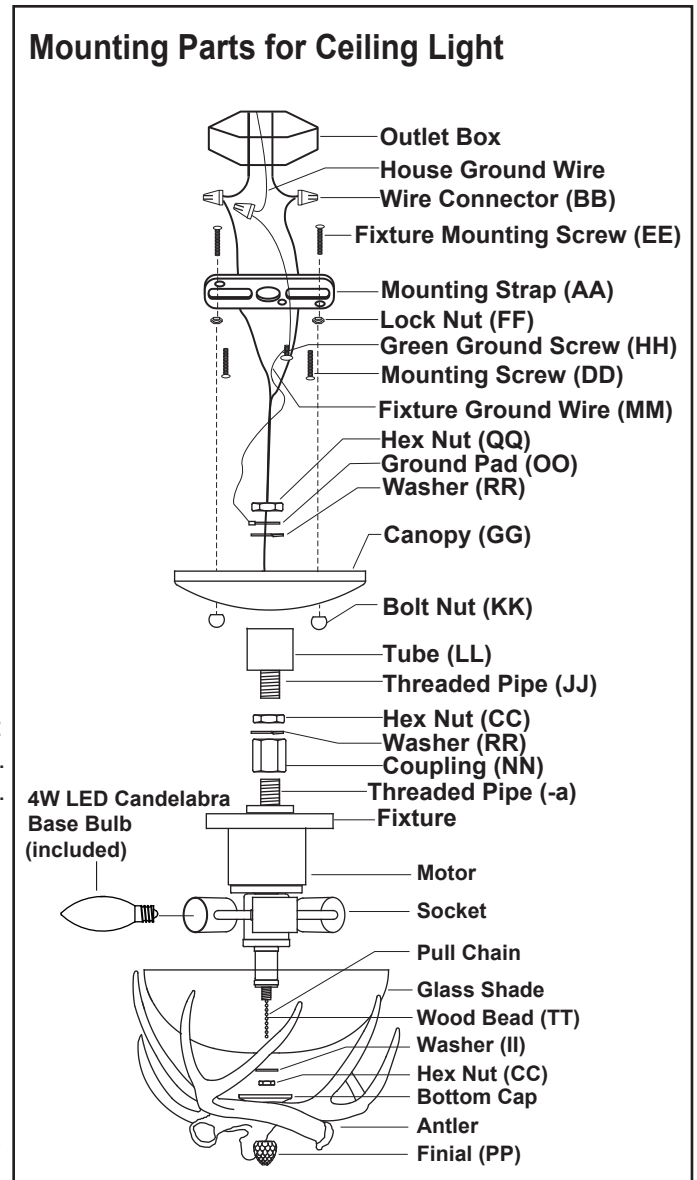

The following parts are available for reorder if damaged or missing.

Spare Parts List:


AA		Mounting Strap X1	EE		Fixture Mounting Screw X2	II		Washer X1	MM		Fixture Ground Wire X1
BB		Wire Connector X3	FF		Lock Nut X2	JJ		Threaded Pipe X1	NN		Coupling X1
CC		Hex Nut X2	GG		Canopy X1	KK		Bolt Nut X2	OO		Ground Pad X1
DD		Mounting Screw X2	HH		Green Ground Screw X1	LL		Tube X1	PP		Finial X1

↑ Assembly Kit
6124MM
(1 SET)

QQ		Hex Nut X1	RR		Washer X1	SS		Set Screw X2	TT		Wood Bead X1
----	--	---------------	----	--	--------------	----	--	-----------------	----	--	-----------------

↑ Assembly Kit
6126MM
(1 SET)

	Glass Shade 10102FS X1		Candelabra 4W LED Blub 8096LD X2
--	------------------------------	--	--

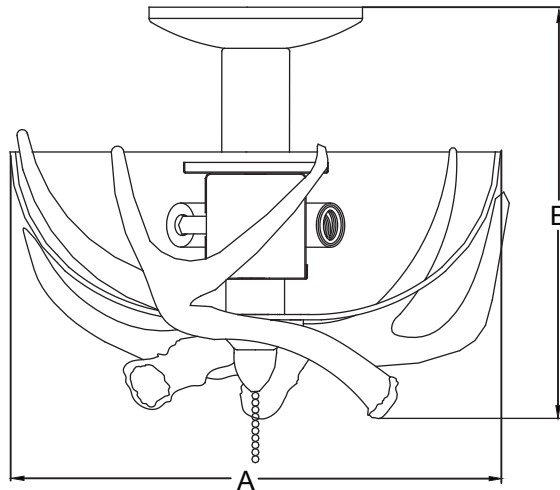

A : 12-1/2"

B : 8-1/2"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235