


C. Insert one ends of Arms C into the loop E, and use the Allen Key to tighten them with screws.

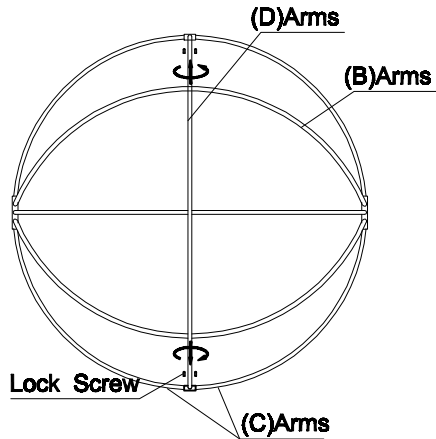

(Step C Continued)

D. Adjust the Arms of Fixture Body A like Figure 1, thread the power cord through the holes on Arms D. Use the Fixture loops to fix the whole cage, Then connect the Fixture Body A with the cage with the Quick Connector HH.

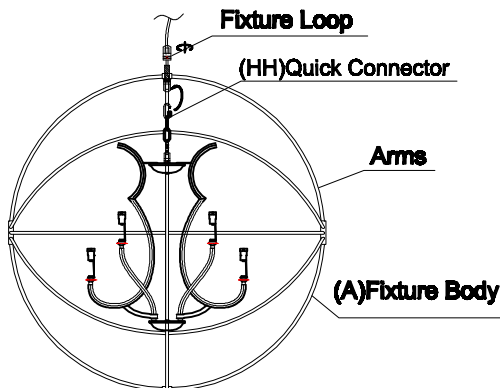


Figure 1

STEP 2- Install the Canopy Chain Loop and Nipple

- A. Thread the nipple into the crossbar. Thread the lock washer and the hex nut onto top end of the nipple. Do not tighten at this moment.
- B. Attach the crossbar to the J- box and secure with J- box screws (not included). Hand tighten until snug.
- C. Thread the canopy chain loop onto the end of the nipple and hand tighten until snug. Place the ceiling canopy over the canopy chain loop against the ceiling to determine the correct position of the nipple. Thread the canopy lock ring onto the canopy chain loop. Adjust the nipple to allow the ceiling canopy to rest against the ceiling when held in place by the canopy lock ring.
- D. Remove the canopy lock ring from the canopy chain loop and remove the ceiling canopy. Unscrew J- box screws to remove the crossbar assembly. Tight the hex nut above the crossbar. And then reinstall the crossbar assembly to the outlet box.

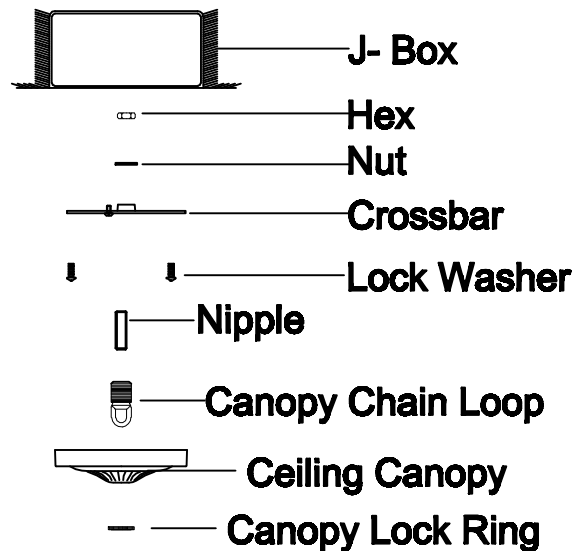


Figure 2