

INSTALLATION INSTRUCTION OF MONOPOINT (FOR LINE VOLTAGE TRACK FIXTURE)

MOUNTS PERMANENTLY TO OUTLET BOX. ALLOWS ANY LAMPHOLDER TO 300W MAXIMUM TO BE CONVERTED TO CANOPY INSTALLATION


1. Attach Mounting Plate to Junction Box by two Mounting Screws provided.
2. Hold the cover and attach BK fixture wire to BK house wire, WH fixture wire to WH house wire, Green fixture wire to Green house wire by wire connectors provided.
3. Tuck the wires into the Outlet Box. 4. Fix the cover over the Mounting Plate by two set screws.

TO INSTALL THE TRACK HEAD :

1. Insert the Adaptor head into the slot of Monopoint cover.
2. Pull down the sleeves and twist Adaptor about 90 degree until mounting sleeves tab locks into the Monopoint slot.
2. Note forcing mounting adaptor in wrong direction may damage the contact assembly. Polarity tab on Adaptor must align with polarity groove on Monopoint for proper installation.

TO REMOVE THE TRACK HEAD :

1. Pull down mounting Adaptor sleeves and twist adaptor 90 degree until Adaptor is free from the opening of Monopoint.

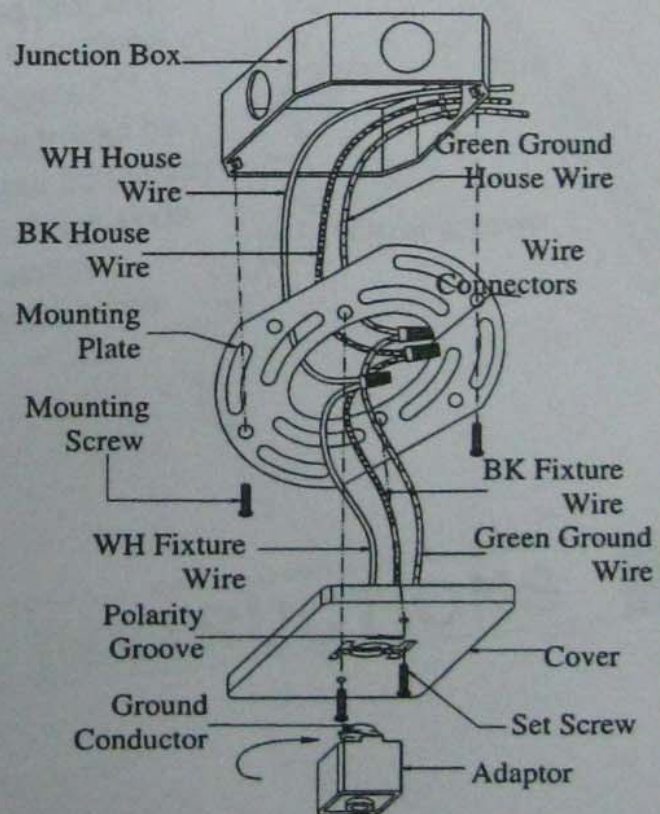

SAVE THESE INSTRUCTIONS