



Tools Required

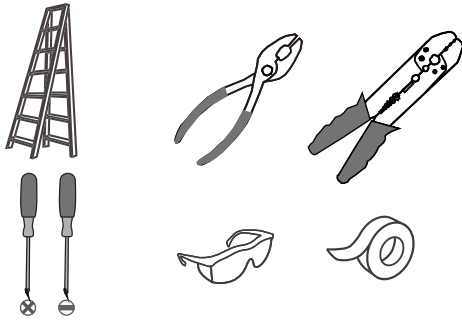

Light Source

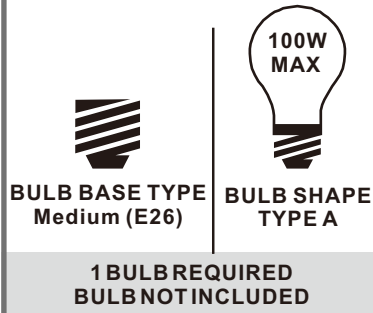

**Fixture Height Adjustable
10.5" to 46.5"**

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

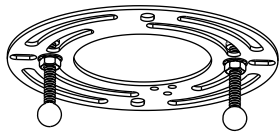


A Crossbar Assembly
x 1




B Outlet Box Screw
x 2



C Wire Connector
x 3

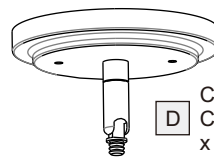

D Ceiling
Canopy
x 1

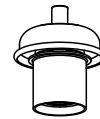


G Fixture
Body
x 1



E 6"L Rod
x 2


F 12"L Rod
x 2

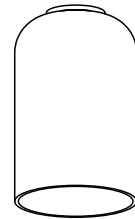

H Shade
x 1

Table of Contents

Crossbar Assembly

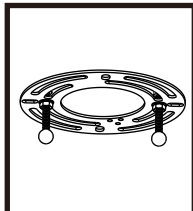


STEP 1

Downrod




STEP 2

Wiring

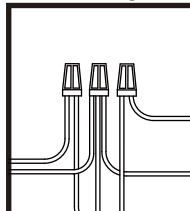

STEP 3

Ceiling Canopy

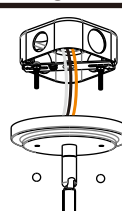


STEP 4

Shade & Bulb






STEP 5





STEP 1

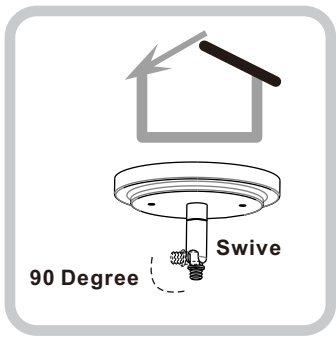



For angled ceilings, Swivel opening towards wall.

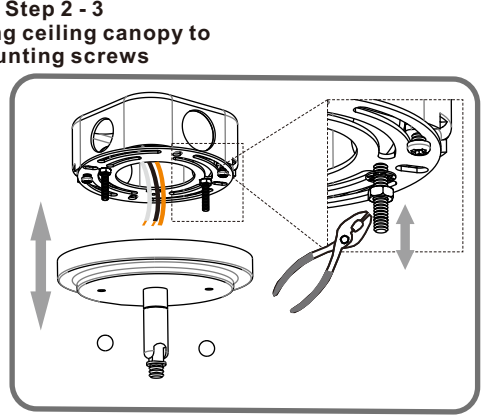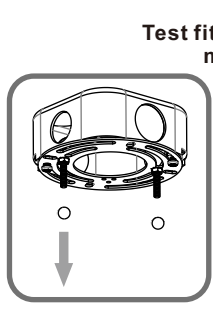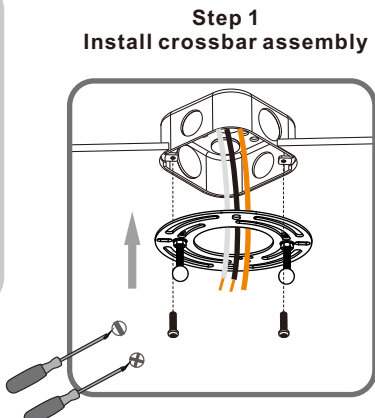


STEP 2

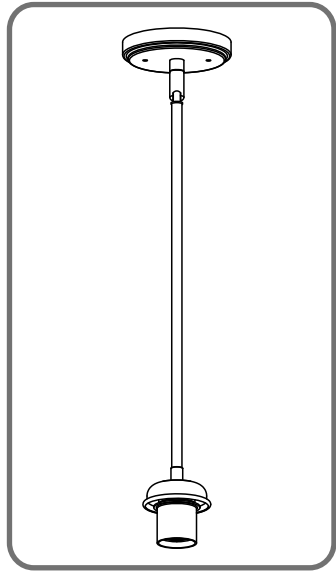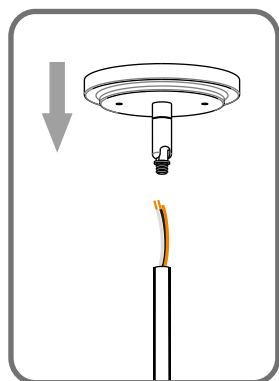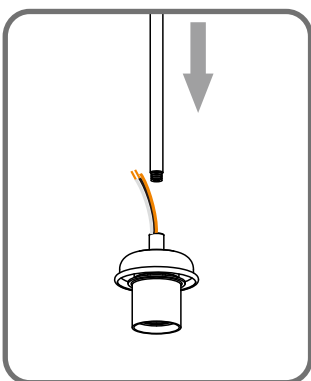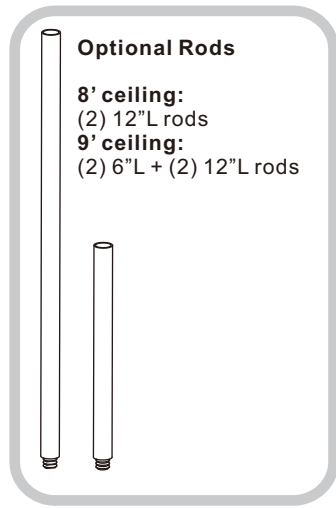

STEP 3

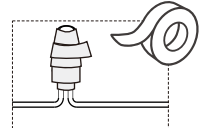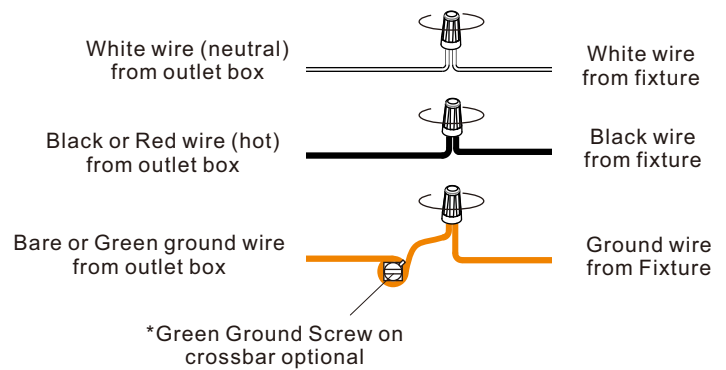

STEP 4

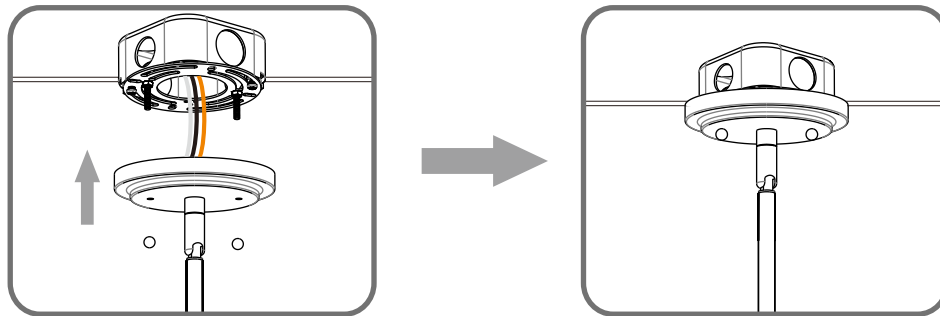

STEP 5

