


ASSEMBLY INSTRUCTIONS

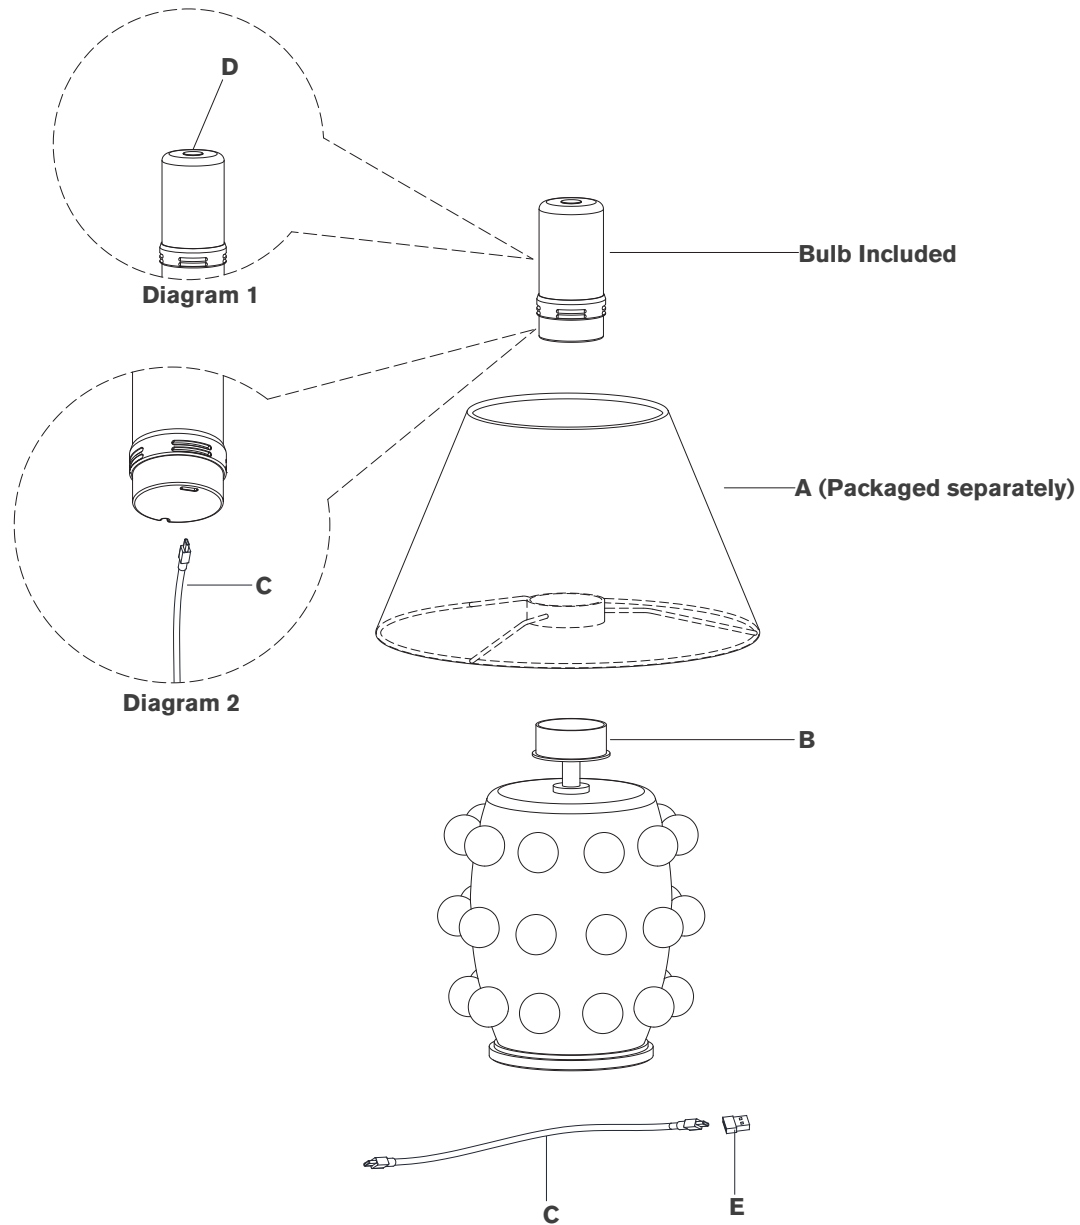

Linden 14" Cordless Accent Lamp

Item # KW3030

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place shade **(A)** onto top of socket base **(B)**.
3. Place LED light source into socket base **(B)**.
4. For best results fully charge battery before use.
5. Test the lamp.

Dimmer switch operation: Touch dimmer **(D)** to adjust between low, medium, high and off settings. See diagram 1.

Charging Instructions: Charge lamp using provided type C charging cord **(C)** and USB adapter **(E)**. See diagram 2.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.