


MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

SURI OUTDOOR 3-SEAT SOFA TAUPE

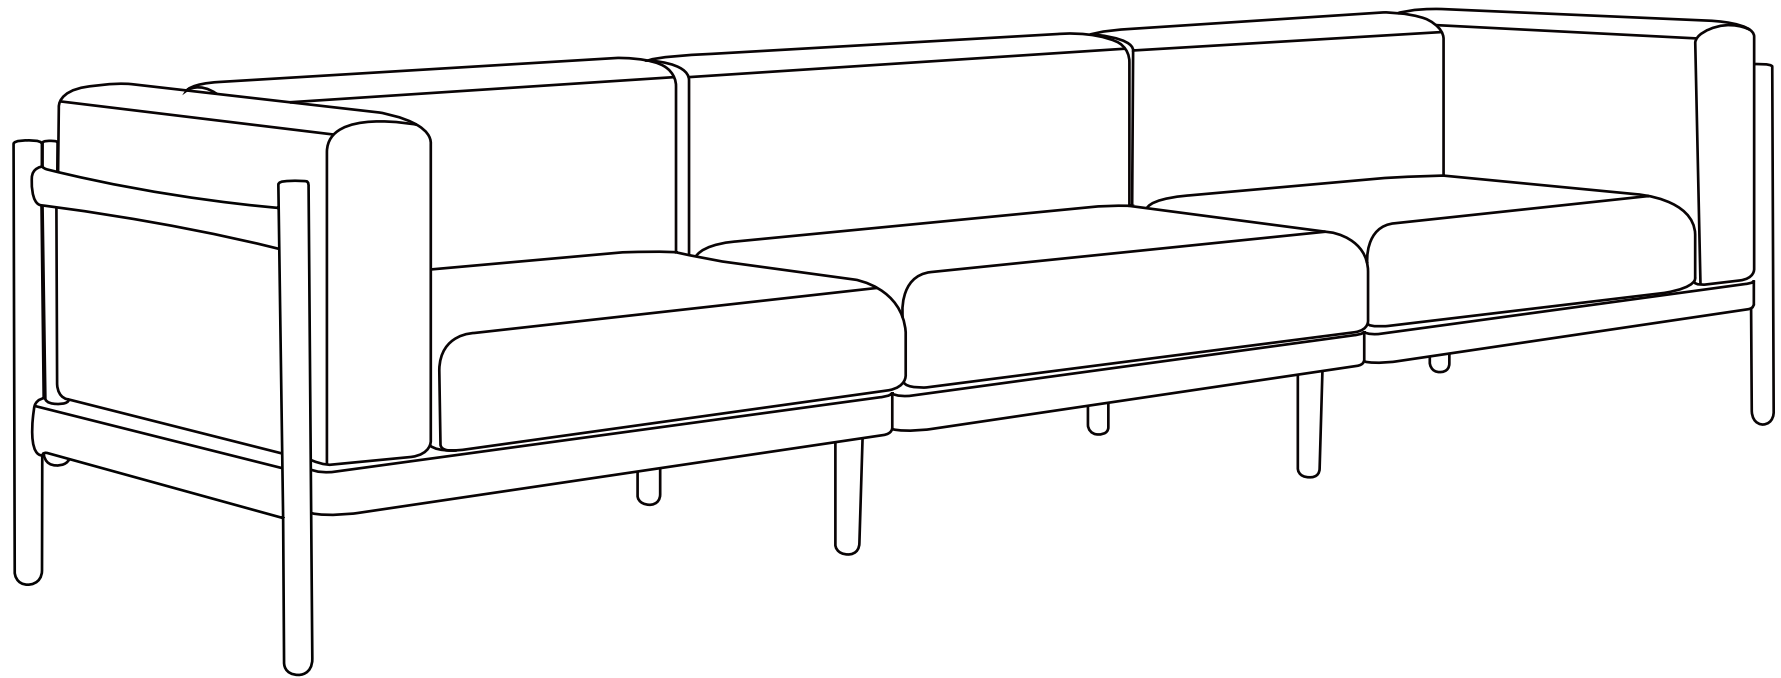








QX-1016-39











THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	SEAT		3
P2	BACK		3
P3	ARMREST		2
P4	CONNECTOR		2
P5	BACK CUSHION		2
P6	SEAT CUSHION		2
P7	ARMREST CUSHION		2
P8	BACK CUSHION		1
P9	SEAT CUSHION		1



HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	ALLEN KEY		1
H2	BOLT(6*40MM)		4
H3	BOLT(6*65MM)		34
H4	FLAT WASHER (6*14*1MM)		77
H5	NUT(M6)		38
H6	SPANNER(M6)		1
H7	STOPPLE(13MM)		2
H8	STOPPLE(18MM)		10


NOTES.

Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.


CAUTION: The item is heavy, assembly should be performed by two people.

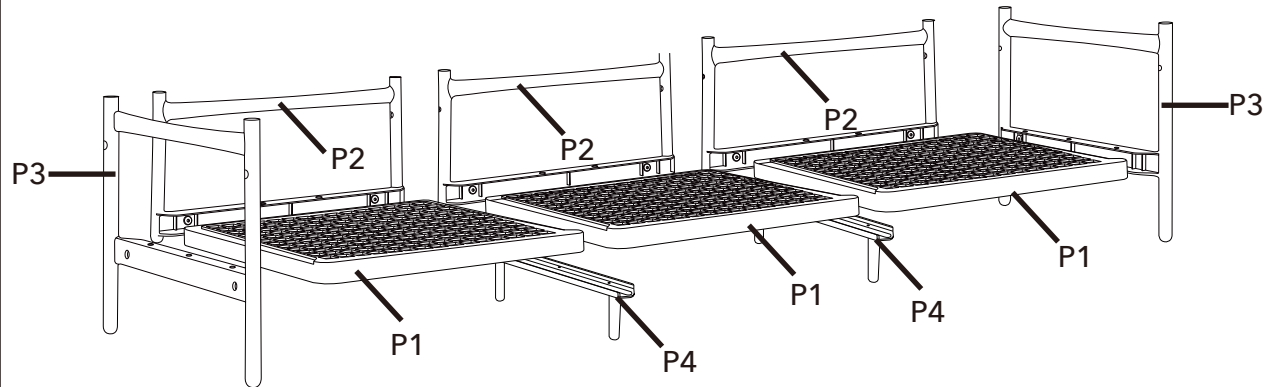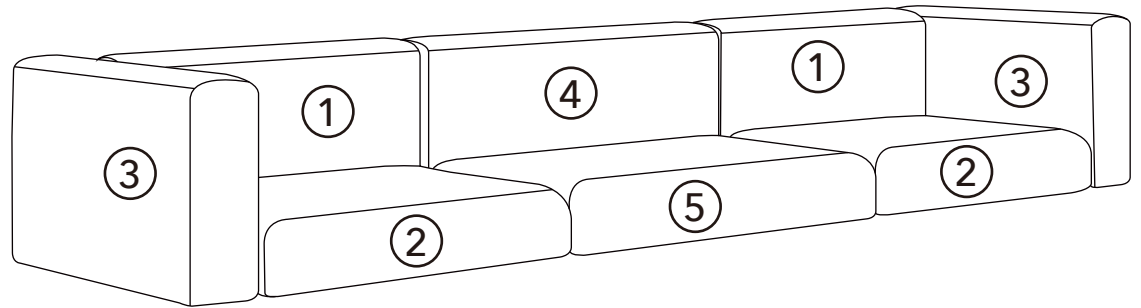


STEP 1.

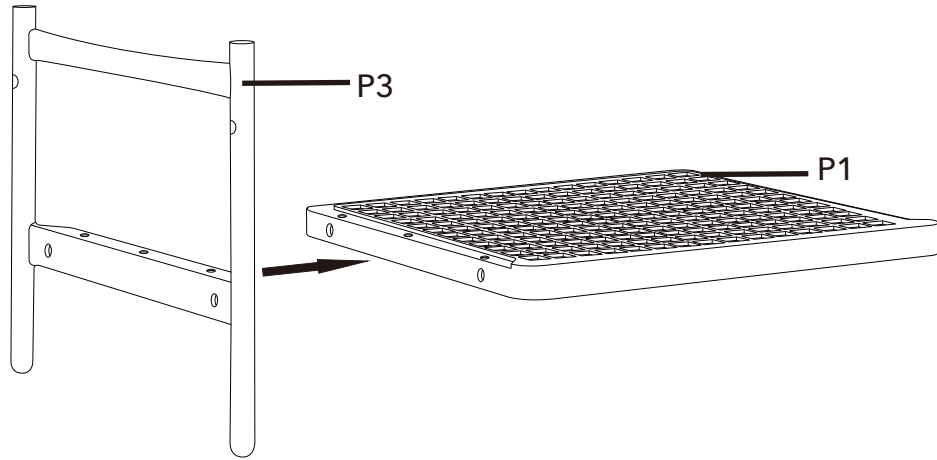


STEP 2.

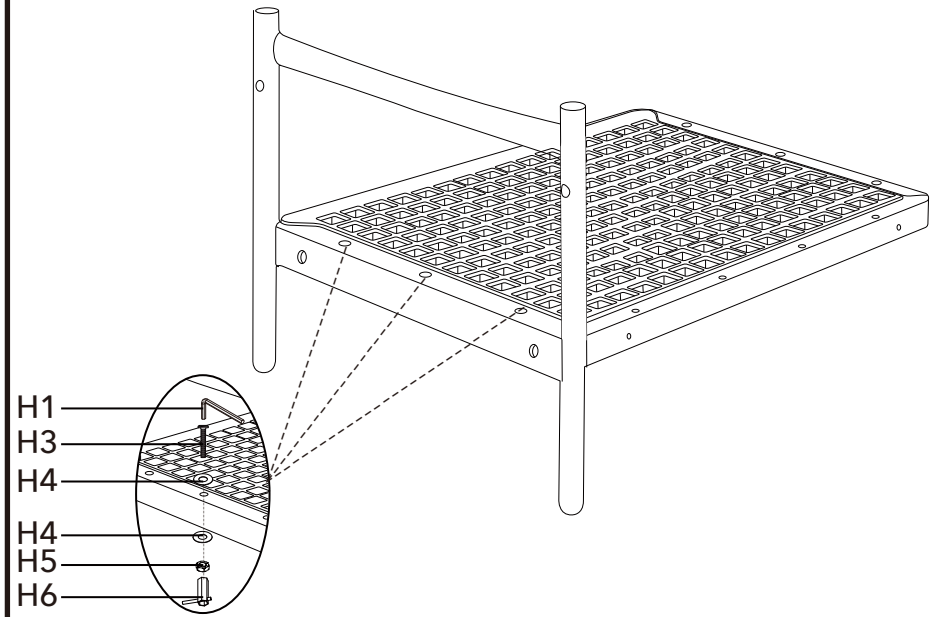


STEP 3.

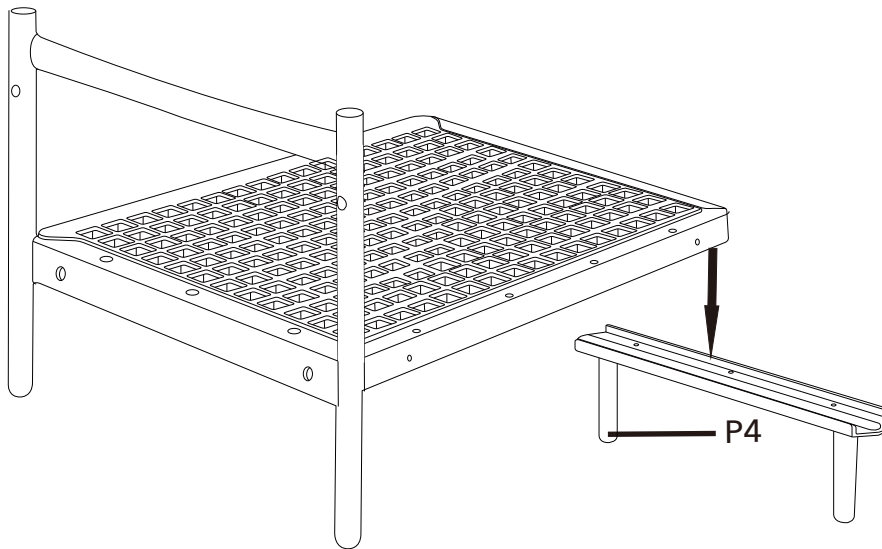


STEP 4.

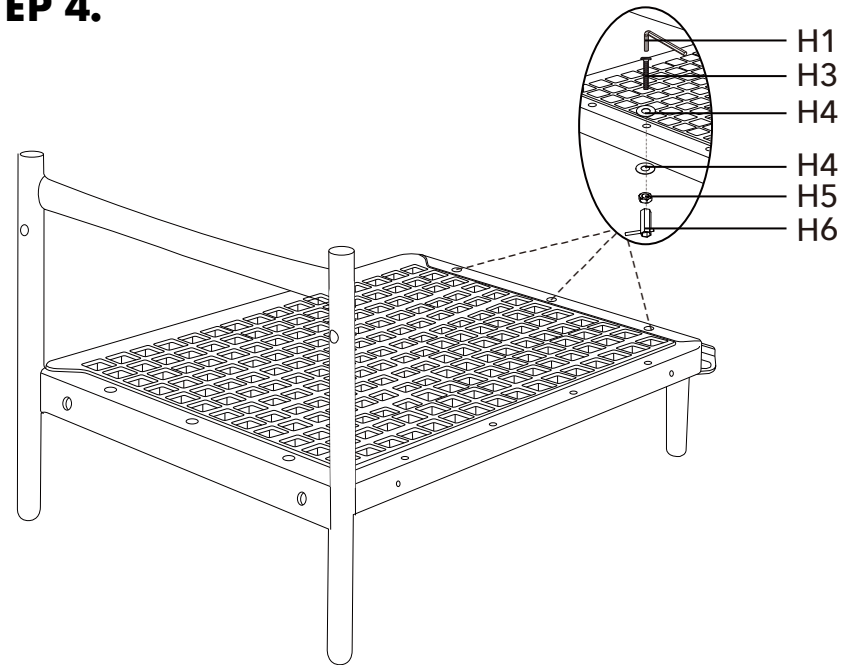


STEP 5.

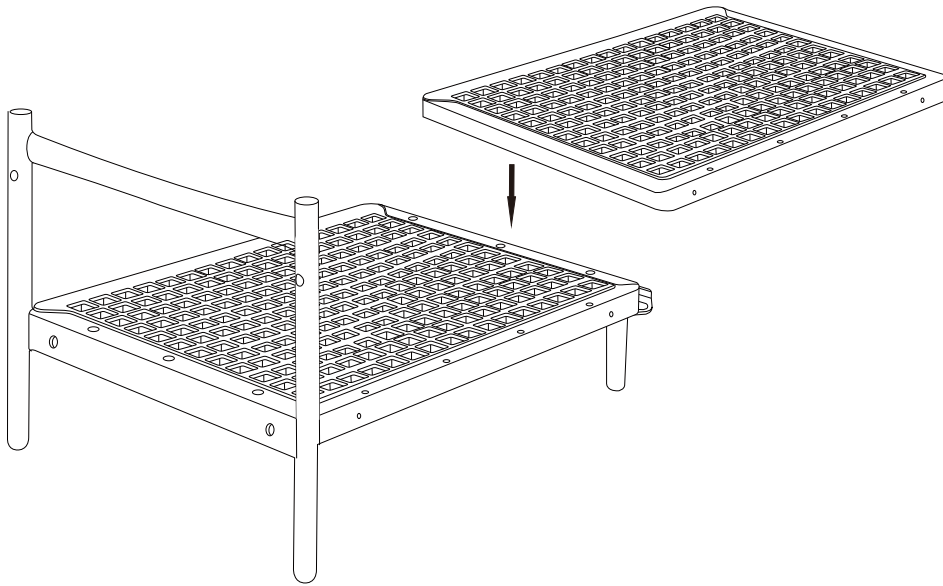


STEP 6.

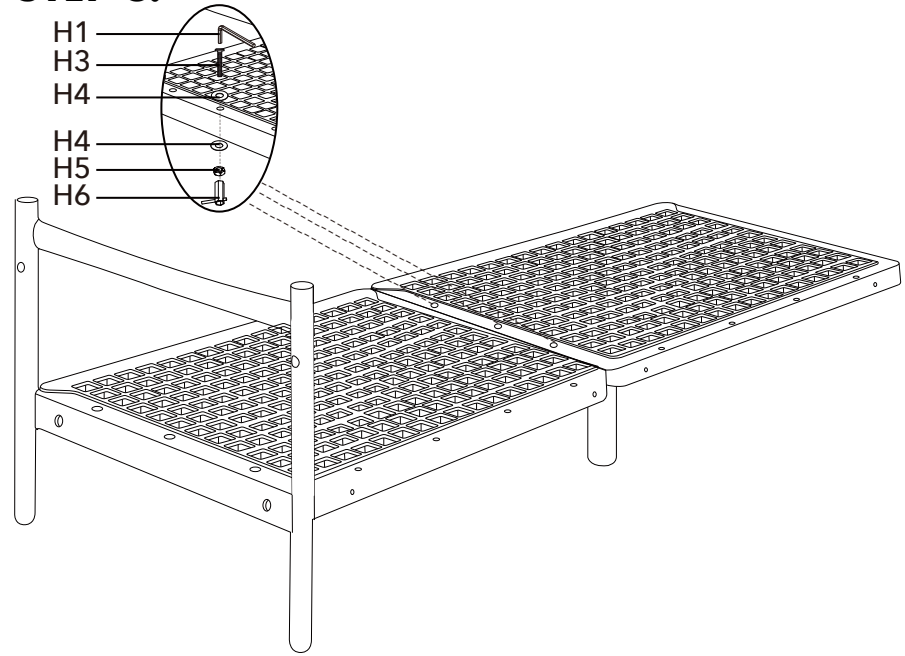


STEP 7.

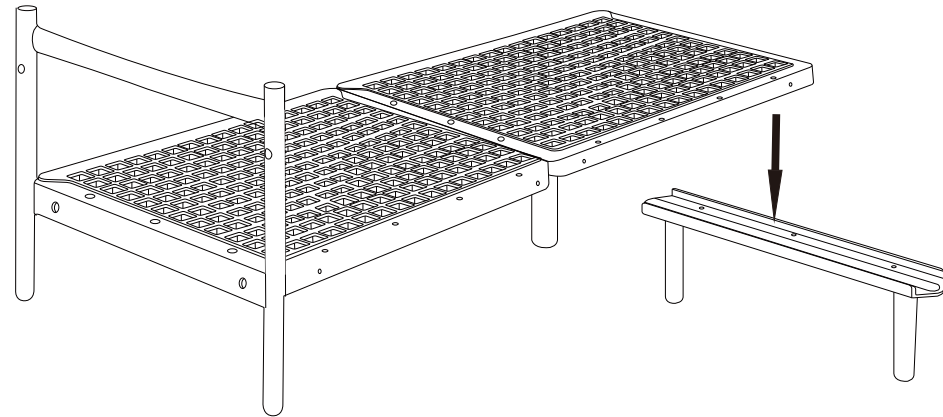


STEP 8.

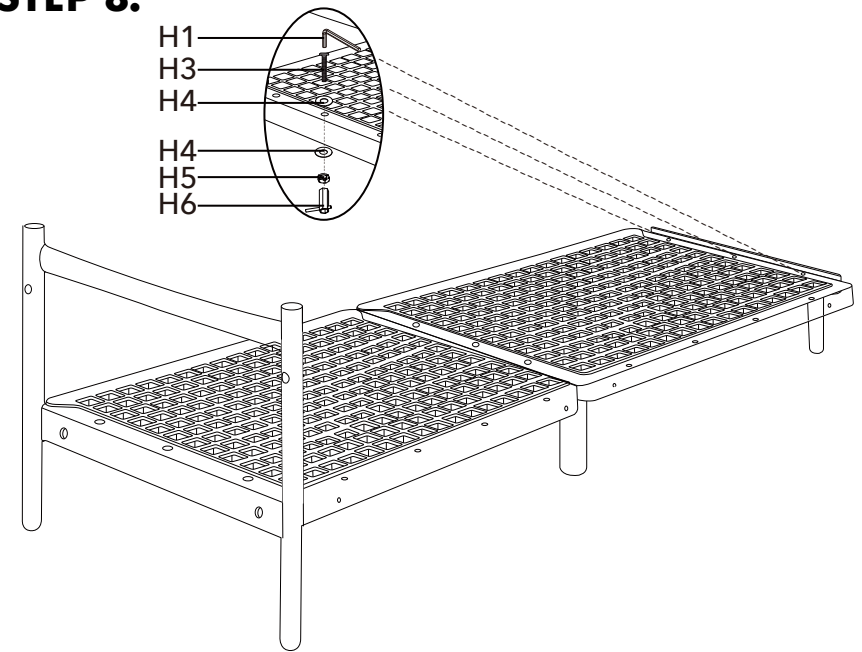


STEP 9.

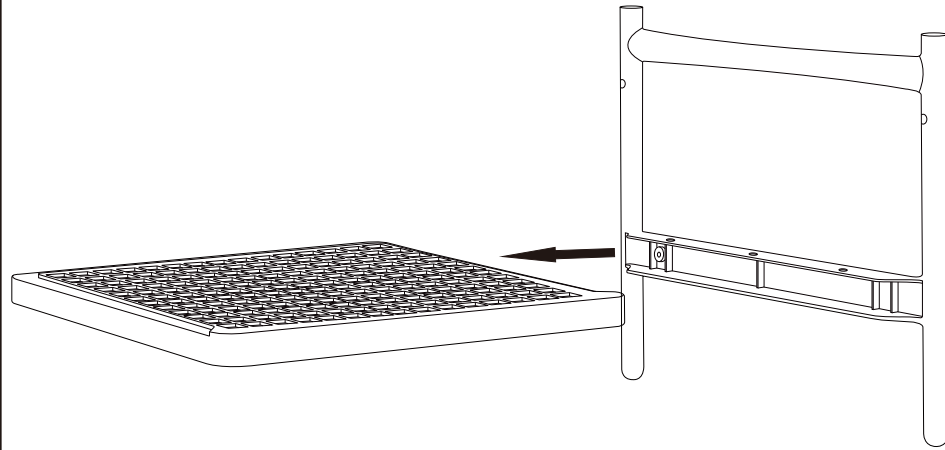


STEP 10 .

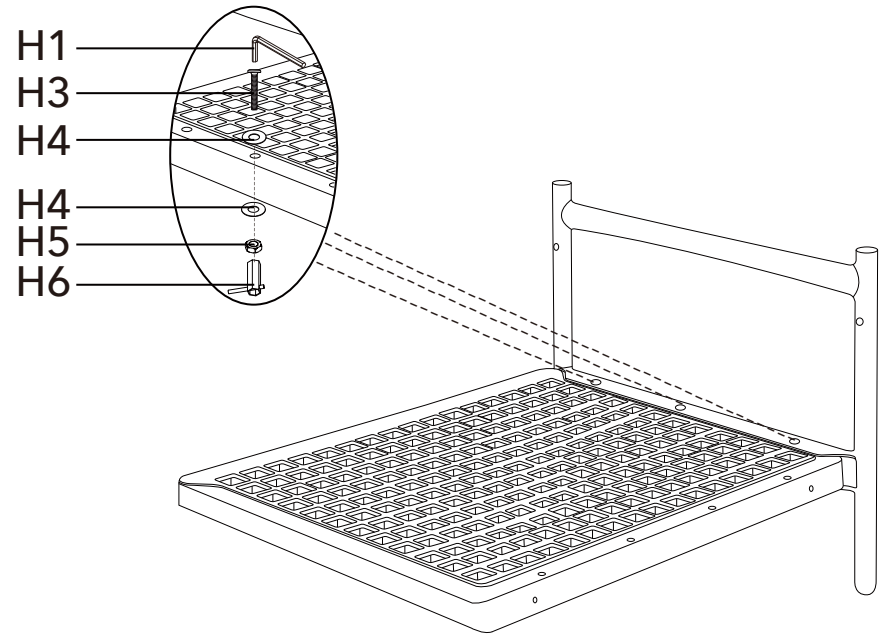


STEP 11.

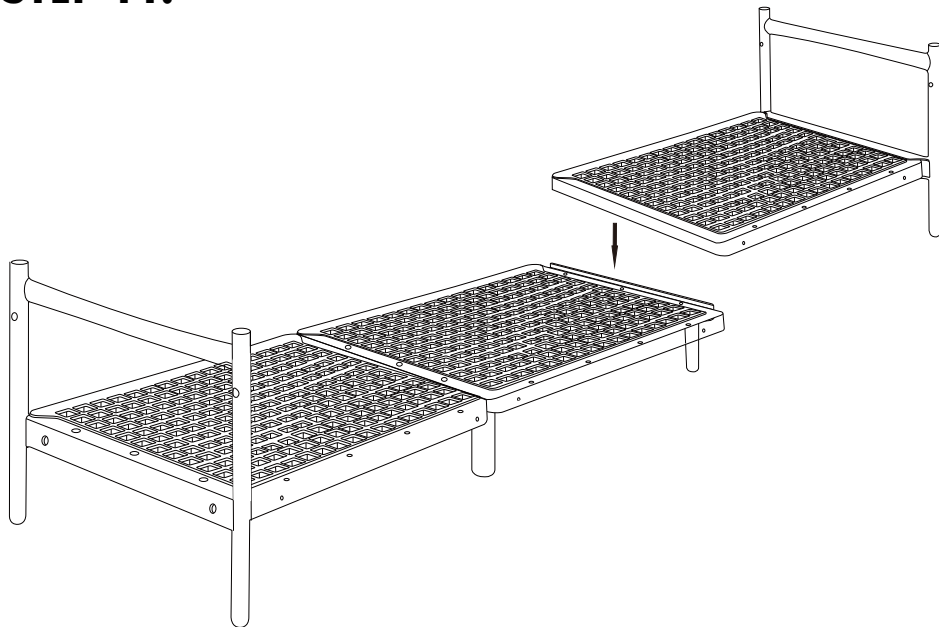


STEP 12.

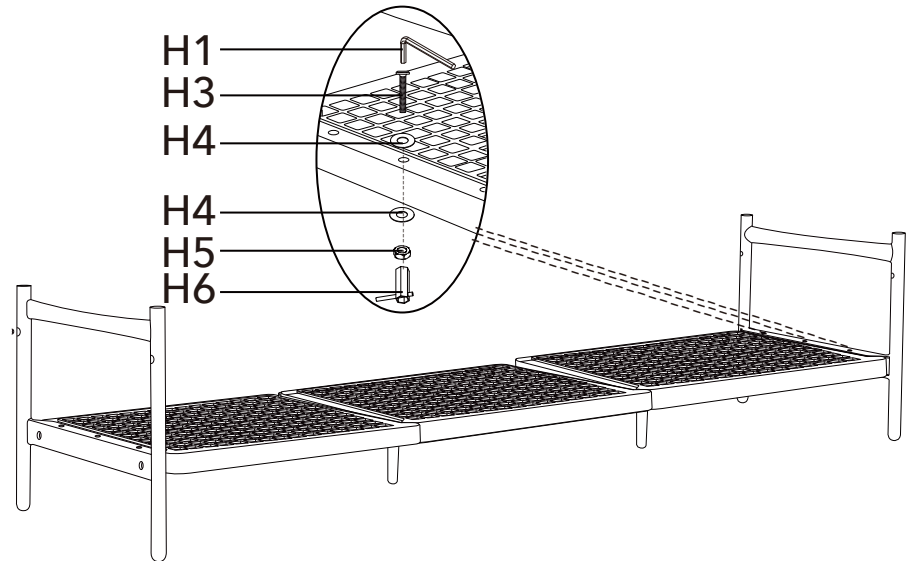


STEP 13.

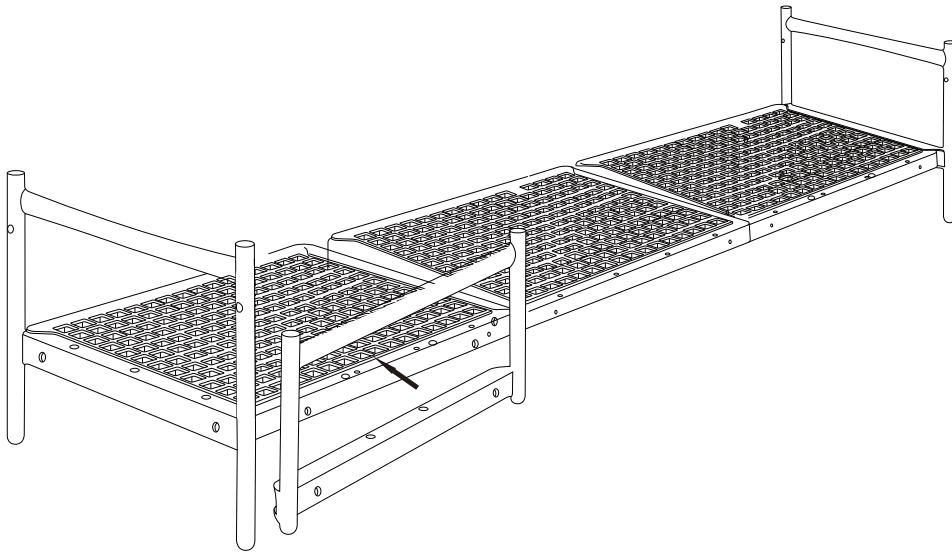


STEP 14 .

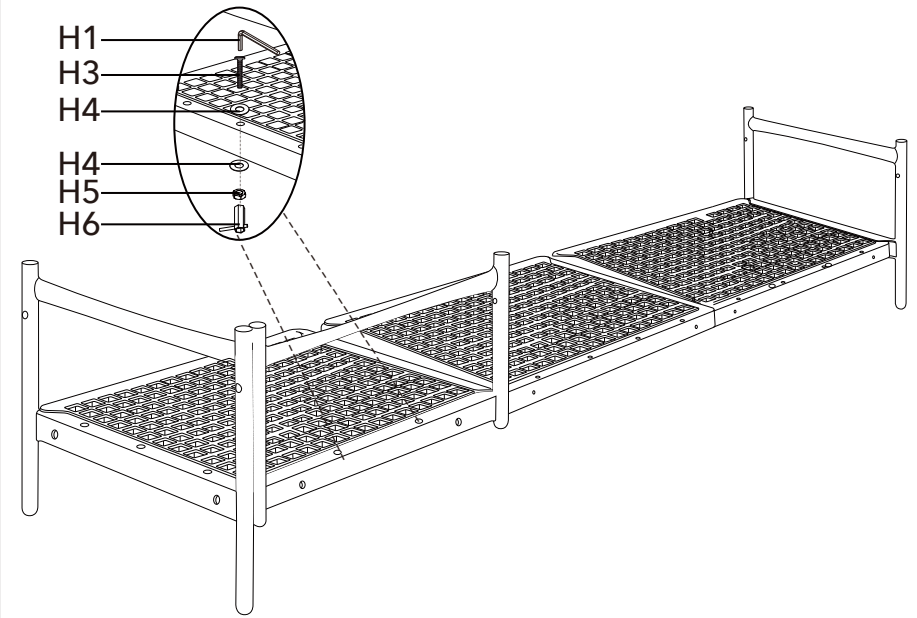


STEP 15.

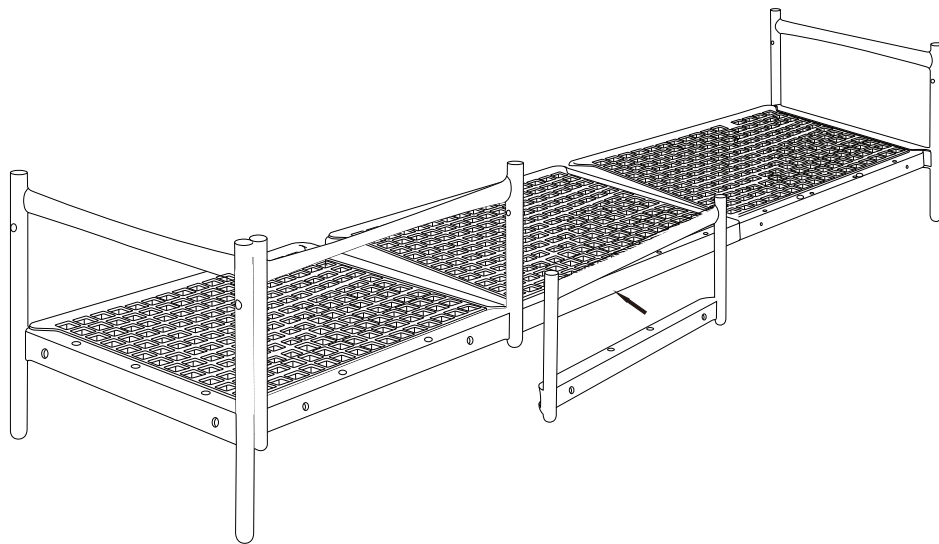


STEP 16.

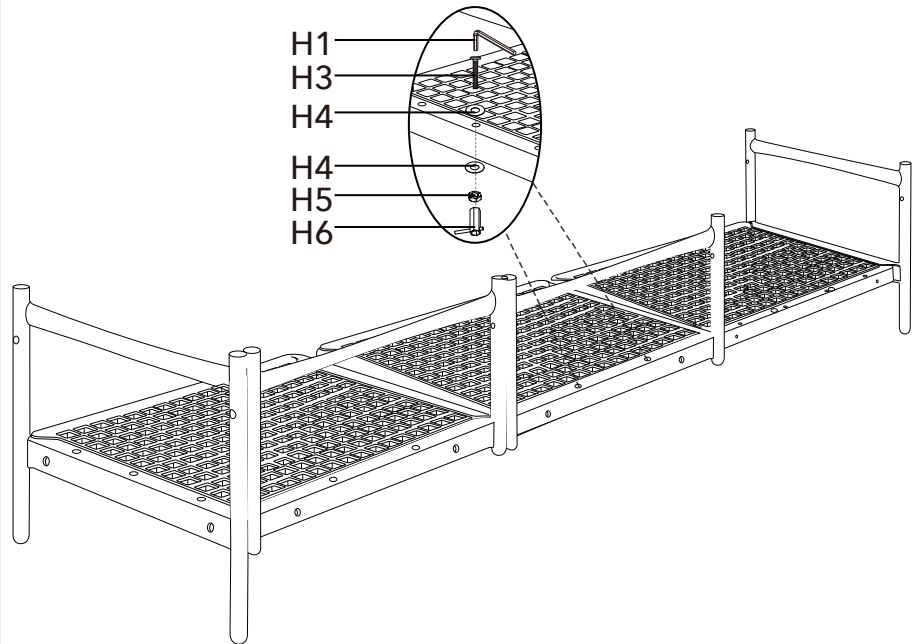


STEP 17.

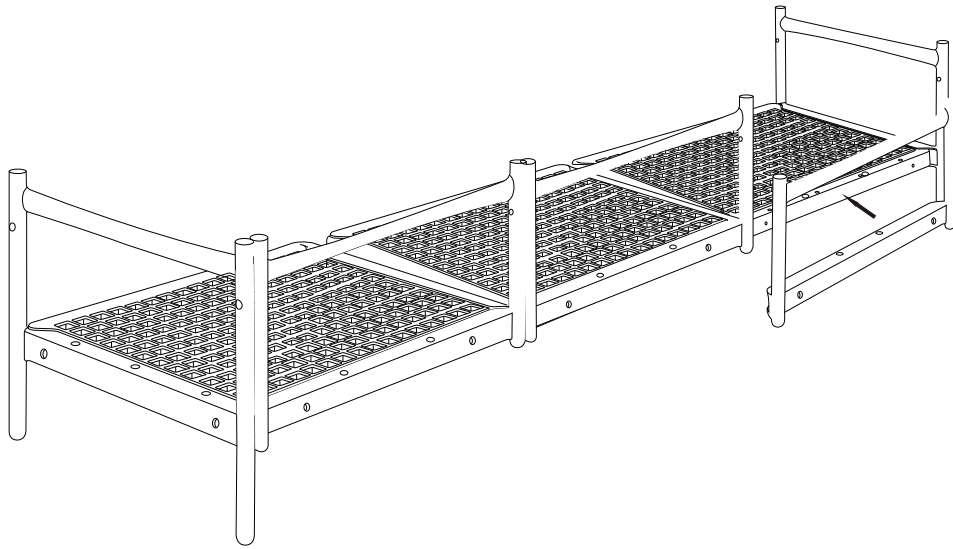


STEP 18 .

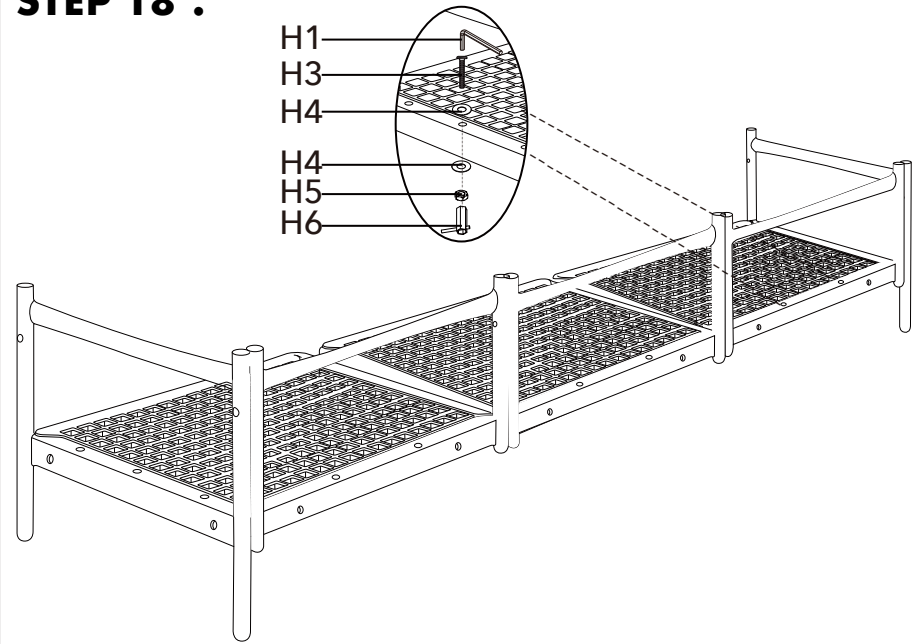


STEP 19.

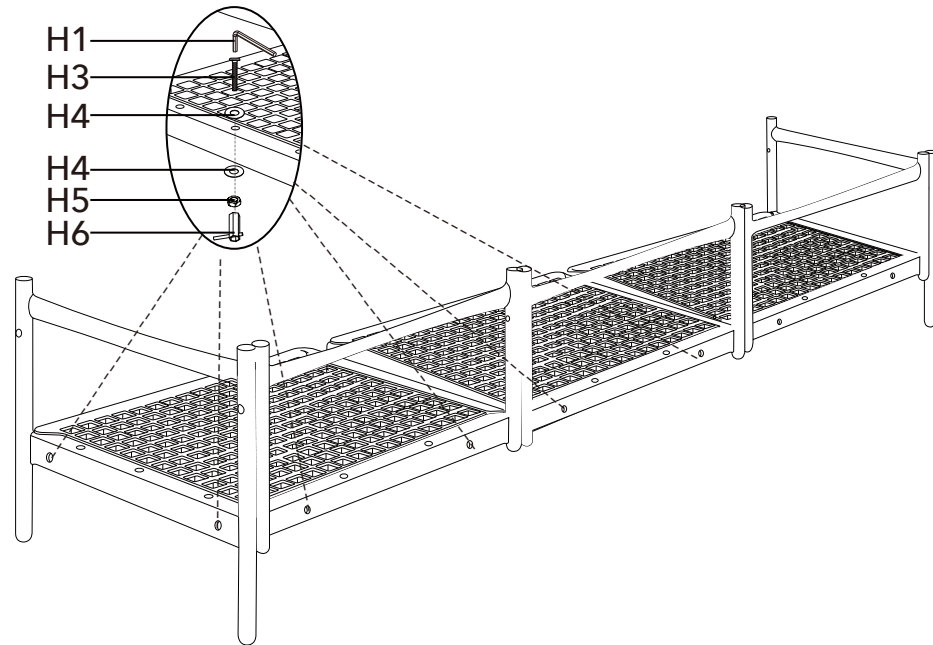





STEP 20.

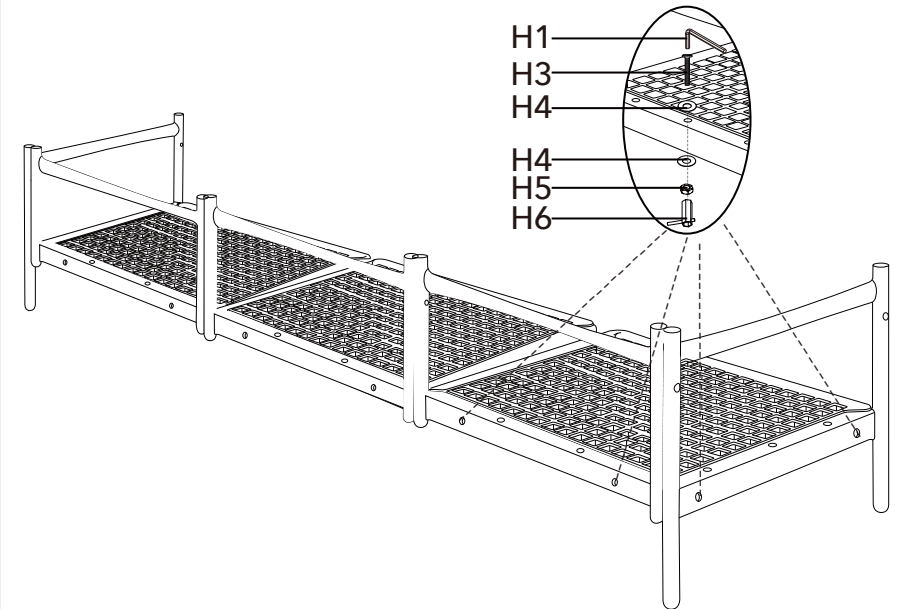

STEP 21.

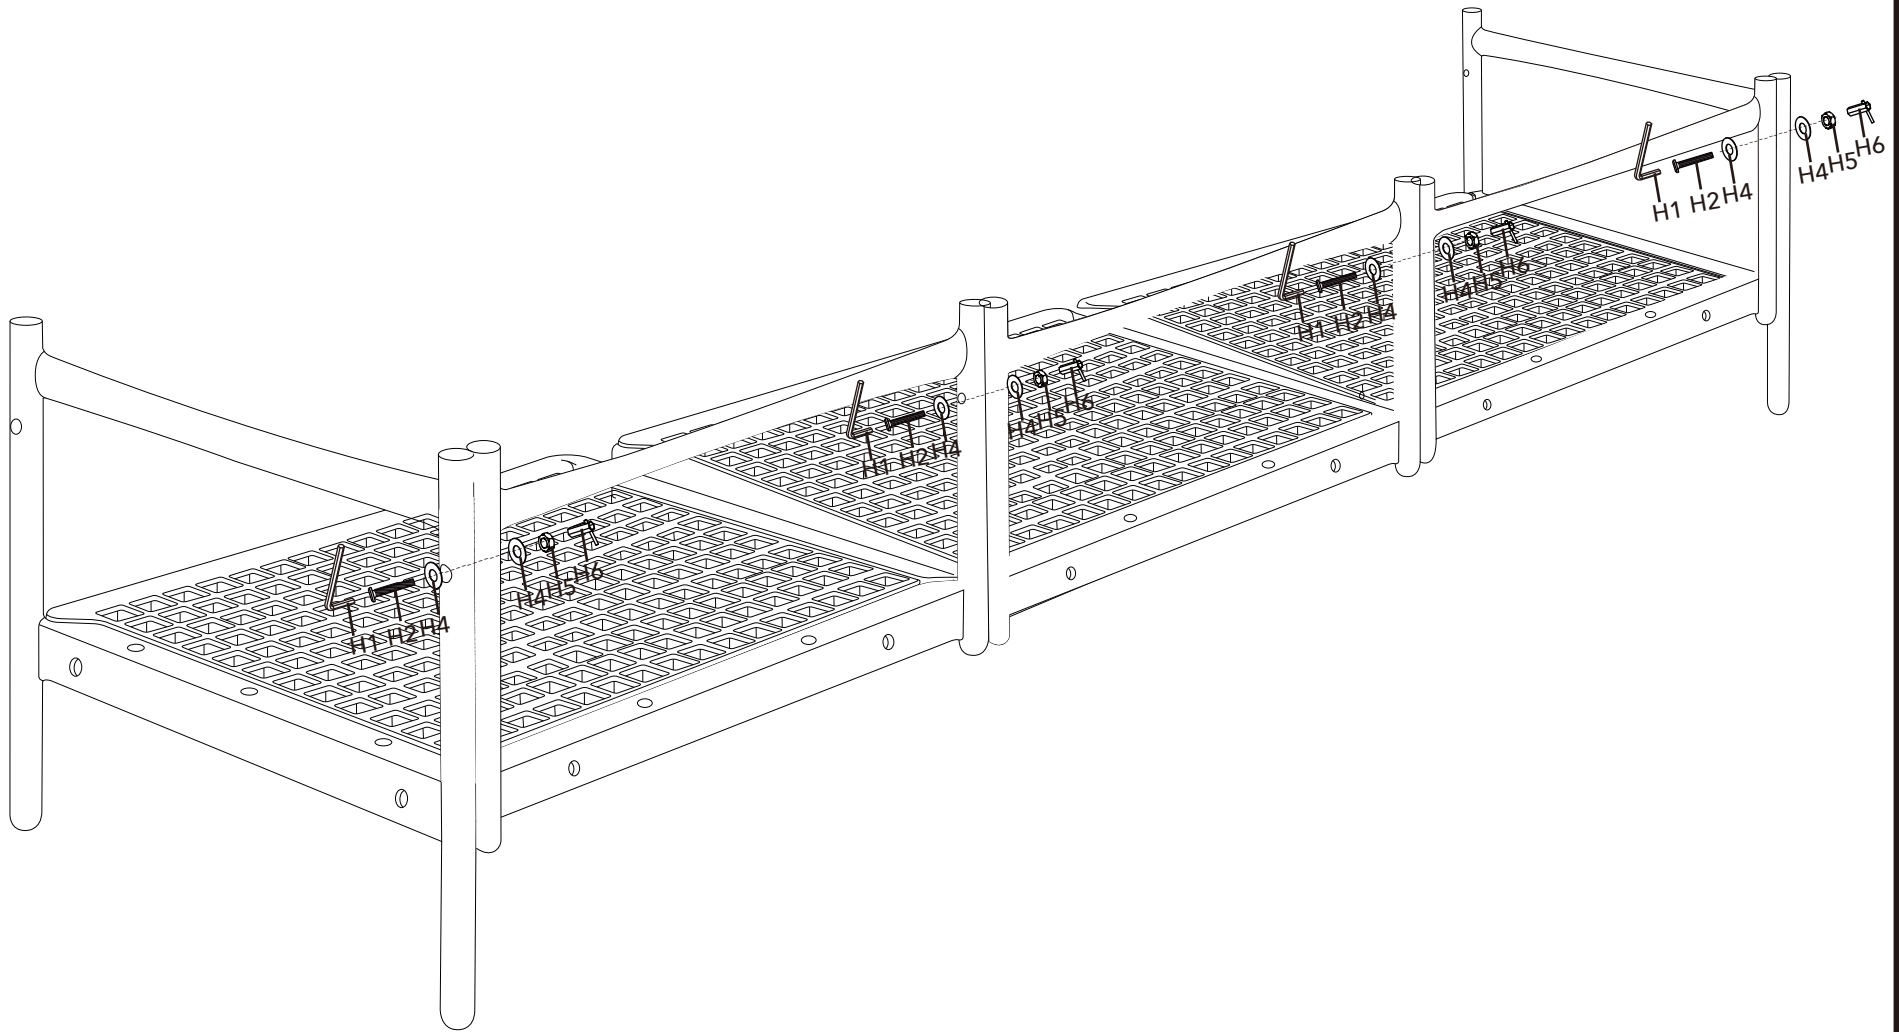

STEP 22.

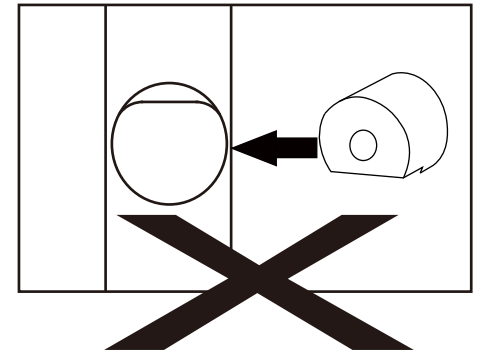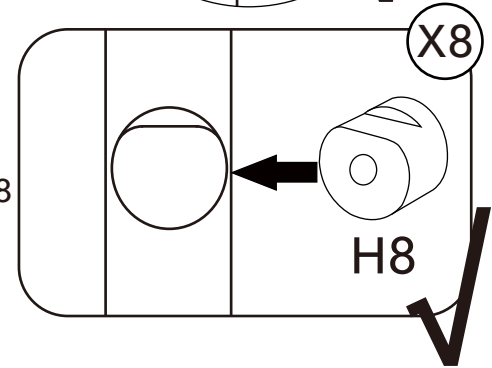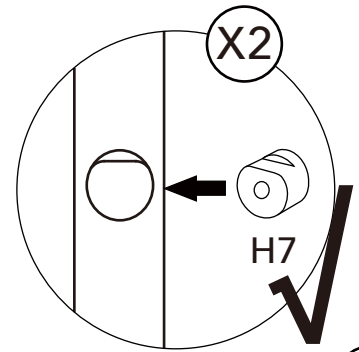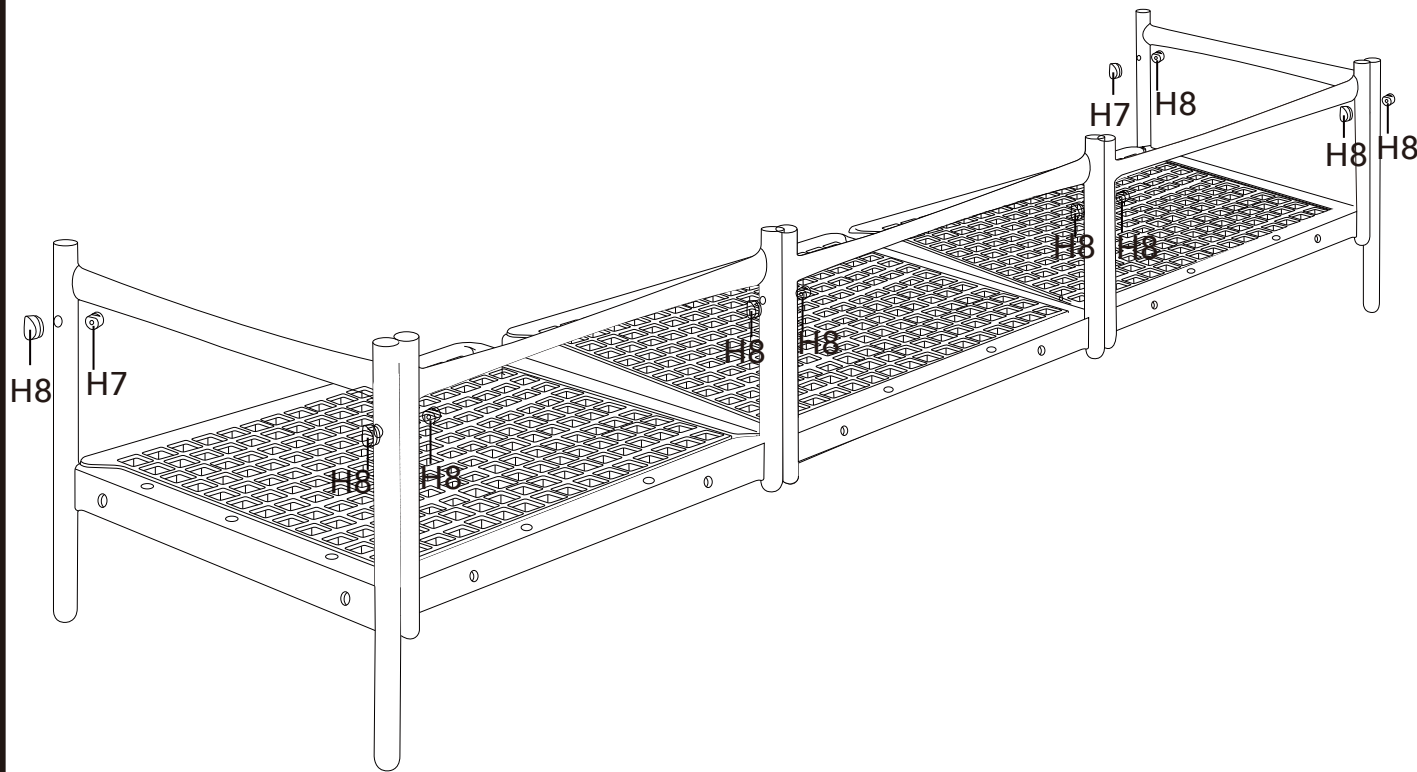

STEP 23.

