


ASSEMBLY INSTRUCTIONS FOR BENSON FLOOR LAMP

3835-01 1.0

Model # 3835-01

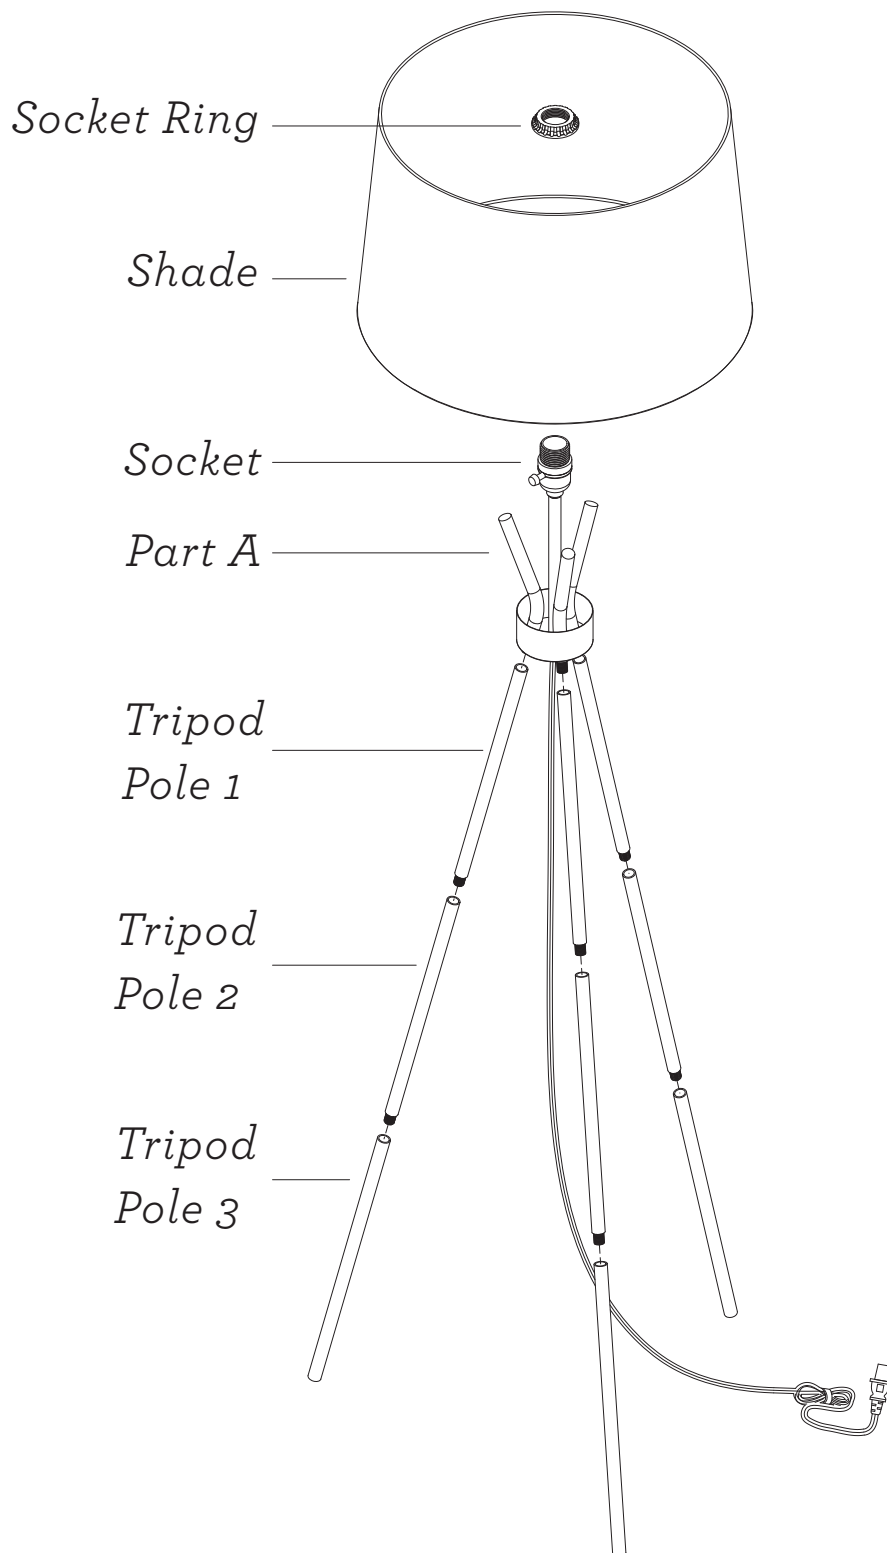

1. Remove all parts and lay on a flat surface.
2. Screw tripod pole 1 clockwise into part A to tighten.
3. Repeat previous step twice. Screw tripod pole 2 clockwise into the assembled tripod pole 1 to tighten. Screw tripod pole 3 clockwise into the assembled tripod pole 2 to tighten.
4. Set shade on socket and tighten clockwise with socket ring to secure shade before screwing in light bulb.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: (1) 3-way 150 watt incandescent or 42 watt CFL equivalent. (not included)