

# access

L I G H T I N G

## INSTALLATION INSTRUCTIONS

### IMPORTANT

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.



**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

### GENERAL INFORMATION

All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard 4" x 2 1/2" metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

### STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

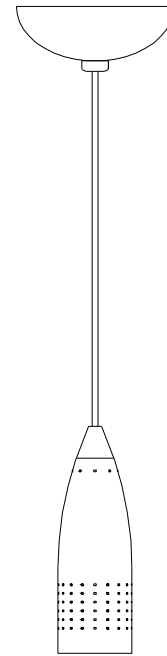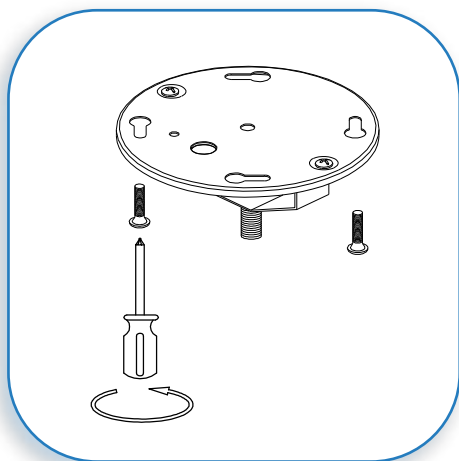

### COLLECTION

ODYSSEY

### APPLICATION

Pendant Fixture

### MODEL NO.

52001

### WHAT WE PROVIDE

- Fixture Assembly
- Mounting Hardware
- 10" Wire with lamp holder
- 1x35W MR16 bulb

### WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified by Electrical Code

# 1

### MOUNT CROSSBAR


If there is an existing fixture remove it. Expose the supply wires from the J-box. Mount the supplied crossbar to the J-Box with the supplied screws.



2

**MAKE WIRE CONNECTION WITH TRANSFORMER**


Gently pull the supply wires through the hole in the crossbar plate. Connect the black supply wire to the black transformer input wire. Secure with the supplied wire nuts. Connect the white supply wires to the white transformer input wire. Secure with the supplied wire nuts. Either wrap the green wire around one of the protruding screws or connect it to the supply ground. Secure all wire with electrical tape (not supplied). Tuck all wires carefully into the J-Box.

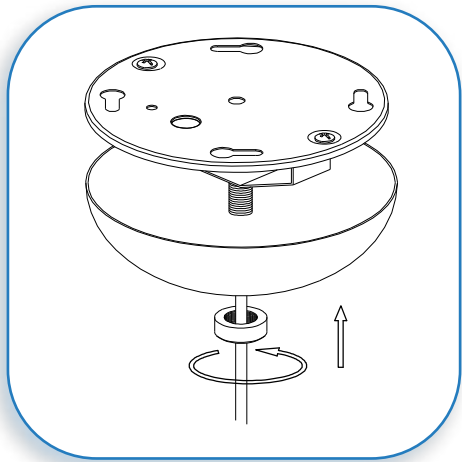

3

**MOUNT THE CANOPY**


Fit the fixture canopy up to the crossbar. Secure with the supplied screw nut.

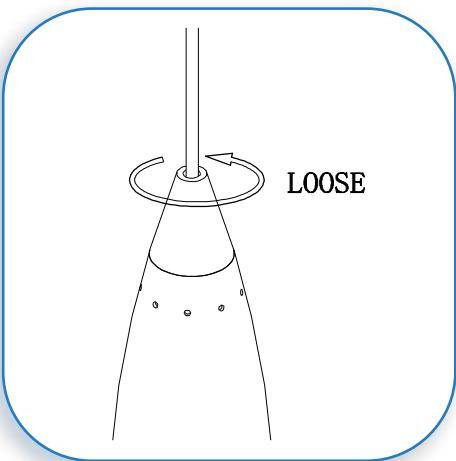

4

**LOOSEN THE METAL SHADE CAP**

Loose the metal shade cap and slide up.

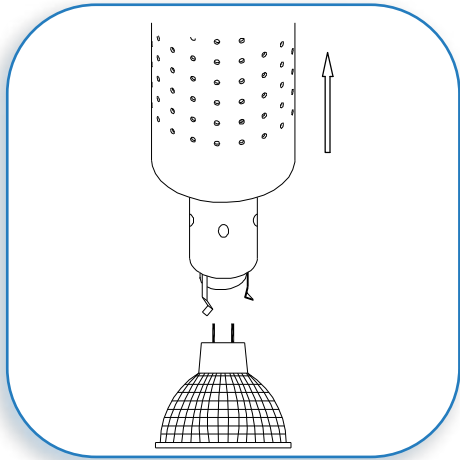

5


**SLIDE THE METAL SHADE UP AND INSERT THE BULB**

Slide the metal shade up to reveal the socket assembly.

Insert the bulb.

MAXIMUM WATTAGE 35W TYPE MR16.


DO NOT EXCEED THE RECOMMENDED WATTAGE AS STATED ON THE WARNING LABEL AND INSTRUCTION SHEETS.

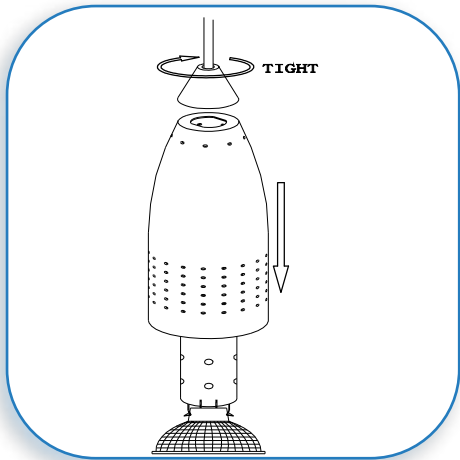

6

**SLIDE THE METAL SHADE DOWN**

Once the bulb is installed, slide the metal shade back into place and tighten metal cap

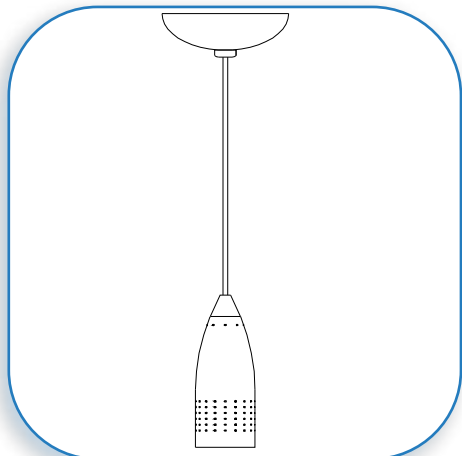

7

**RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS FIXTURE**

**CAUTION**

Please ensure that the fitting is cool and switched off before replacing the bulb. DO NOT use bulbs that exceed the maximum wattage, stated on caution label.