

## TP4095 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

## **CAUTION**

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

## **GENERAL**

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.


Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## ASSEMBLY AND INSTALLATION

- 1. Secure the mounting bar(9) with box screws(6) to the outlet box(1).
- 2. Pull out the outlet wire and ground wire from the outlet box. Make wire connections with Wire Connector(2)
- --Black wire from light to Black wire (3) from power source.
- --White wire from light to White wire(4) from power source.
- --Loop the ground wire(5) to mounting bar(9) with a ground screw(6).
- 3. Attach the canopy(11) against the outlet box(1). Secure with the ball nut(12) and mounting screw(7).
- 4. Loosen the ball nut(13), and insert the bulb (15) into socket(14).
- 5. Put the bulb into the shade(16) and tighten with the ball nut.

DO NOT USE BARE HANDS TO TOUCH THE BULB.

INSTALLATION IS NOW COMPLETE

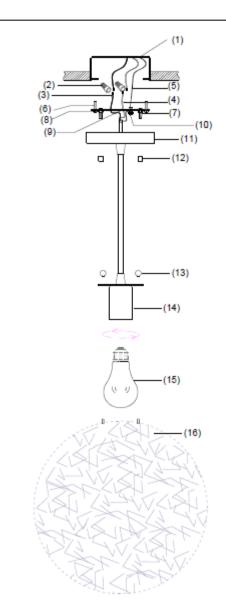

- 1. OUTLET BOX
- 2. WIRE CONNECTOR
- 3. BLACK WIRE
- 4. WHITE WIRE
- 5. GROUND WIRE
- 6. BOX SCREW
- 7. MOUNTING SCREW
- 8. HEX NUT
- 9. MOUNTING BAR
- 10. GROUND SCREW
- 11. CANOPY
- 12. BALL NUT
- 13. BALL NUT
- 14. SOCKET
- 15. BULB
- 16. ENMESHED WIRE SHADE