


MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

BENT 4 DOOR SIDEBORD SMOKED

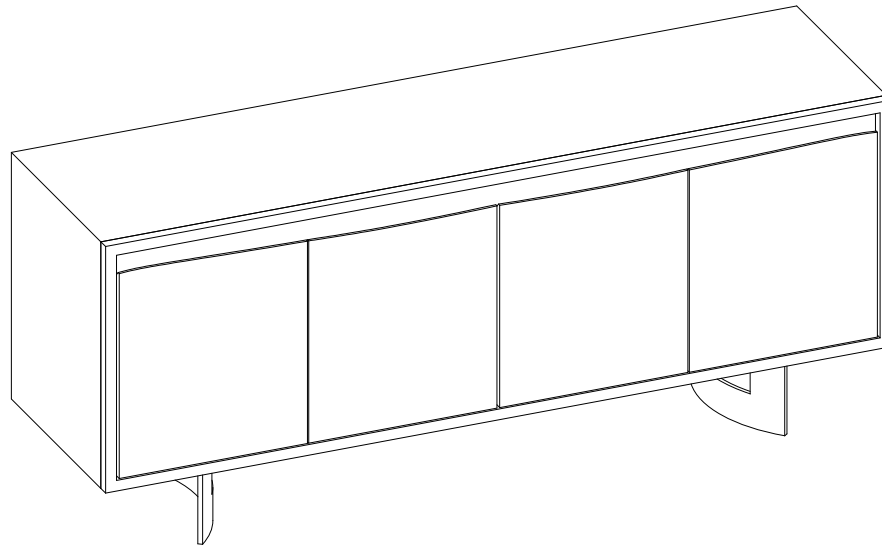



VE-1108-03






THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

PARTS LIST

NO.	DESCRIPTION	IMAGE	Q'TY
P1	STRUCTURE		1
P2	METAL LEG		2
P3	SHELF		4
P4	SHELF PIN		16

HARDWARES LIST


NO.	DESCRIPTION	IMAGE	Q'TY
H1	ALLEN BOLT		6
H2	ALLEN KEY		1
H3	WASHER		6

NOTES.


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.


STEP 1.

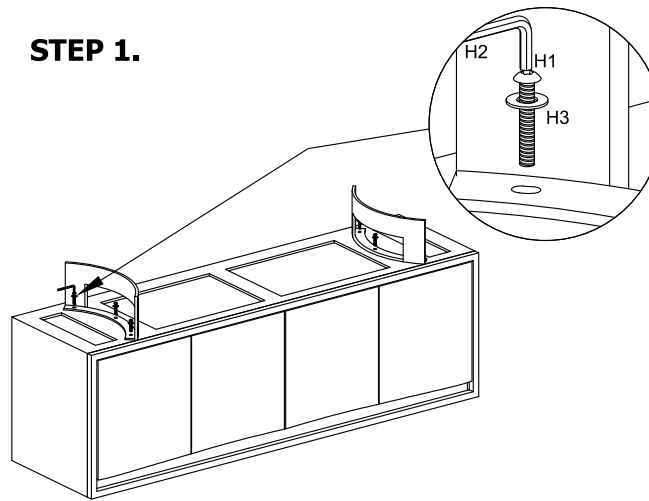


STEP 2.

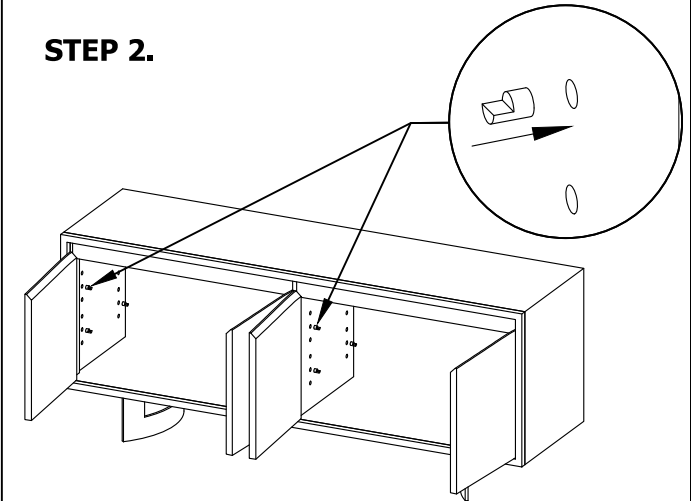


STEP 3.

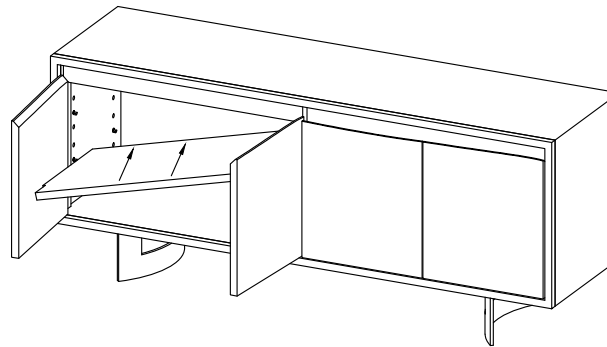

STEP 4.

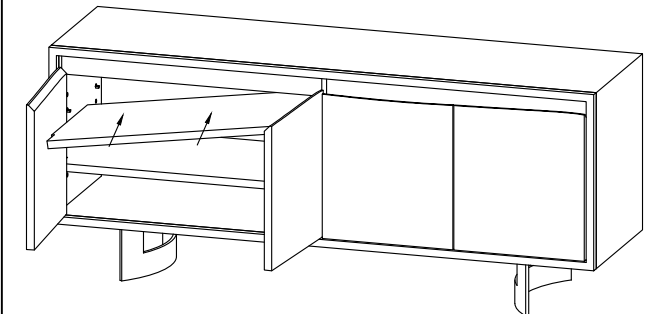

STEP 5.

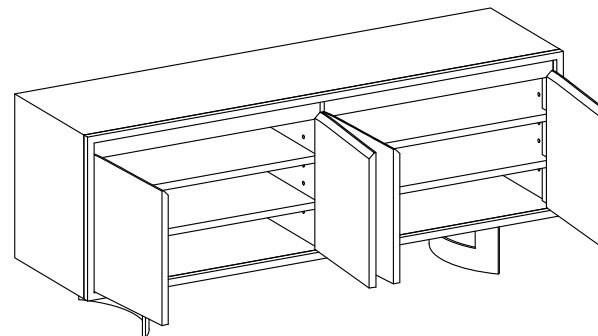

STEP 6.

