For Style 1214P22 Assembly Instruction Sheet #IS-1214P22

Tools Required: Flathead sowodiver, Philips sowodiver, pliens, who solipers, who stippers, electrical laps, safety glasses.

April Secured: (3) GB Builde MAX (GMV (flot include).

Estimated Assessibly These: (4-20 minutes

"expanded to tentify and inspect all parts below beginning installation. Check package content list and diagrams below to be sure all parts are


resent. If any parts are missing or damaged, do not alternat to assemble, treats, or operate the focus. Context customer service for applicament.


△Warnings and Cautions

Tum off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricien if in doubt. We strongly recommend that a licensed, profes ee instructions are provided for your safety. It is very important you read them completely before installing the ficture, strongly recommend that a licensed, professional electricism perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure butte are given sufficient time to cool before removal


Package Contents

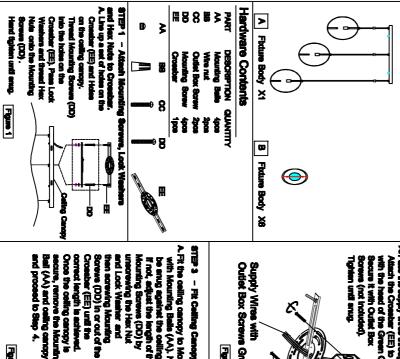

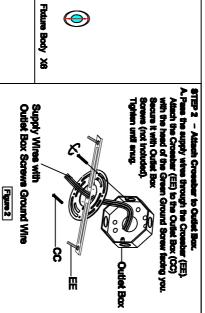


A-Fit the ceiling canopy to Mounting Screws (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be arug against the ceiling and the Mounting Balls (AA). STEP 3 — Fit Calling Canopy to Crossber Assembly f not, adjust the length of the




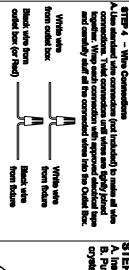





A Carefully task all vires into the outlet box and position the orilling amony of the Foture Body (A) over the outlet box. Align the holes in the orilling campy with the Mounting Storage (DD). Secure with Mounting Balls (AA) and hand fighten until enug. STEP 5 — Install Celling Canopy to Celling Figure 4

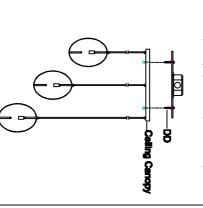

STEP 6 - Install Crystal and Bulbs.

A install bulbs into sockets and push snug into place.

B. Put the Crystal to the Fbdure 'S Body ,The freeted crystal faces the light source.

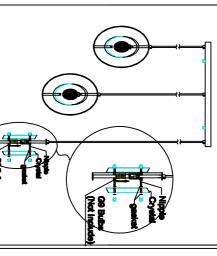


Figure 3

Figure 5

Figure 6