


# ASSEMBLY INSTRUCTIONS

ITEM NO: LA-60001W2L-1

THE LAMP HAVE TWO OF MEANS TO ASSEMBLE: THIS IS FIXTURE.

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. CUT OFF THE WIRE AT THE LENGTH OF 6"-8" (V),(THE LENGTH REFER TO THE DISTANCE FROM LAMP BODY TO THE END OF WIRE).AND PEEL 14MM, THEN DRAW BACK INTO THE BASE AND BECAME POWER CORD (K).

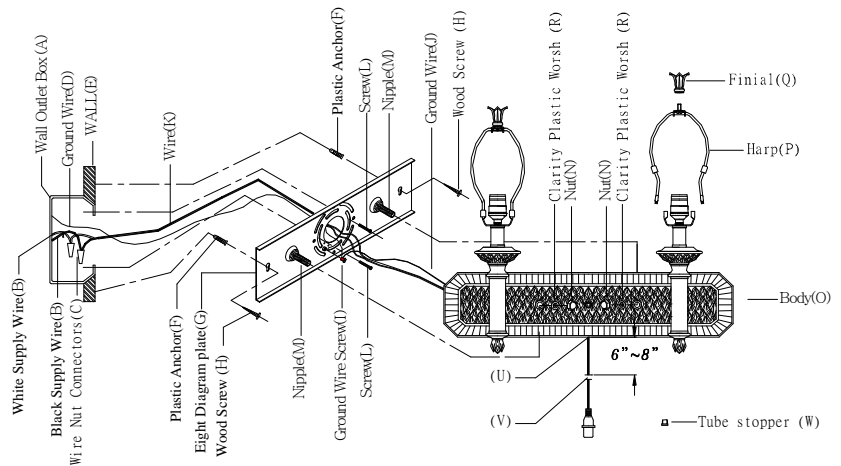

3. PLACE THE TUBE STOPPER (W) INTO THE BASE HOLE (U).
4. DRILL TWO LEVEL HOLE TO THE GROUND AND PLACE THE PLASTIC ANCHOR (F) INTO IT.THEN SCREW THE EIGHT DIAGRAM PLATE (G) ONTO THE WALL WITH THE SCREW (H) AND (L).
5. CONNECT THE POWER CORD (B) AND (K) WITH THE WIRE NUT CONNECTORS (C).THEN SCREW THE GROUD WIRE (D) AND (J) WITH THE GROUND WIRE SCREW (I).
6. SCREW THE LAMP BODY (O) ONTO THE WALL THROUGH THE SCREW (M) WITH THE CLARITY PLASTIC WASHER (R) AND THE NUT (N).
7. INSERT THE HARP (P) INTO THE SADDLE OF THE LAMP BODY (O), THEN PLACE THE SHADE (NOT INCLUDED) ONTO THE HARP (P), SCREW THE FINIAL (Q) TO SECURE THE SHADE.
8. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

**WATTAGE:** 2\*60W TYPE A (EX BULB)

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACTA QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.


**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

# ASSEMBLY INSTRUCTIONS

## ITEM NO: LA-60001W2L-1

THE LAMP HAVE TWO OF MEANS TO ASSEMBLE: THIS IS PORTABLE.

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. DRILL FOUR LEVEL HOLES TO THE GROUND AND PLACE THE PLASTIC ANCHOR (A) INTO IT.
3. SCREW THE EIGHT DIAGRAM PLATE (C) ONTO THE WALL WITH WOOD SCREW (B).
3. PLACE THE LAMP BODY (G) INTO THE EIGHT DIAGRAM PLATE (C) THROUGH THE NIPPLE (D) WITH NUT (D) AND CLARITY PLASTIC WASHER (E).
5. INSERT THE HARP (H) INTO THE SADDLE OF THE LAMP BODY (G).
6. PUT THE SHADE (NOT INCLUDED) ONTO THE HARP (H) THEN SCREW IT WITH FINIAL (I).
7. PLACE THE WIRE COVER (L) ALONG THE WIRE, THEN DRILL FOUR HOLES AND PLACE PLASTIC ANCHOR (J) INTO IT.
8. FIX THE WIRE COVER (L) INTO THE WALL WITH WOOD SCREW (K), THEN PUT THE WIRE (O) STRAIGHT IN THE WIRE COVER (L).
9. PLACE THE UPPER WIRE COVER (M) ONTO THE BOTTOM WIRE COVER (L) TO RIGHT WAY.
10. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

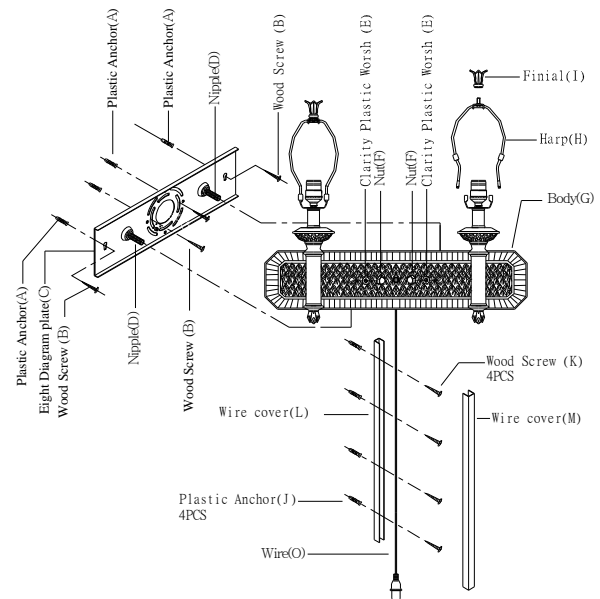

**WATTAGE:** 2\*60W TYPE A (EX BULB)

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**