


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: DWC29	NAME: CHEYANNE SCONCE
MATERIAL TYPE: METAL, GLASS, WOOD	FINISH: ANTIQUE BRASS, MATTE SWIRL
SOCKET TYPE: E12	SOCKET QTY: 2
BULB WATTAGE: 60W or /CFL 13W or /LED 8W	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 3.9LBS

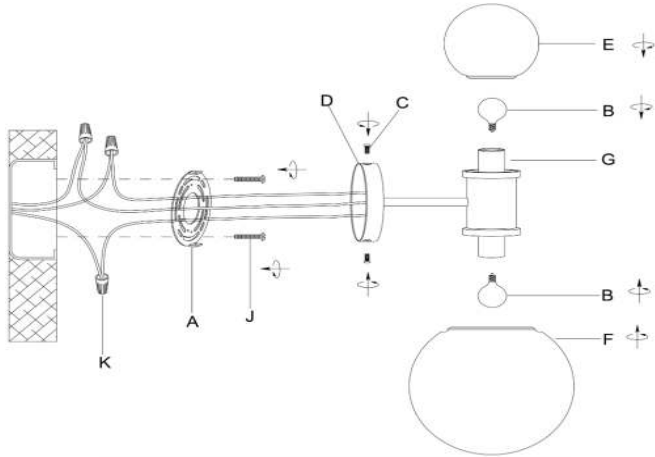

## PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Canopy Screw (C)	Qty: 2 Pcs
Back Plate (D)	Qty: 1 Pc	Small Glass Sphere (E)	Qty: 1 Pc
Large Glass Sphere (F)	Qty: 1 Pc	Socket Assembly (G)	Qty: 1 Pc

## HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

## TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach Back Plate (D) to Mounting Plate (A) by inserting canopy screws (C) through predrilled holes. Then tighten by using screwdriver.
6. Insert 2 TYPE-G 60W or /CFL 13W or /LED 8W bulb(not included) into socket(G). DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.
7. Put and assembly the small glass sphere (E) and Large Glass Sphere(F) by rotating in a clockwise direction with Socket Assembly (G) .
8. Restore power to junction box and test fixture.

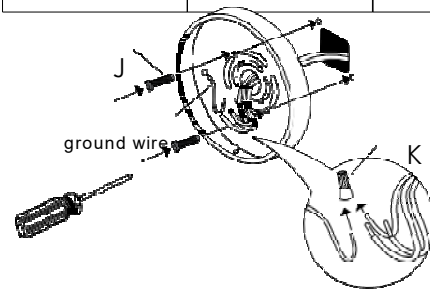

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS