

For Style 1204P22

Tools Required: Plathand screed/ker, Phillips screed/ker, plices, vine culturs, who adopters, elactrical laps, salely glasses.

Light Sources: (3): 1207 LED 11W DIMANALE (2000)

Editabled Assembly Thes: 15-50 minutes


Proposition: Centry and impact at parts before beginning installation. Check peckage content led and diagrams below to be sure at parts are


Proposition: Centry and impact at parts before beginning installation. Check peckage content led and diagrams below to be sure at parts are


present. If any parts are miseling or damaged, do not attempt to assemble, install, or operate the Source. Content contents are replacement.

These instructions are provided for your safety. It is very important you read them completely before installing the focure. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fluture from power source before replacing builbs. Make sure bulbs are given sufficient time to cool before removal

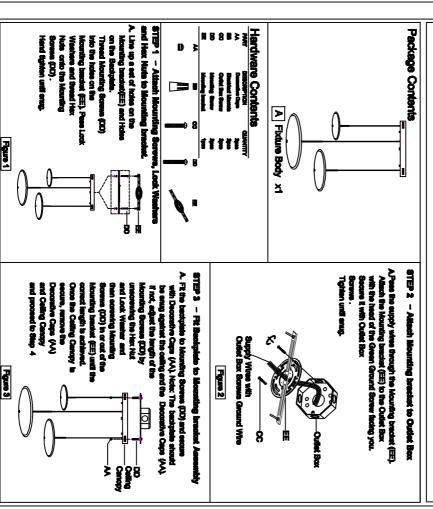

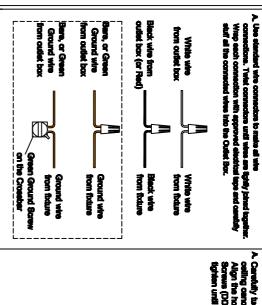

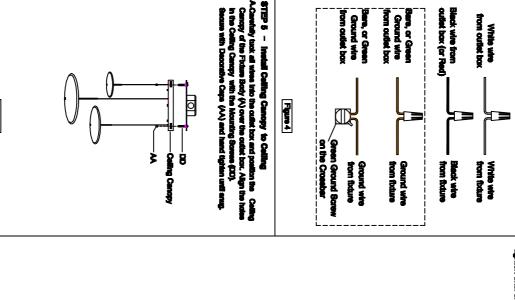

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (A) over the outlet box. Align the holes in the ceiling canopy with the Mounting Screwe (DD). Secure with Decorative Cape (AA) and hand STEP 6 install Ceiling Canopy to Ceiling

STEP 4 - Wire Connections

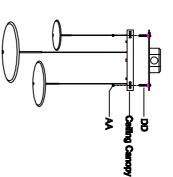


Figure 5

1 약 2

ReleasedDate:2019-4-20