CERTIFICATION: CETL Damp NO. 23924



INSTALLATION INSTRUCTIONS

IMPORTANT

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.



All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard $4" \times 2 \ 1/2"$ metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

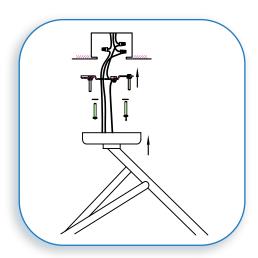

COLLECTION PRIZM

APPLICATION

Semi Flush

MODEL NO.

23924

WHAT WE PROVIDE

- Crossbar
- Mounting Hardware
- Canopy with Fixture
- 3 x Crystal Shades
- 3 x 60W Hgn G9 Bulb

WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified
 by Electrical Code

PREPARE FIXTURE


If there is an existing fixture remove it.

Expose the supply wire from the outlet box.

Feed the wire through the hole in the canopy and secure the crossbar to the outlet box with the supplied screws.

CERTIFICATION: CETL Damp


NO. 23924

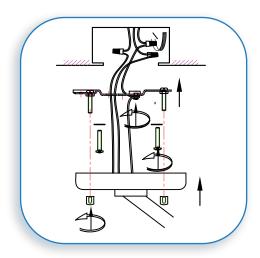

CONNECT THE WIRES

Mount the crossbar to the canopy with the supplied screws, such that the additional screws face downward. Gently pull the supply wires. Connect the black supply wire to the black fixture wire. Secure with the supplied wire nuts. Connect the white supply wires to the white fixture wire. Secure with the supplied wire nuts. Either wrap the green wire around one of the protruding screws or connect it to the supply ground wire. Secure all wires with electrical tape (not supplied).

Tuck all wires carefully into the J-Box.

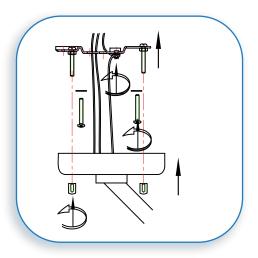


3

MOUNT THE CANOPY

Fit the fixture canopy up to the crossbar. Insert the hanging screws into the designated holes in the canopy.


Secure with the supplied thumb screws.

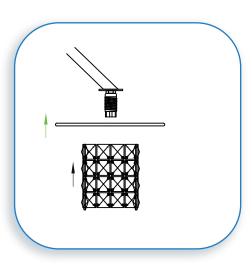

4

SECURE THE CRYSTAL SHADE

Hold the crystal shade to the fixture by fitting the crystal over the socket. Secure the crystal by screwing onto the threads on the socket. CERTIFICATION: CETL Damp NO. 23924

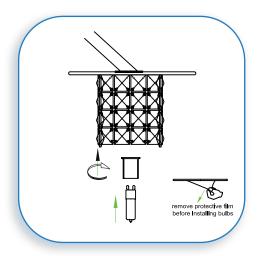

5

INSERT THE BULBS


Insert the supplied bulbs.

MAXIMUM WATTAGE 60W.

DO NOT EXCEED THE WATTAGE AS STATED

ON THE WARNING LABEL AND IN THE INSTRUCTION $% \left(1\right) =\left(1\right) \left(1\right) \left($

SHEETS

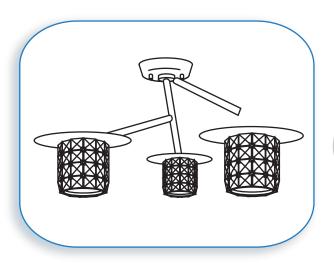

RESTORE THE ELECTRICITY AND
CHECK THE OPERATION OF YOUR
NEW ACCESS FIXTURE

