


# ASSEMBLY INSTRUCTIONS

## ITEM NO: BO-464

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
  2. SCREW STEM (B) INTO THE NIPPLE OF LAMP BODY (A).
  3. PUT WASHER (C ) AND SHADE (D) ONTO THE STEM (B) ,THEN SCREW FINIAL (E ) .
  4. PUT 3PCS “S” IRON LINES (F) BY THE SIDE OF SHADE (D),USE 3PCS SCREWS (G) TO TIGHTEN THEM ON THE LAMP BODY (A).
- YOUR NEW LAMP IS NOW READY TO ENJOY.

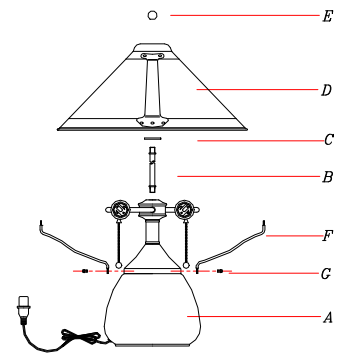

### IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**