


ITEM NO: M80057BN/MBK  
M80058BN/MBK  
M80059BN/MBK

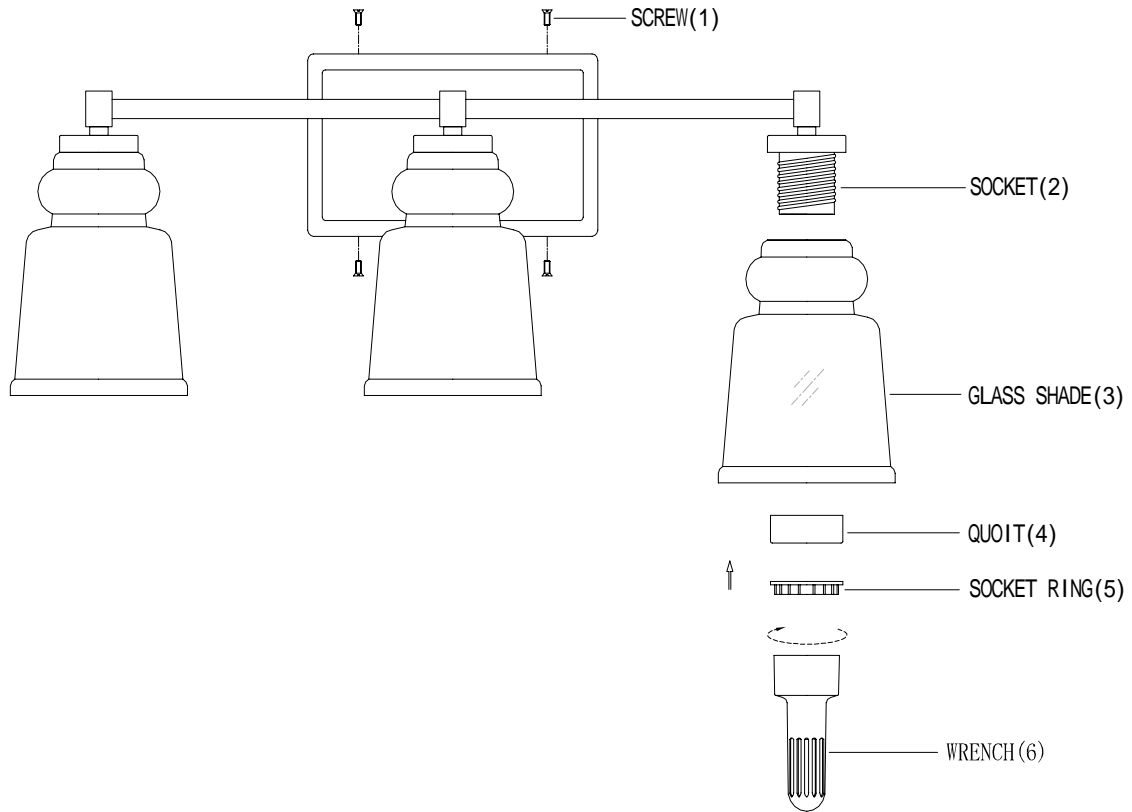

## INSTALLATION INSTRUCTIONS

1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
2. Install the glass shade (3), quoit (4) socket ring (5), onto the socket (2), then secure them with wrench (6).
3. Fixture is ready for lamping and installation.