
For Style 1147P45-6 Assembly Instruction Sheet #IS-1147P45-6

ools Required: Flathaed screwitiver, Philips screwitiver, pilers, wire cutters, wire strippers, electrical tops, authly glasses. (gl. 120V LED "25W DIMAMBLE (2000K) pilet Seurce: (gl. 120V LED "25

△Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a floareed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fidure. We strongly recommend that a floareed, professional electrician perform the installation.

Disconnect fixture from power source before replacing builbs. Make sure builbs are given sufficient firme to cool before removed

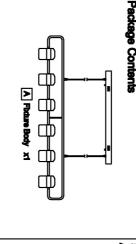

Hardware Contents PA

田 5 8 8 DESCRIPTION QUANTITY Outlet Box Screw **Sectrical Marrets**

and Hex Nuts to Crossber.

A. Line up a set of holes on the STEP 1 - Attach Mounting Screws, Lock Washers Mounting bracket (EE) and Hole on the ceiling carcopy.

Thread Mounting Screwe (DD) tand fighten until anu; luts onto the Mounting to the hotes on the xunting bracket (EE). Page Loca thers and thread Hex 8

A. Fit the ceiling canopy to Mounting Screws (DD) and secure STEP 3 — Fit Ceiling Canopy to Crossber Assembly with Decorative Caps (AA). Note: The ceiling canopy should be snug against the ceiling and the Decorative Caps (AA).

Figure 2

Mounting Screws (DD) by unscrewing the Hex Nut and Lock Washer and then acrewing Mounting Screws (DD) in or out of the Mounting Once the ceiling canopy is correct length is achieved bracket (EE) until the caps (AA) and ceiling canopy ecure, remove the Decorative f not, adjust the length of the ₩ ġ

APass the supply wires through the Mounting bracket (EE) Attach the Mounting bracket (EE) to the Outlet Box (CC) with the head of the Green Ground Screw facing you. STEP 2 - Attach Croseber to Outlet Box. Secure It with Outlet Box Screws (not included). Tighten until anug Supply Wires with Outlet Box Screws Ground Wire 8 Outlet Box Ħ

> A. Use shread wire connectors (not irrainted) to make all who connectors. Twist connectors until whos are dyfuly pland together. Wrap sectio connection with approved electrical treatment and carefully shalf all the connected whose his the Outlet Box. STEP 4 - Wire Conne

from outlet box oullet box (or Red Black wire from White wire from Status White wire

Bare, or Green Ground wire Bers, or Green from outlet box from fodure Ground wire

from outlet box Green Ground Screw from fodure Ground whe

> A. Carefully facit all whee into the outlet box and position the celling campy of the Poture Body (A) over the outlet box. Algn the Indian In the celling Campy with the Mounting Screen (DD).
>
> Secure with Decorative Caps (AA) and hand fighten until enug. stall Calling Canopy to Calling

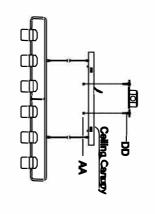


Figure 5

Figure 4

on the Crossbar

and proceed to Step 4.