


Assembly Instructions for 1248

We recommend installation of this fixture be done by a licensed electrician. Turn off power at the main fuse or circuit breaker box. DO NOT EXCEED RECOMMENDED WATTAGE!

** Actual parts may vary slightly depending upon the model

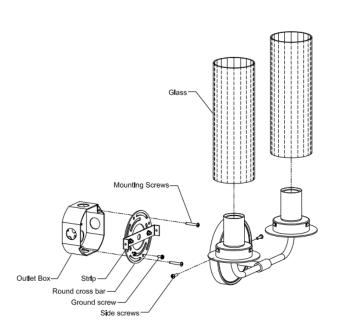

- Remove the parts carefully from the box before discarding the carton.
- 2. Attach round cross bar with strip to the outlet box with ground screw facing out.
- 3. Fasten ground wire to green screw, Fasten lead wire (or white wire) with ridges to the white wire. Use wire nut to fasten it.
- 4. Fasten smooth (or black wire) lead wire to the black wire in the box & use nut to fasten it.
- 5. Place the fixture over the outlet box with holes on the backplate/canopy aligning with the strip.
- 6. Secure the fixture using fixture screws.
- 7. Install bulbs (not included)
- 8. While holding the glass holder with one hand, place the glass shade over the holder while firmly placing the shade into the holder until it locks.
- 9. Restore circuit breaker.

*Never touch the sconce/shade while power is on. To change bulb, allow 15 minutes for fixture to cool down.

www.jvidesigns.com