


ITEM NO:M90075MBKNB

M90075WHNB

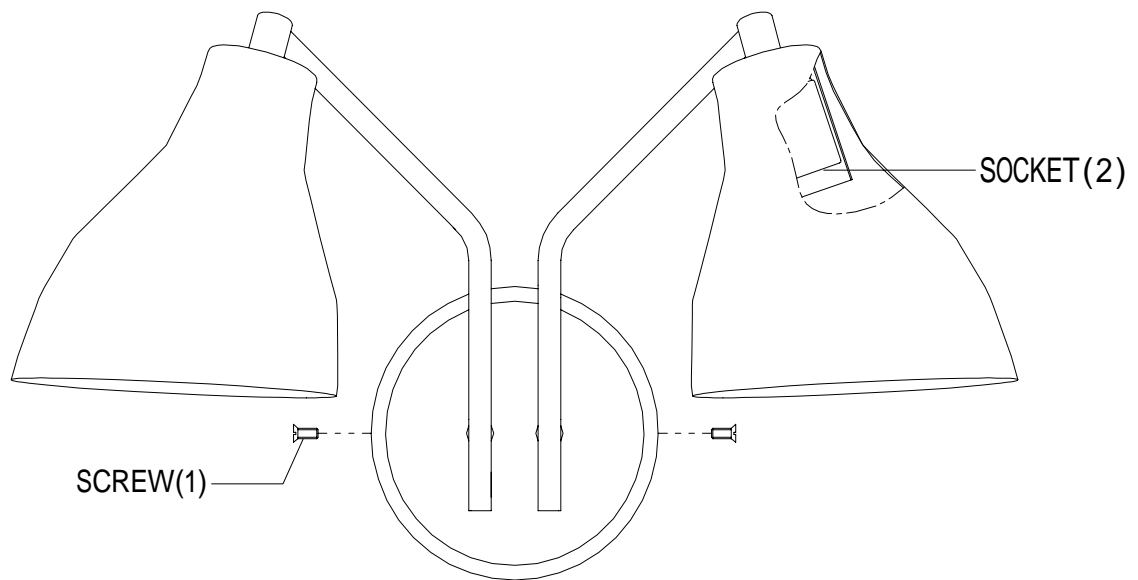

INSTALLATION INSTRUCTIONS

1. Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
2. Install the steel shade [not provided] into the socket (2).
3. Fixture is ready for lamping and installation.