




# Contemporary Lighting

**PRODUCT NAME:** Tilt  
**ITEM NUMBER:** E30622

**Please consult your electrician for hanging fixture and wiring.**

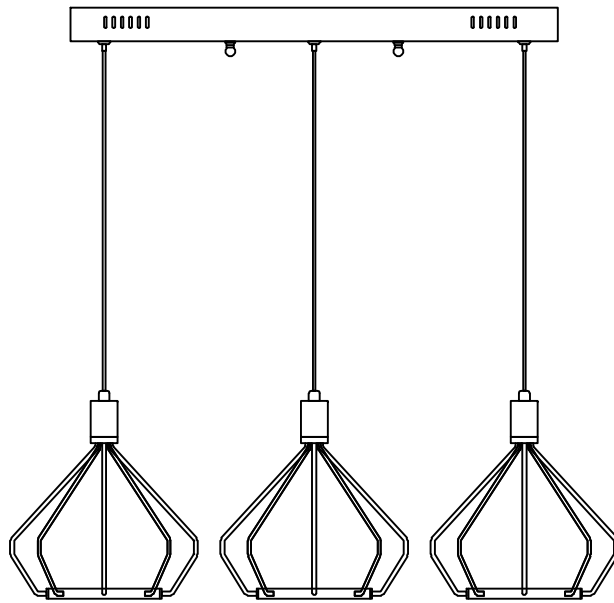

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.  
Below is a list of recommended dimmers:

Lutron MACL-153M  
Lutron DVL-153P  
Lutron SCL-153P  
Leviton IPL06-10Z  
Leviton 6674-POW

Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

**WARNING:** Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur


## LED 3x6W Bulbs

**MADE IN CHINA**  
Page 1 of (2)

**IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation**



**A**  
**Mounting Hardware**




**B**  
**Back Plate**




**C**  
**Finial**

**Locate all hardware & components before discarding packaging**

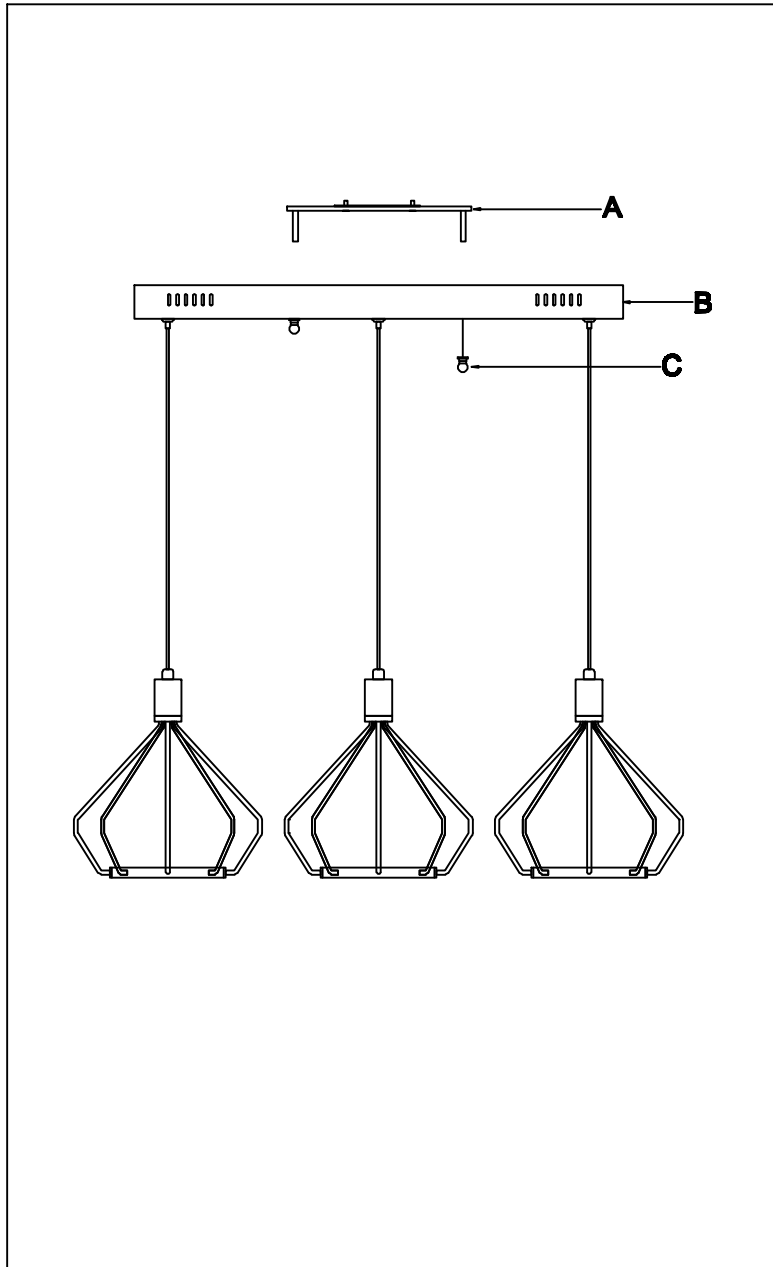


1.)

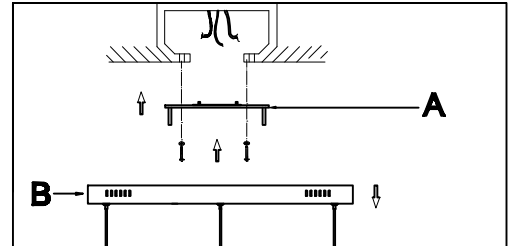

**Step.1: Remove mounting bracket (A) from back plate (B) and install to electrical box.**

2.)

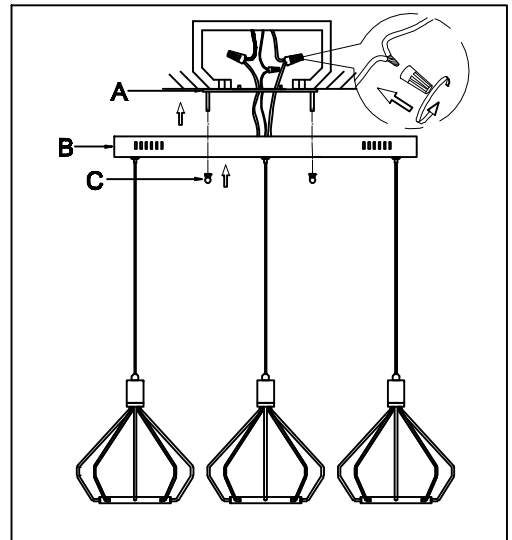

**Step.2: Adjust wire length to desired mounting height and tighten strain relief screws to secure. Wire fixtures to wires in outlet box. Green wire is ground. Install canopy (B) to bracket using finials (C) to secure.**

**Cleaning & Care:**

**Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.**