

# LIVING DISTRICT

Collection: Marion

Installation manual for:

LD6012D15 D15"H19" L1


## Installation instructions:

1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
3. "E" wire from the fixture is attached to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
4. Secure mounting bracket to the junction box.
5. Insert screws (P2) in side of top unit the mounting bracket.
6. Put the lamp arm(P10) to the corresponding position.
7. Put the glass shade(P18) to the coupling(P14) and use the round(P15) to screw tighten.
8. Hang the lamp body to the chain(P8) and connect the canopy lock(P7).
9. Put the canopy(P3) on the nipple(P4) and connect the canopy lock(P7),then use the canopy ring(P6) to screw tighten.
10. Install E26 light source, no include bulb.

## PARTS LIST

part	picture	Description	Qty	Check list
P1		L4" Mounting bracket	1	
P2		5/32-32 Screw	2	
P3		D5.1" Canopy plat	1	
P4		Nipple	1	
P5		Power Cord 7.7', 18AWG, SPT-1 Clear/Gold/Black	1	
P6		Canopy ring	1	
P7		Canopy lock	1	
P8		L5' CHAIN04P Plain Design	1	
P9		D1.5" Loop	1	
P10		W6.7"*L15.1" Arm	6	
P11		Washer	1	
P12		D3.27"*H1.3" Receiver bowl	2	
P13		L4.85" Both end threaded pipe	1	
P14		Coupling	1	
P15		L2.6" Round Metal	3	
P16		Socket cover	1	
P17		E26 Socket	1	
P18		D4.33"*H7.3" Frosted Amber Glass Shade	1	
P19		D2.75" Around metal plate	2	
P20		D3.15" Around metal plate	2	
P21		Cap nut	2	

The end!

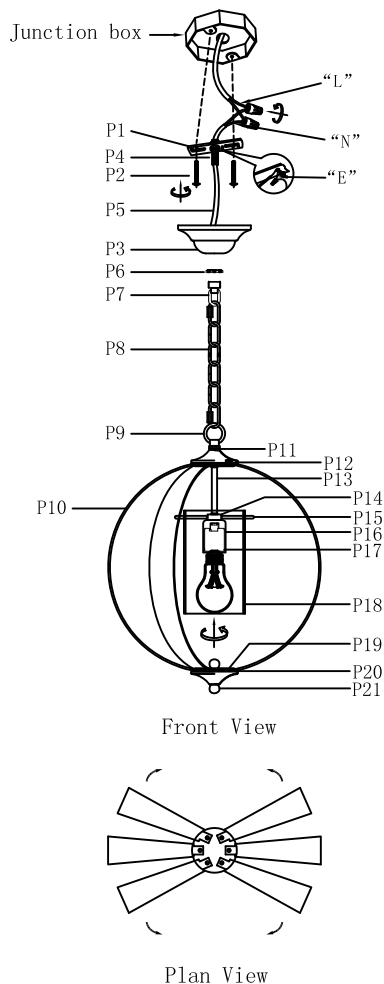

"L" = Hot wire  
 "N" = Neutral wire  
 "E" = Ground wire