

# INSTALLATION INSTRUCTIONS

### **IMPORTANT**

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


**NOTE:** The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.




All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard  $4" \times 2 \ 1/2"$ metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

## STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

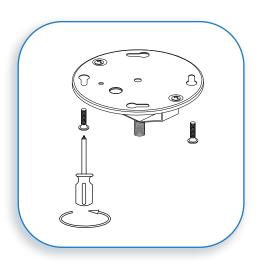



COLLECTION

**APPLICATION** 

MODEL NO.

ODYSSEY

Pendant Fixture

52001LED

#### WHAT WE PROVIDE

- Fixture Assembly
- Mounting Hardware
- 10" Wire with lamp holder
- 1x 5W MR16LED bulb

## WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified
   by Electrical Code



If there is an existing fixture remove it.


Expose the supply wires from the J-box.

Mount the supplied crossbar to the J-Box with

the supplied screws.

CERTIFICATION: cETL DRY


NO. 52001LED

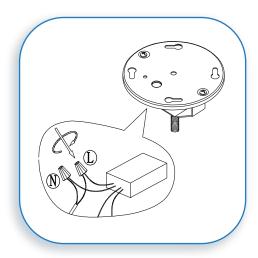

2

# MAKE WIRE CONNECTION WITH TRANSFORMER

Gently pull the supply wires through the hole in the crossbar plate. Connect the black supply wire to the black transformer input wire. Secure with the supplied wire nuts. Connect the white supply wires to the white transformer input wire. Secure with the supplied wire nuts. Either wrap the green wire around one of the protruding screws or connect it to the supply ground. Secure all wire with electrical tape (not supplied). Tuck all wires carefully into the J-Box.

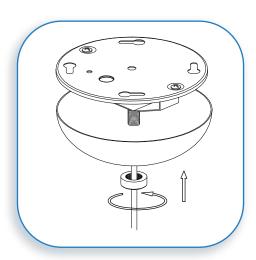


3

## **MOUNT THE CANOPY**

Fit the fixture canopy up to the crossbar.

Secure with the supplied screw nut.

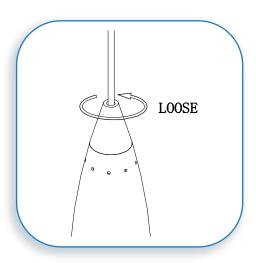


4

## LOOSE THE METAL SHADE CAP

Loose the metal shade cap and slide up.

**CERTIFICATION:** cETL DRY **NO.** 52001LED

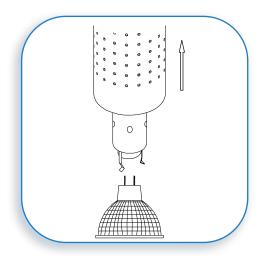

## **SLIDE THE METAL SHADE UP AND INSERT THE BULB**


Slide the metal shade up to reveal the socket assembly. Insert the bulb.

MAXIMUM WATTAGE 5W TYPE MR16LED.

DO NOT EXCEED THE RECOMMENDED WATTAGE AS


STATED ON THE WARNING LABEL AND

INSTRUCTION SHEETS.

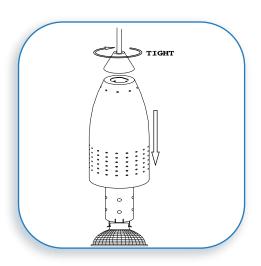

## SLIDE THE METAL SHADE DOWN

Once the bulb is installed, slide the metal shade back into place and tighten metal cap

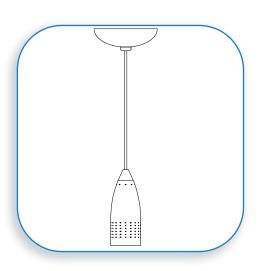

**RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS FIXTURE** 

