## Assembly Instruction Sheet #S-1042 P32-3R For Style 1042P32-3R

to Required: Flafreed screwidiver, Philips screwidiver, pliers, wire culturs, who safeppers, electrical tops, safety glasses.

# Searces: (3) 1207 LED "140W DIMAMSEE (4000K)

Instaled Assembly Time: 10-20 minutes


partition: thirtily and impact all parts before beginning installation. Check package content but and diagrams below to be sure all parts are

ent. If any parts are missing or dermaged, do not ellempt to assemble, Install, or operate the fidure. Context customer service for replacement.

## **∆Warnings and Cautions**


Turn off electricity at circuit breaker or main fuse box before installation. Consult a floaned electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before repiscing buibs. Make sure buibs are given sufficient time to cool before removal

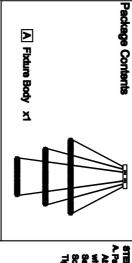

A. Pass the supply wires through the Crossbar (EE).

Attach the Crossbar (EE) to the Outet Box (CC) STEP 2 - Attach Crossber to Outlet Box. Screws (not included) vith the head of the Green Ground Screw facing you.



DESCRIPTION QUANTITY Outlet Box Screw ₽ \$ \$ \$

Hardware Contents

用品的 器

₹

A. Fit the ceiling canopy to Mounting Screws (DD) and secure

STEP 3 — Fit Calling Canopy to Crossber Assembly

Figure 2

and Hex Nuts to Grossber.
A. Line up a set of holes on the

on the ceiling campy.
Thread Mounting Screws (DD)

(EE) and Holes

land lighten until anug.

Figure 1

Figure 3

uts onto the Mounting

BTEP 1 - Attach Mount

ġ unscrewing the Hex Nut and Lock Washer and then screwing Mounting Screws (DD) in or out of the Crossbar (EE) until the

Once the ceiling canopy is secure, remove the Decorative Caps (AA) and ceiling canopy and proceed to Step 4.

with Decorative Caps (AA). Note: The ceiling canopy should be anug against the ceiling and the Decorative Caps (AA). correct length is achieved. not, adjust the length of the founting Screws (DD) by

> A. Use standard who convendors (not holided) to make all who convendors. Twist convendors until whose are tightly joined togeth. Who sects connection with approved electrical tops and carefully what all the convended whose into the Quilet Box. STEP 4 - Wire Connections from outlet bo butlet box (or Red) Wask wire from from floture from Status A. Carefully tuck all views into the outlet box and position the calling camppy of the Picture Body (A) over the outlet box. Align the India. STEP 5 - Install Calling Canopy to Calling

- DB Commo

) Screwe (DD). hand tighten until anug.

Š

Bars, or Green Ground whe from outlet box from outlet box Bare, or Green Ground with Figure 4 on the Crossber Green Ground Screw from fodure from Statute Ground whe Ground whe

Fgs 6

of 2

ReleasedDate:2017-08-14