


ASSEMBLY INSTRUCTIONS

Fig 1

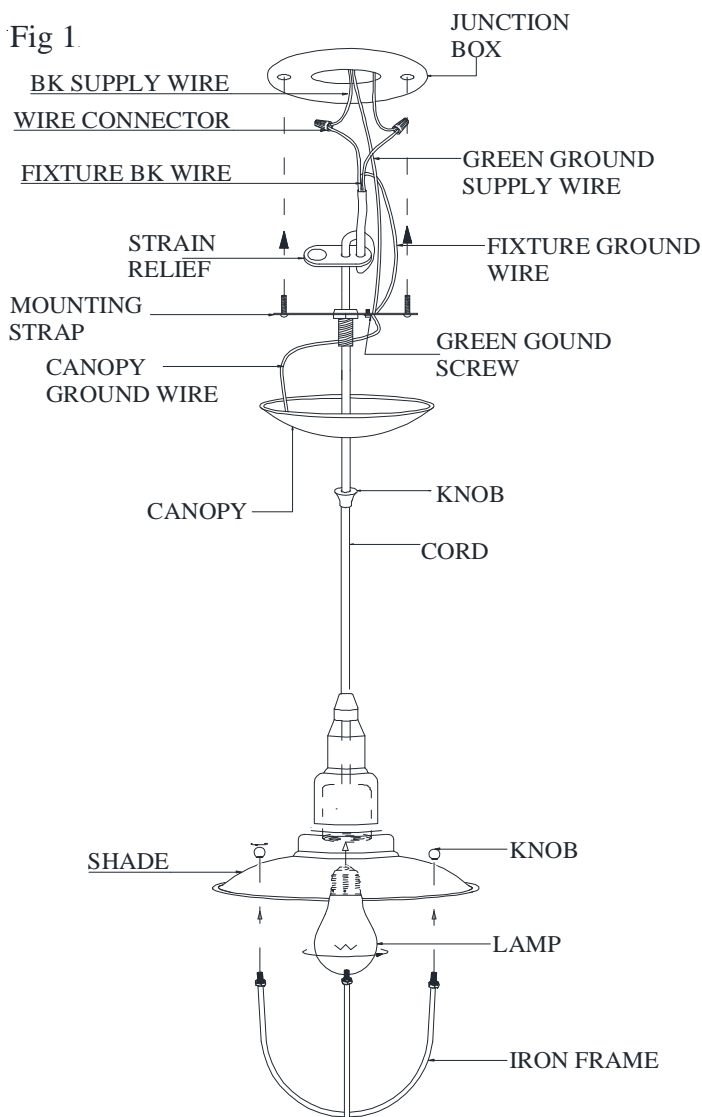

WARNING : Turn off power by removing fuses or turning off circuit breakers.

PREPARATION OF WIRING :

1. Slide the cord into knob, canopy, nipple and strain relief like the Fig 1 shows.
2. Leave the length of 6" from above strain relief for wiring needs.
3. If the cord is too long and cutting cord is needed, pls refer to the following CAUTION for cutting cord notices.

CAUTION : Cutting too deep in the cord may cut three wires inside.

1. Cut the cord slightly with tools.
2. Peel off the length of cord outside and leave 3 wires inside like Fig 2 and 3 show.
3. Peel off the length of 3 wires 3/8" near the end and expose the cooper for wiring. like Fig 2 and 3 show.

WIRING :

1. Mount strap securely to junction box with 2 pcs of mounting screws provided.
2. Hold the canopy and attach fixture BK wire to BK supply wire, fixture WH wire to WH supply wire with wire connectors. Fixture green ground wire and Green supply wire and canopy ground wire to green ground screw on strap.
3. Tuck the wires into the junction box.
4. Push the canopy toward nipple until nipple protrude the hole in canopy and fix the canopy by knobs by rotation until canopy is tight against the junction box.
5. Install the iron frame by rotating the 3 knobs until iron frame is fixed tightly on the shade.
6. Install the recommended bulb.
7. Turn on power.

Fig 2.


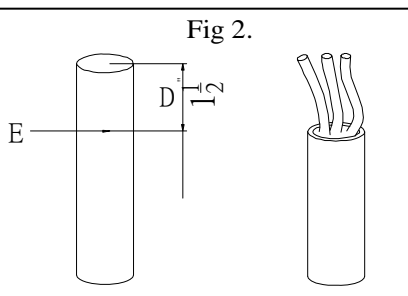


Fig 3.

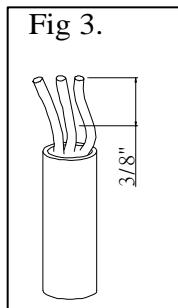

SAVE THESE INSTRUCTIONS