


PRODUCT NAME: Kem 12-Lite Pendant
ITEM NUMBER: E24312-18PC

Please consult your electrician for hanging fixture and wiring.

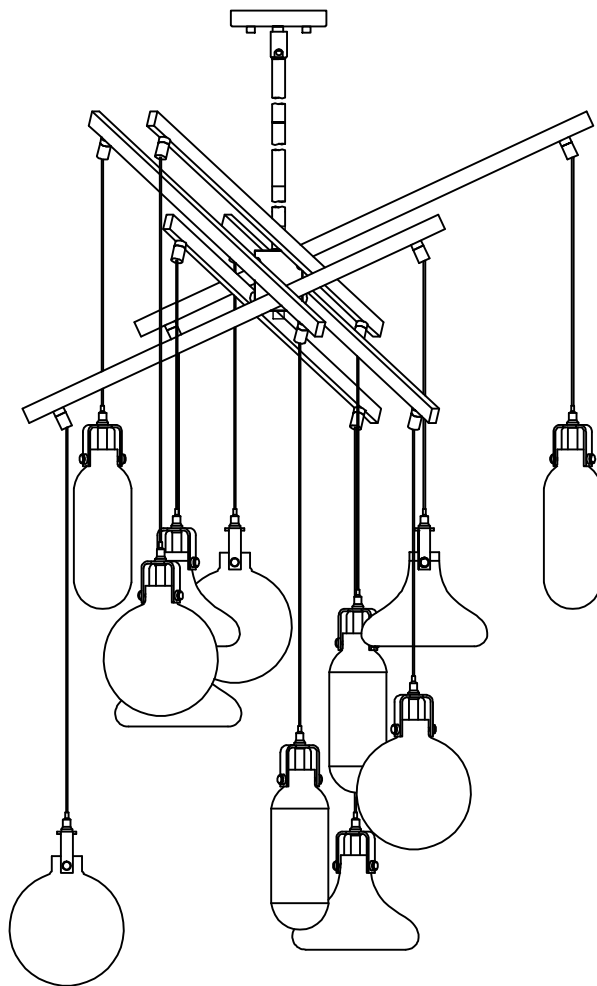

Caution: Xenon bulbs get very hot and may burn you. Always make sure bulbs are off for a minimum of 10 minutes before handling. Fixture may be dimmed using an electronic low voltage dimmer.

Bulb(included): 12-40 Watt G9 bulbs


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



A
Mounting Bracket(1pc)



B
Screw(2pcs)

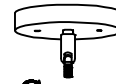

C
Canopy(1pc)



D
Ball nut (2pcs)




E
Rod(1*6"+3*12")




G
G9 Bulb(12pcs)

Locate all hardware & components before discarding packaging

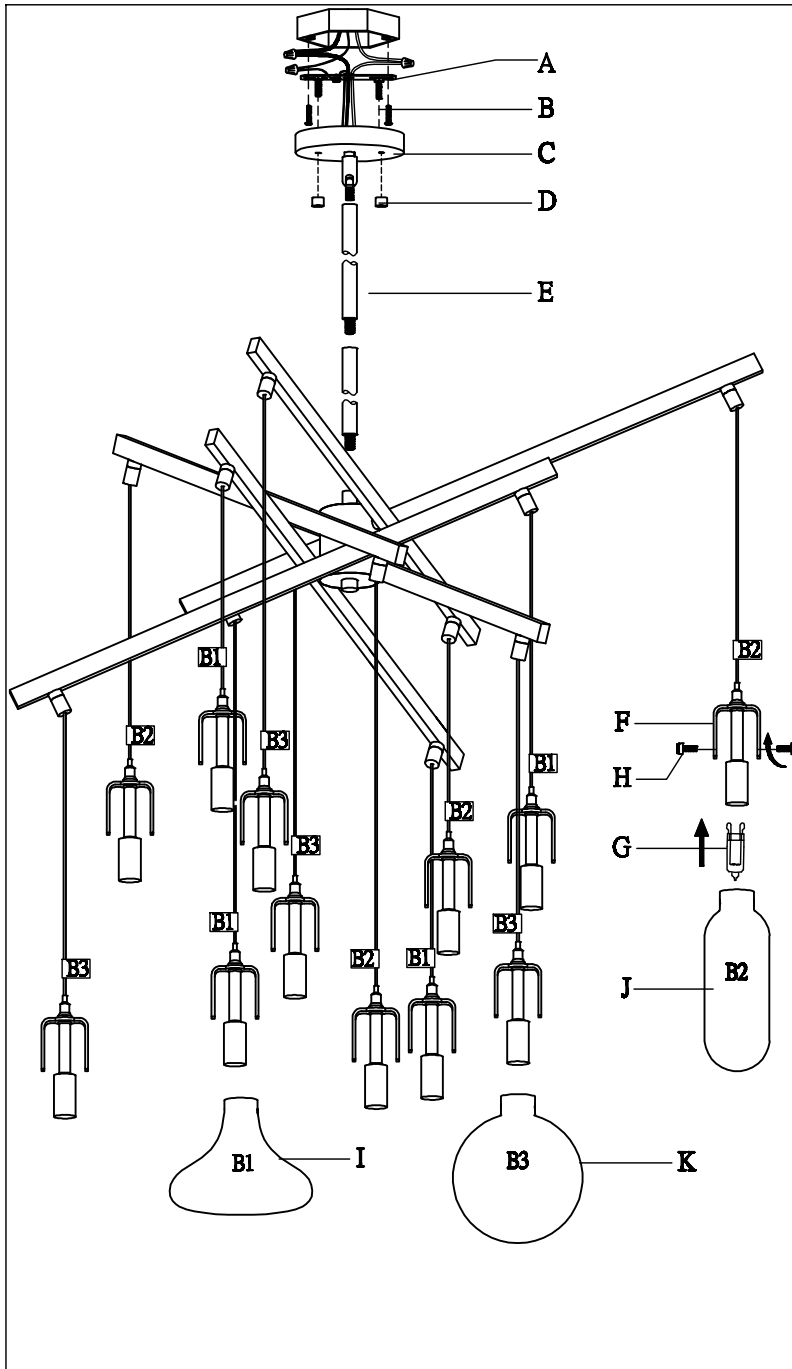


1.)

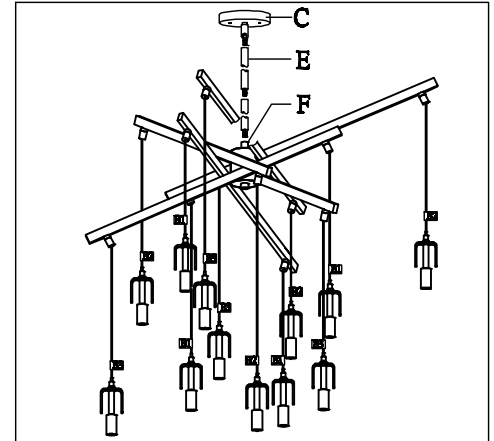

Step.1: Carefully remove packaging from fixture. Run wire through stems (E) and combine stem lengths to meet desired mounting height. Then attach canopy (C) to fixture.

2.)

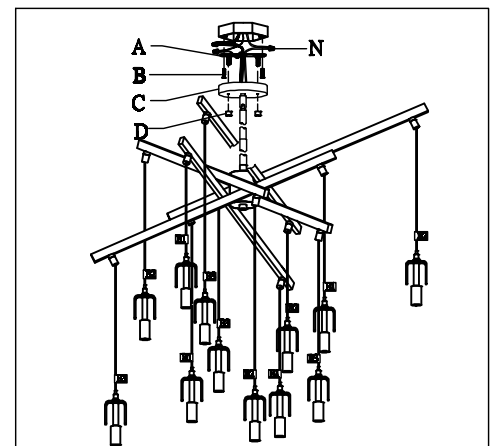


Step.2: Wire fixture to wires in outlet box. Bare wire is for Ground. Install fixture to bracket and tighten ball nuts (D) on the canopy to secure.


Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

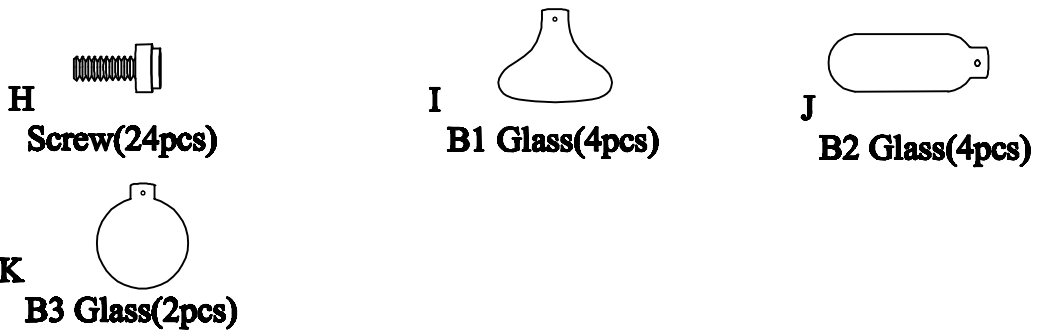

Locate all hardware & components before discarding packaging

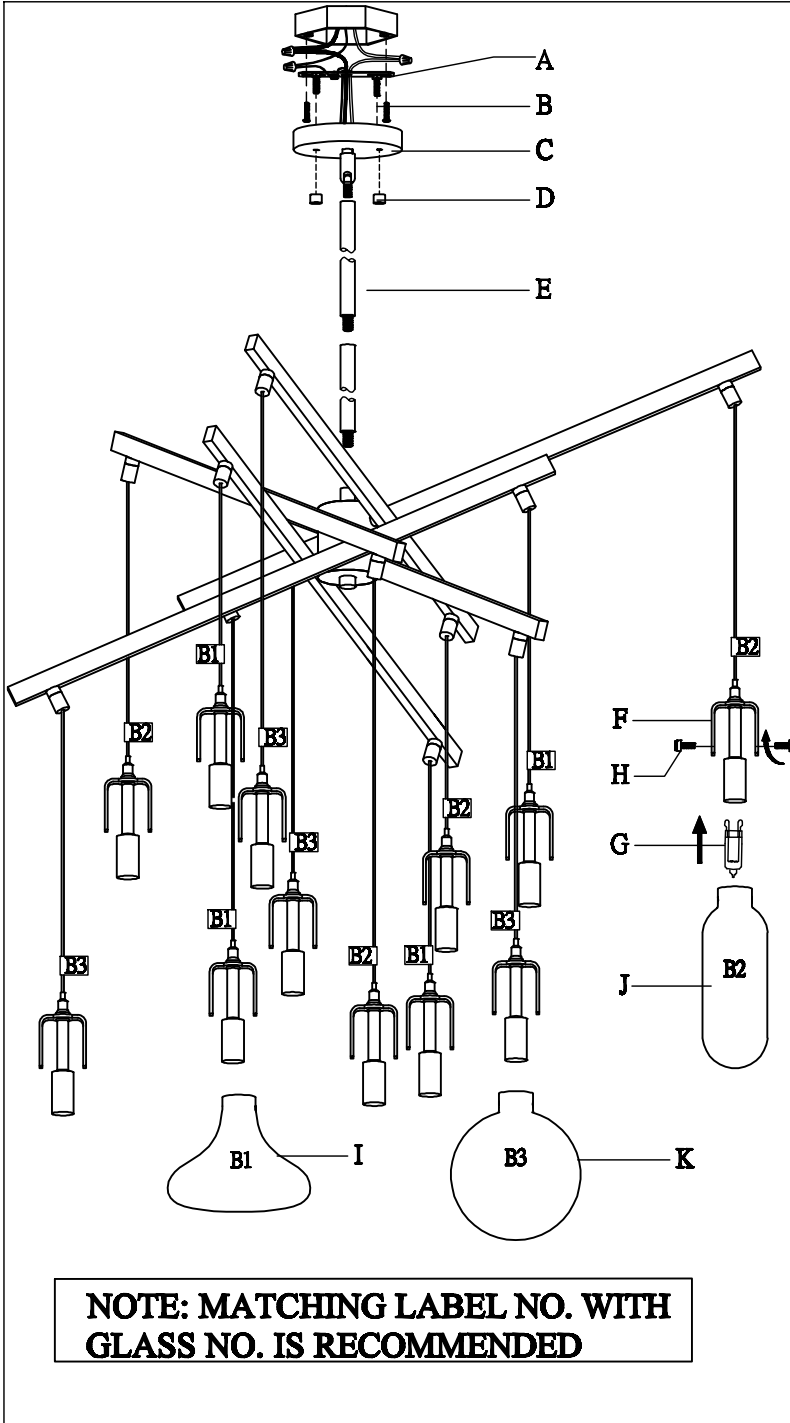

NOTE: MATCHING LABEL NO. WITH GLASS NO. IS RECOMMENDED

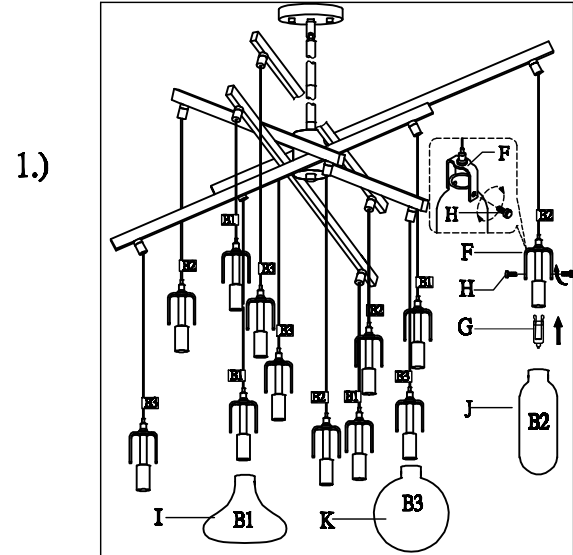

Step.3: Insert the G9 bulbs one by one Attached the glass(B1, B2, B3) to yoke and secured with lock screw(H)

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.