


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DLC23	NAME: EVANSVILLE CHANDELIER
MATERIAL TYPE: METAL	FINISH: ENGLISH BRONZE/PANTONE 627U
SOCKET TYPE: E26	SOCKET QTY: 6PCS
BULB WATTAGE: 60W TYPE G	
VOLTAGE: 120V	ITEM NET WEIGHT: 12.1LBS

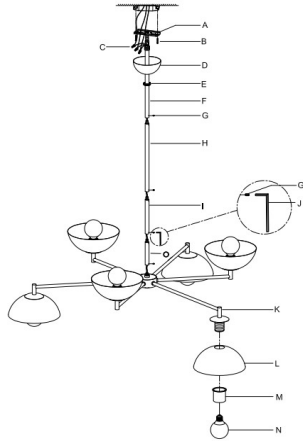

PARTS INCLUDED:

Mounting Plate(A)	Qty: 1pc	Hexangular Screw(G)	Qty: 4pcs
Mounting Screws(B)	Qty: 2pcs	Allen Wrench(J)	Qty: 1pc
Wire Connector(C)	Qty: 3pcs	Lamp base (K)	Qty: 1pc
Canopy (D)	Qty: 1pc	Metal shade(L)	Qty: 6pcs
Collar (E)	Qty: 1pc	Socket ring(M)	Qty: 6pcs
Rods (F,H,I,O)	Qty: 4pcs	Bulb(N, not included)	Qty: 6pcs

HARDWARE INCLUDED:

Mounting Screws	Qty: 2	Hexangular Screw	Qty: 4
Plastic Wire Connector	Qty: 3	Allen Wrench	Qty: 1
Green Ground Screw	Qty: 1		

TOOLS NEEDED (Not Included):

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy(D) by unscrewing the collar(E).
5. Pass the power wire through the rods (O),(I),(H)&(F),screw the rod(O) to lamp body(K) till tight,repeat the same operation on the rod(I),(H)and rod(F). When you connect the rods,loosen the small hex screws(G) in the side hole first then tighten with allen wrench(J) after all rods are connected. **Be sure all the hexangular screws are tight enough.**
6. Put the collar (E) and canopy(D) into the rod (F) in turn, then pass the power wire through the mounting plate(A). Sew the rod(F) to the nipple of mounting plate(A) till tight.
7. Carefully inspect the chandelier's fixture wires.
Neutral fixture wire: It has very fine ridges molded into its plastic covering.
Hot fixture wire: It has a smooth covering
Ground wire: Bare wire
8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
9. Attach the neutral fixture wire from the chandelier to the neutral junction box wire . Fasten each together with a wire nut and wrap the connection with electrical tape.
10. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
11. Gently tuck the wire connections(C) neatly into the ceiling junction box.
12. Place the mounting plate(A) over the center of the ceiling junction box.
13. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts(B). Secure bolts with a Phillips head screwdriver.
14. Push canopy(D) up over the mounting plate(A) until it is flush with the ceiling.
- 15.Push collar(E) through hole in canopy(D) and thread onto nipple on the mounting plate(A). Secure by turning collar(E) clockwise until canopy(D) is flush with the ceiling.
- 16.Attached metal shade(L) to the socket and secure with Socket ring(M) in a clockwise derection till tight.
17. Insert 6 Type G 60W bulbs (OR /CFL 12W OR /LED 10W, not included) into the socket(H). **DO NOT EXCEED THE SPECIFIED WATTAGE.**
18. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS