
ARN3600

ASSEMBLY & INSTALLATION GUIDE

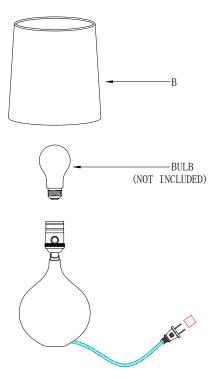

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- 1. Carefully remove all parts from the box and remove all plastic covering.
- 2. Insert bulb (not included) into socket
- 3. Clip the shade (B) into socket
- 4. Plug into proper electrical outlet and test fixture.
- 5. Assembly is complete.