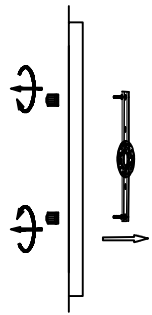

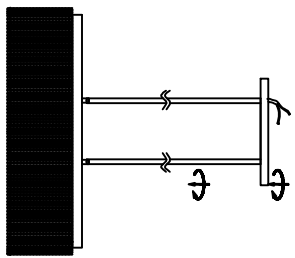
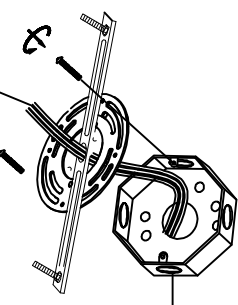
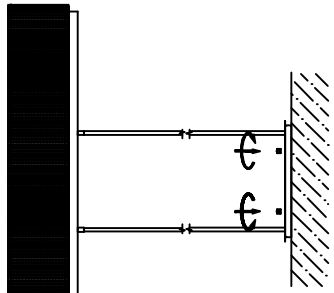




# Assembly Instruction Sheet #IS-5535P46 For Style 5535P46

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.  
**Light Source:** (7) G9 Compact Fluorescent Bulbs 40W (Manufactured In Canada)  
**Estimated Assembly Time:** 30-40 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

**Warnings and Cautions**  
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

<p><b>Package Contents</b></p> <ul style="list-style-type: none"> <li>B Middle Rod</li> <li>B1 4"×4pcs</li> <li>B2 6"×2pcs</li> <li>B3 12"×4pcs</li> <li>A Fixture Body x1</li> <li>C Ceiling Canopy x1</li> <li>Crystal x148</li> </ul>	<p><b>STEP 1 - Release Mounting bracket from Ceiling Canopy</b></p>  <p><b>Figure 1</b></p>						
<p><b>Hardware Contents</b></p> <table border="1"> <thead> <tr> <th>PART DESCRIPTION</th> <th>QUANTITY</th> </tr> </thead> <tbody> <tr> <td>B3 Wire nut</td> <td>2pcs</td> </tr> <tr> <td>CC Outlet Box Screw</td> <td>2pcs</td> </tr> </tbody> </table> 	PART DESCRIPTION	QUANTITY	B3 Wire nut	2pcs	CC Outlet Box Screw	2pcs	<p><b>STEP 2 - Install middle Rods, Ceiling Canopy to Fixture Body.</b></p>  <p><b>Figure 2</b></p>
PART DESCRIPTION	QUANTITY						
B3 Wire nut	2pcs						
CC Outlet Box Screw	2pcs						

<p><b>STEP 3 - Attach Mounting bracket to Outlet Box</b></p>  <p><b>Outlet Box</b></p> <p><b>Supply Wires with Outlet Box Screws Ground Wire</b></p> <p><b>Figure 3</b></p>	<p><b>STEP 5 - Install Ceiling Canopy to Ceiling</b></p>  <p><b>Figure 5</b></p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------
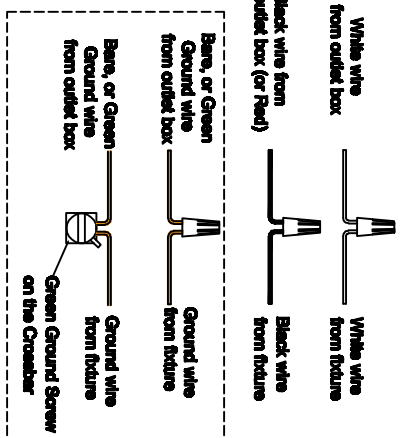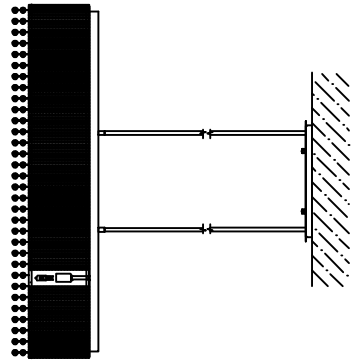
<p><b>STEP 4 - Wire Connections</b></p> <p>A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.</p>  <p><b>Figure 4</b></p>	<p><b>STEP 6 - Install Crystal and Bulbs.</b></p>  <p><b>Figure 6</b></p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------