


ASSEMBLY INSTRUCTIONS

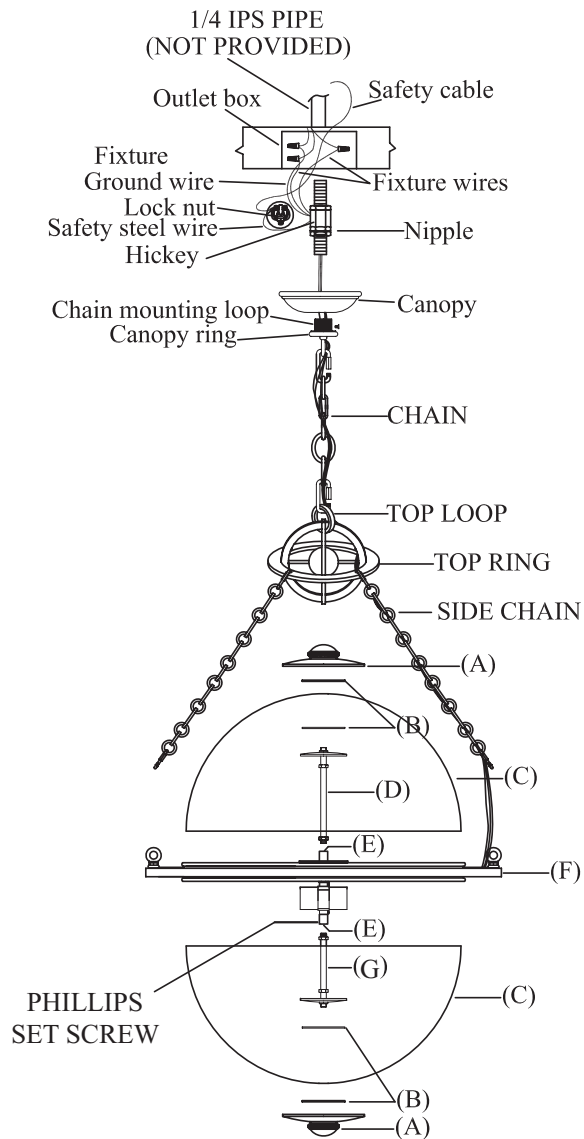

Modern Globe Pendant

Item # CHC2135

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Insert light bulbs into sockets.
2. Thread rods (D) into top threaded opening of parts (E).
3. Remove finials (A) & washers (B) from rods (G), place glass shades (C) over top threaded section of rods (B), and secure with washers (B) & finials (A).
NOTE: two washers (B) need to be inside of glass shade and one on top of glass shade.
4. Hook side chains to ring (F) to hang glass shade (C), feed wires through side chain to top ring.
5. Attach chain to top loop, feed wire through chain and mounting loop.
6. Unscrew canopy ring, slide canopy ring and canopy on chain.
7. Insert top threaded nipple in mounting 1/4 IPS pipe.
8. Attach chain mounting loop to nipple.
9. Attach chain with fixture to chain mounting loop at desired height.
10. Connect the safety steel wire from the fixture and the safety cable from ceiling with lock nut.
11. Attach fixture grounding (green) and house grounding wire with the green grounding screw. Connect fixture to corresponding house wire with wire nut. Carefully tuck the wires back into the outlet box.
IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
12. Connect neutral wire from the fixture (ridges molded wire) to the neutral wire from the junction box (usually white).



ASSEMBLY INSTRUCTIONS

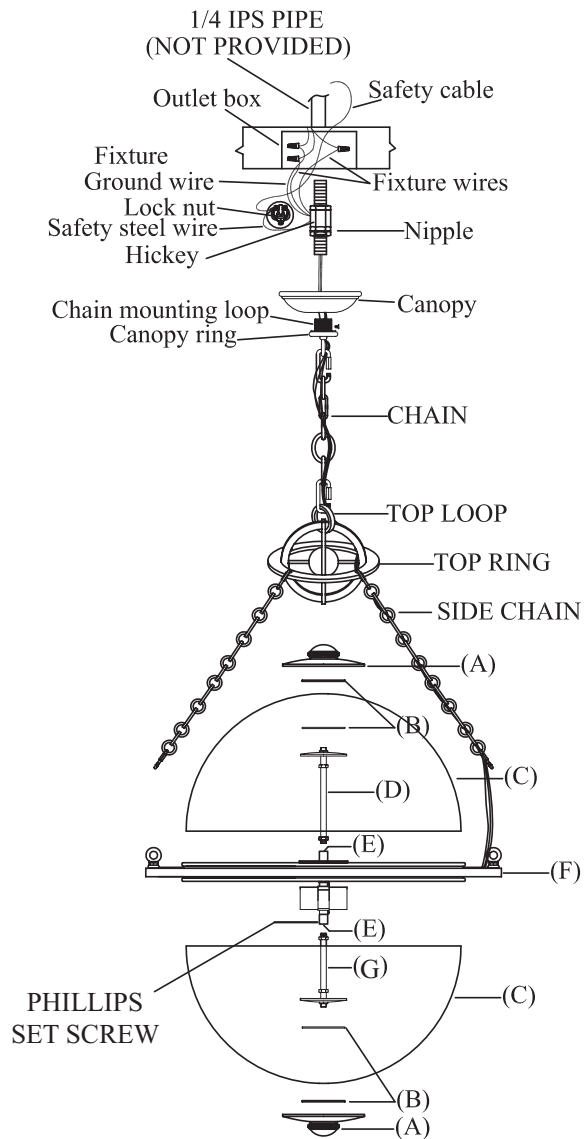

Modern Globe Pendant

Item # CHC2135

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

13. Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
14. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten together with plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NO REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
15. Slip canopy to ceiling and secure with threaded canopy ring.
16. Assembly is complete.