





Assembly Instructions for 3060

We recommend installation of this fixture be done by a licensed electrician. Turn off powder at the main fuse or circuit breaker box. **DO NOT EXCEED RECOMMENDED WATTAGE!**

**** Actual parts may vary slightly depending upon the model**

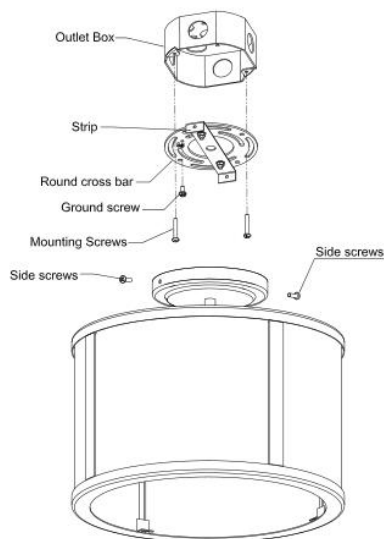

Glass Assembly

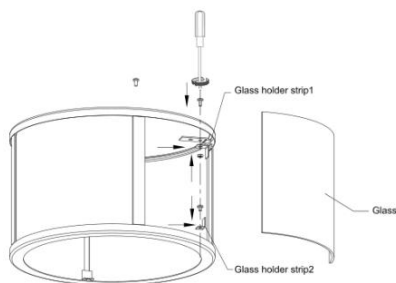

1. Remove the parts carefully from the box before discarding the carton.
2. Attach round cross bar with strip to the outlet box with ground screw facing out.
3. Install bulbs (not included)
4. Fasten ground wire to green screw, Fasten lead wire (or white wire) with ridges to the white wire. Use wire nut to fasten it.
5. Fasten smooth (or black wire) lead wire to the black wire in the box & use nut to fasten it.
6. To install the glass, remove side strips 1 and 2 as shown in the diagram.
7. Place the canopy over the outer box with holes on the canopy aligning with the strip
8. Secure the fixture using fixture screws.
9. Restore circuit breaker.