


ITEM NO:M90077MBK

M90077BB

M90077WH

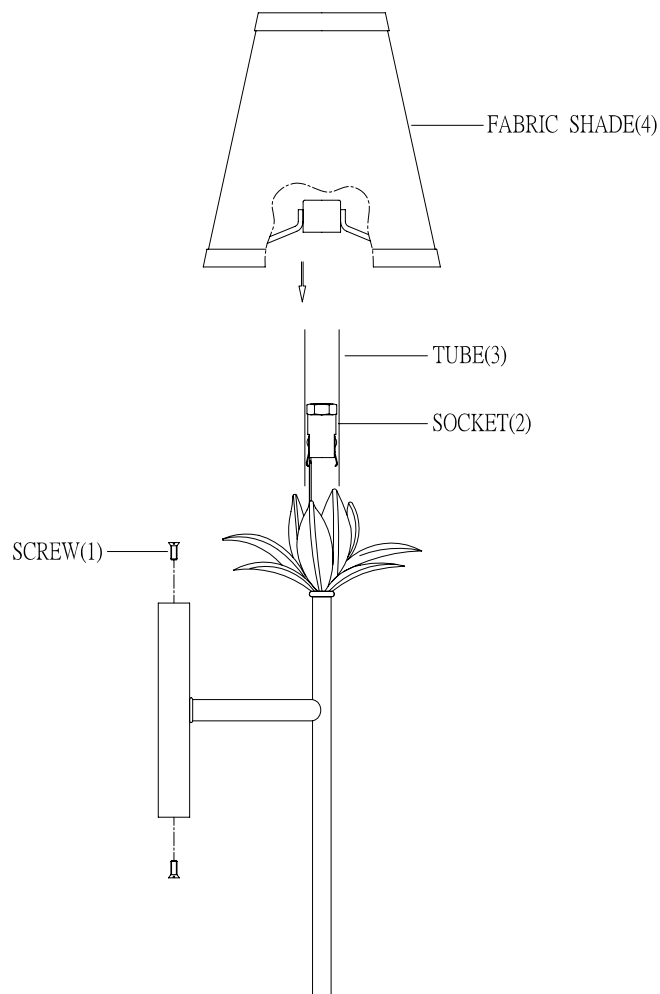

## INSTALLATION INSTRUCTIONS

- 1.Carefully remove the fixture out of the carton, and check that all parts are included referring to the above illustration. Make sure not to misplace any parts that are needed for the installation;
- 2.Install the fabric shade (4) tube (3), into the socket (2).
- 3.Fixture is ready for lamping and installation.