

**WARNING:**

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.




ANY QUESTIONS CALL: 800-613-3261  
M-F 8:00AM-6:00PM ET

**CAUTION:** To prevent shock, only plug in lamp after lamp assembly is complete.

**WARNING:** This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

ITEM#: S0019-11174

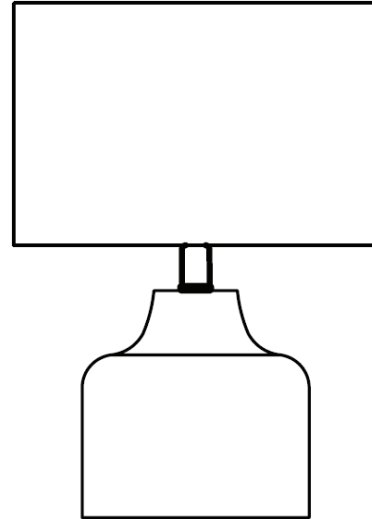

1. Carefully pull cord outward from base (B). Pull cord taut. Thread tube at bottom of socket (A) onto coupling on top of base (B).
2. Remove socket ring (C) from socket (A).
3. Lower shade (D) down over socket (A). Pass hole in bracket on shade (A) over socket. Thread socket ring (C) onto socket (A). Tighten socket ring (C) to secure shade (D) in place.
4. Insert recommended bulb (not included) into socket (A). **WARNING:** Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.

