


## ASSEMBLY INSTRUCTIONS:

### ITEM NO.: BO-213

1. Carefully unpack and lay out the parts as shown in illustration.
2. Screw tube (B) to base (A), screw tube (C) to Tube (B), screw tube (D) to tube (C), Screw tube (E) to tube (D), screw socket Section (F) to tube (E), pull cord from base.
3. Put shade (G) on socket section (F), make the shade keep horizontal before tightening it by socket ring (H).

**Wattage: 3-Way 150W Type A Bulb (excluded)**

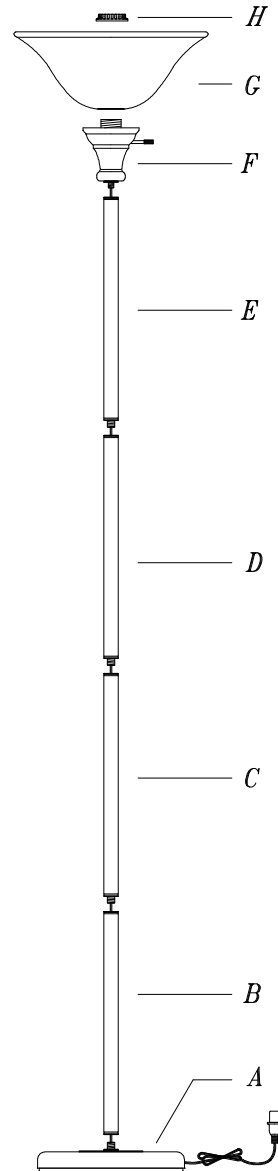

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**