


# ASSEMBLY INSTRUCTIONS

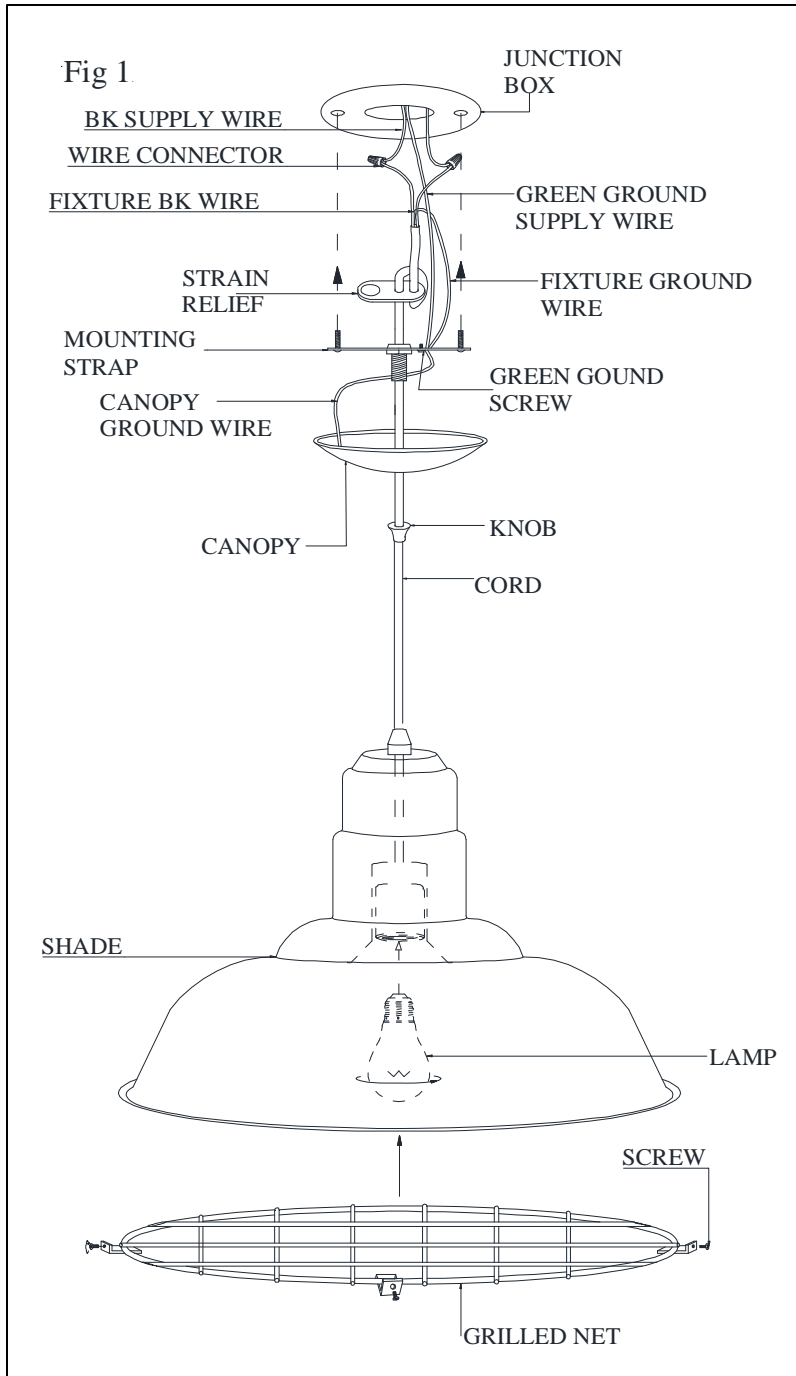

**WARNING :** Turn off power by re-fuses or turning off circuit breakers.

## PREPARATION OF WIRING :



1. Slide the cord into knob, canopy, nipple and strain relief like the Fig 1.
2. Leave the length of 6" from above strain relief for wiring needs.
3. If the cord is too long and cutting is needed, pls refer to the following CAUTION for cutting cord notice.

**CAUTION :** Cutting too deep in the cord will cut three wires inside.


1. Cut the cord slightly with tools.
2. Peel off the length of cord outside the jacket, leave 3 wires inside like Fig 2 and 3 show.
3. Peel off the length of 3 wires 3/8" from the end and expose the cooper for wiring like Fig 2 and 3 show.

## WIRING :

1. Mount strap securely to junction box with 2 pcs of mounting screws provided.
2. Hold the canopy and attach fixture BK supply wire, fixture WH wire and green ground wire to BK supply wire, fixture WH wire and green supply wire with wire connectors. Attach canopy ground wire to green ground screw on strap.
3. Tuck the wires into the junction box.
4. Push the canopy toward nipple until it protrude the hole in canopy and fit the canopy by knobs by rotation until it is tight against the junction box.
5. Install the grilled net by rotating the shade with screws by screw driver until grill is hanged over tightly on the shade.  
\*If knobs are available, rotate 3 knobs by hand.
6. Install the recommended bulb.
7. Turn on power.

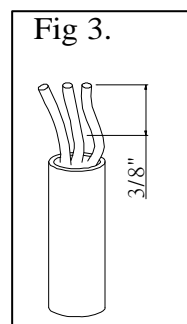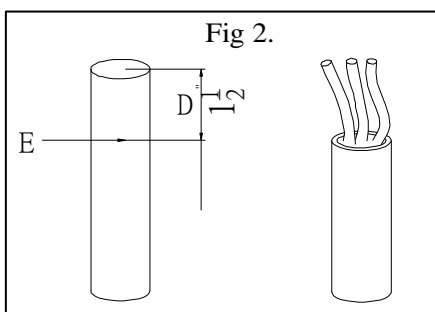

**SAVE THESE INSTRUCTIONS**



moving

g 1 shows.  
e strain

cord  
ig  
es.

e cord may

e and  
d 3

' near the  
ring.

box  
ovided.  
e BK wire  
ire to WH  
. Fixture  
ply wire  
ground

ox.  
ntil nipple  
ix the  
l canopy

the 3  
lled ne  
de.  
nobs

