## For Style 1206W10-1-A Assembly Instruction Sheet #S- 1206W10-1-A

ools Required: Fathead soverdriver, Phillips screwdriver, pliess, wire culters, wire stippers, electrical tape, safety glasses.

(1) 150/ LED "IW DIMAABLE (3000K)

Remaind Assembly Time: 10-20 minutes


spandon: Identify and impact at parts below beginning installation. Check package content list and diagrams below to be sure at parts are


sent. If any parts are missing or damaged, do not alternot to assemble, install, or operate the titure. Contact customer service for episcement.

## Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consuit a licensed electricisn if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

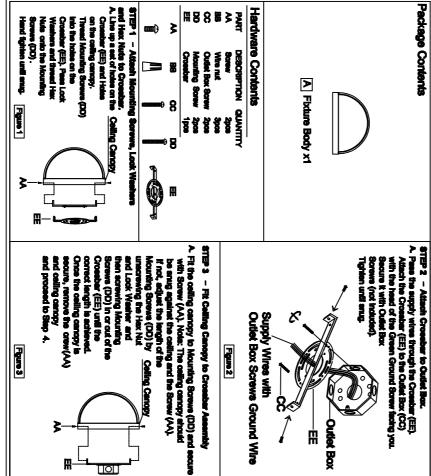

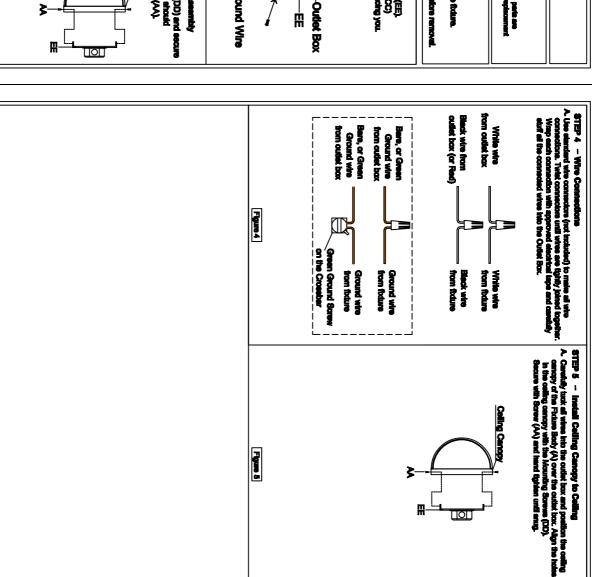

H

2 of 2