

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12



**CAUTION: TO PREVENT ELECTRICAL SHOCK, ENSURE ELECTRICITY HAS BEEN TURNED OFF AT THE CIRCUIT BREAKER BEFORE BEGINNING.**


- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- Retain installation instructions for future reference.
- VENTRIX fixtures and channels feature separate data and power conductor systems. During installation and use, do not short the data or power conductors together by any means or damage may occur.

**WARNING:** All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by WAC Lighting. Substitution of parts or accessories not designated for use with this product by WAC Lighting could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

**MISE EN GARDE: POUR ÉVITER TOUT CHOC ÉLECTRIQUE, ASSUREZ-VOUS QUE LE DISJONCTEUR SOIT MIS HORS TENSION AVANT DE COMMENCER.**


- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

**ATTENTION:** Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits WAC Lighting. Remplacer des pièces ou accessoires non conçus pour ce produit WAC Lighting pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

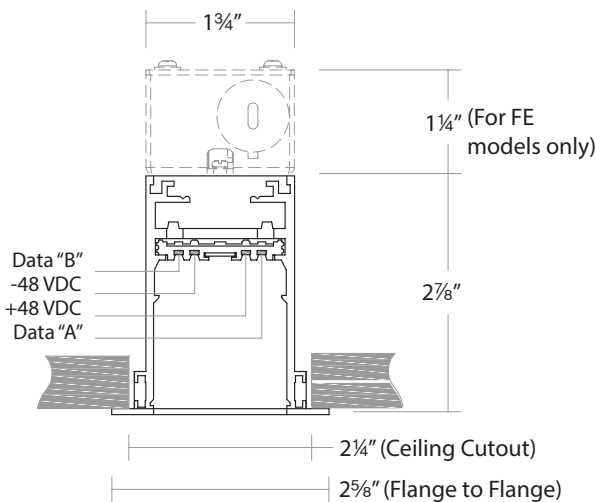

VENTRIX Channels are intended for use with WAC Lighting's VENTRIX system. Reference specific VENTRIX components instructions for complete system installation.

SPECIFICATIONS	
<b>Input:</b>	48 VDC (Maximum 12.5A), Data via VENTRIX CPU
<b>Installation:</b>	IC, Dry Location, Drywall Ceiling and Wall.
*Do not install concealed or extended through building walls.	

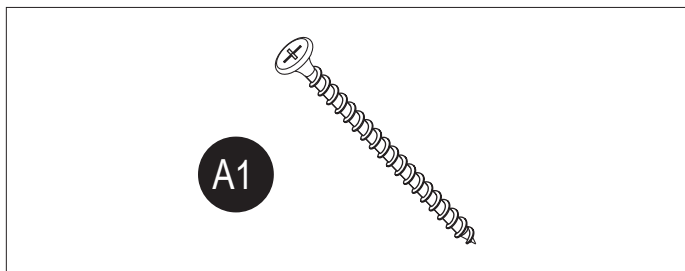

Included Hardware
Mounting Screw
3 pcs (1 ft channel)
3 pcs (1.5 ft channel)
4 pcs (4 ft channel)
5 pcs (6 ft channel)
8 pcs (8 ft channel)
12 pcs (12ft channel)

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave

Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12



### VENTRIX RECESSED TRIM CHANNEL SAMPLE LAYOUT

#### CHOOSE YOUR CHANNELS AND CONNECTORS

- Power feed from feed end channel or feed end junction box to energize your run.
- Support VENTRIX with screws into rear blocking, 1/4"-20 tie rod (by others), or stem or aircraft cables to plenum ceiling. Minimum two supports per 4ft or less section. Minimum three supports per 6ft, 8ft, and 12ft section.
- For patterns, choose L, T, X, or corners.

**Note:** VENTRIX is field cut at end of run or between channels using below bus bar connector S2C-IB. For patterns and custom length channels, consult factory.

#### CHOOSE YOUR ELEMENTS

- Refer to element specifications to appropriately select elements.
- Total the wattage of the system.

#### CHOOSE YOUR CONNECTED POWER UNIT (CPU)


- Select remote mount CPU.
- Select appropriate wattage based on total system wattage.

**Note:** Recommended sizing up as feasible for increased system capability.

#### ACCESSORIZE

- Add channel covers, lenses, or glare control accessories as desired.

A	S2CT08-FE	8FT FEED END RECESSED CHANNEL	G	S2CT-IC	RECESSED INSIDE CORNER
B	S2CT12	12FT RECESSED CHANNEL	H	S2CR-CLIP	1/4"-20 TIE ROD MOUNTING CLIP
C	S2CT04	4FT RECESSED CHANNEL	I	S2C-S96	STEM SUSPENSION
D	S2CT08	8FT RECESSED CHANNEL	J	S2C-C96	CABLE SUSPENSION
E	S2CSR-I	I CONNECTOR	K	S2CPU-R320-S-BK	REMOTE CPU
F	S2CT-L	RECESSED L CONNECTOR	L	BY OTHERS	FIELD WIRING TO CPU

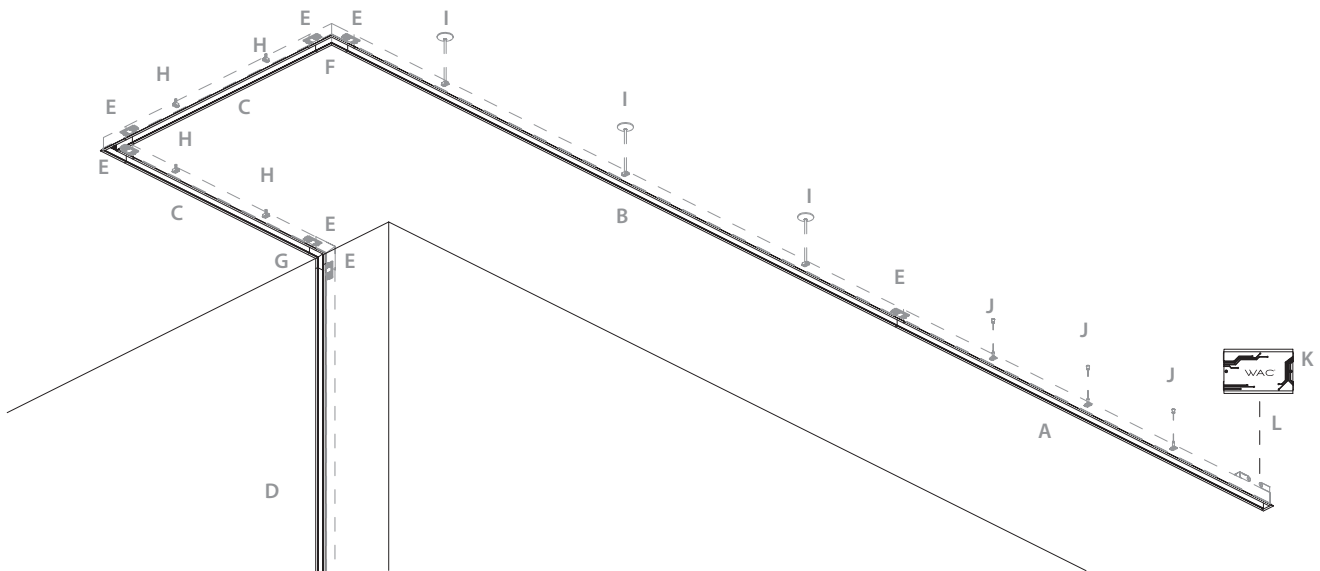

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave

Ontario, CA 91761


# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12



**FIG. 1 Cutout dimensions**

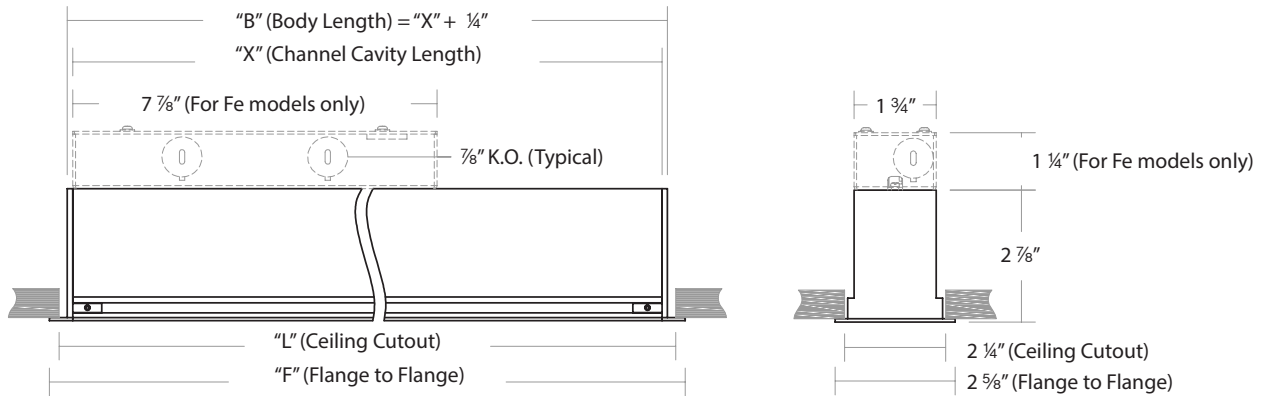


### Individual Dimensions

Model	"X" Channel Cavity Length	"B" Body Length	"L" Ceiling Cutout	"F" Flange to Flange
S2CT01	12"	12 1/4"	12 1/2"	13"
S2CT01.5	18"	18 1/4"	18 1/2"	19"
S2CT04	48"	48 1/4"	48 1/2"	49"
S2CT06	72"	72 1/4"	72 1/2"	73"
S2CT08	96"	96 1/4"	96 1/2"	97"
S2CT12	144"	144 1/4"	144 1/2"	145"

### CONTINUOUS RUN OF CHANNEL DIMENSIONS CEILING CUTOUT "L" = "X" + 1/2"

Example 8' + 12' RUN	"X" Channel Cavity Length	"B" Body Length	"L" Ceiling Cutout	"F" Flange to Flange
	240"	240 1/4"	240 1/2"	241"

**FIG. 2 Recessed Mounting Options Overview**

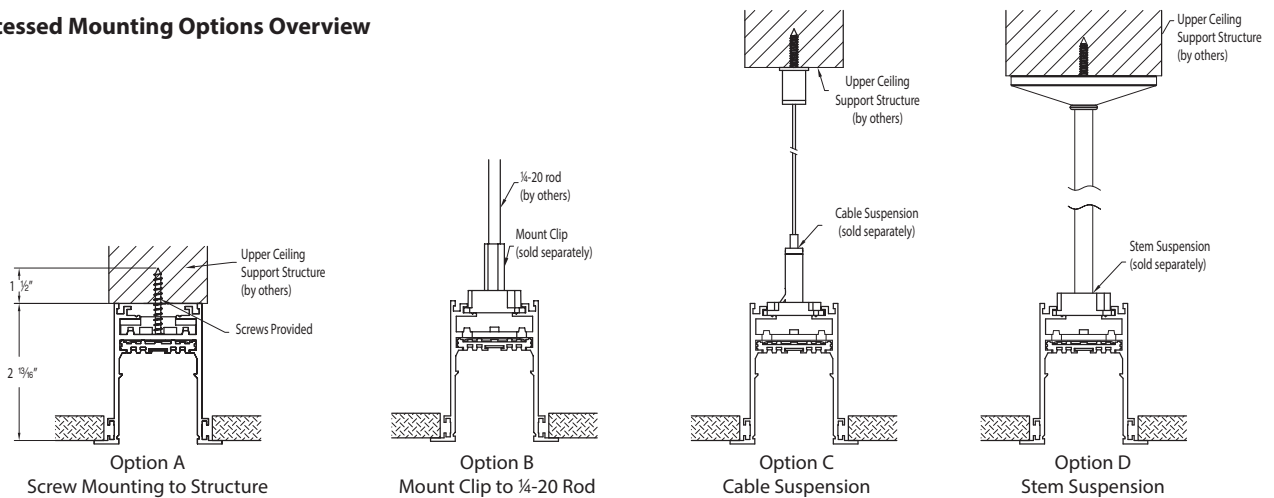

### Minimum recommended number of support points per channel

S2CT01	S2CT01.5	S2CT04	S2CT06	S2CT08	S2CT12
2	2	2	3	3	3

1. VENTRIX Recessed Trim Channel is possible to install in various methods. (See FIG. 2). Installer to select appropriate hardware and confirm appropriate installation means to meet project requirements.

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave


Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel


S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12

**VENTRIX**  
BY WAC

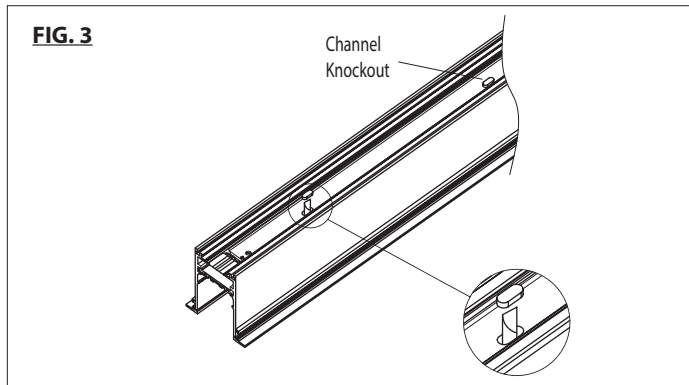


### Option A: Screw Mounting to Structure Installation


A1. Prepare channel by removing necessary mounting point knockouts using a screwdriver and hammer. Take care to protect channel integrity and finish (See FIG. 3).

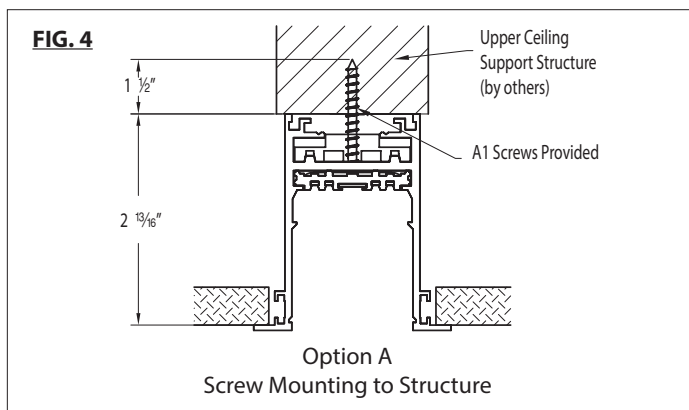

A2. Secure channel to upper ceiling structure using screws provided (See FIG. 4).

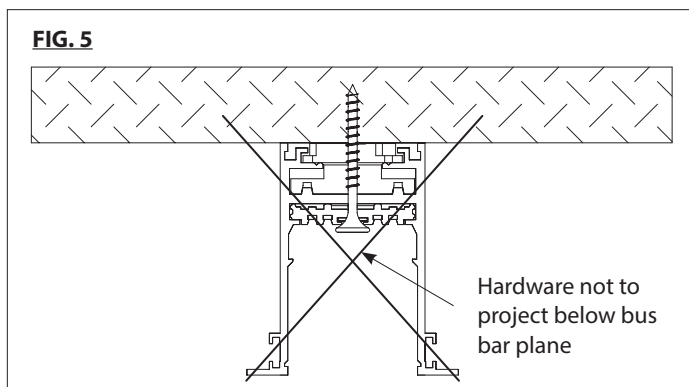

**CAUTION:** Channels hardware mounting slots accommodate hardware of specific size. Use only provided hardware or hardware of equivalent head size. Do not use hardware which protrudes below the channel bus bar or system operation could be affected (See FIG. 5).

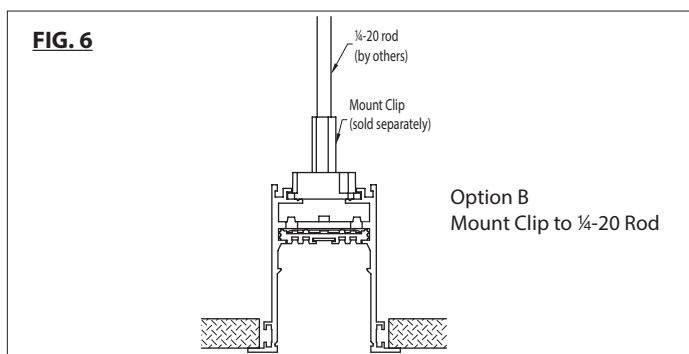

### Option B: Mount Clip to 1/4-20 Rod Installation

B1. Install 1/4-20 threaded rod in appropriate locations (See FIG. 6).

wacighting.com  
Phone (800) 526.2588  
Fax (800) 526.2585

Headquarters, East Manufacturing Facility  
44 Harbor Park Drive  
Port Washington, NY 11050

South East Manufacturing Facility  
1600 Distribution Ct  
Lithia Springs, GA 30122

Central Manufacturing Facility  
1700 South J Elmer Freeway, Ste 100  
Cedar Hill, TX 75104


West Manufacturing Facility  
1750 S Archibald Ave  
Ontario, CA 91761

# INSTALLATION INSTRUCTIONS


## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12


**VENTRIX**  
BY WAC

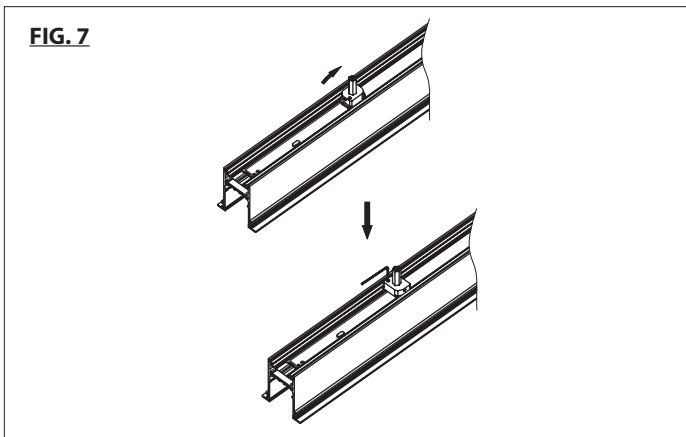

B2. Install the mounting clip on the channel then lock it with allen key (See **FIG. 7**).

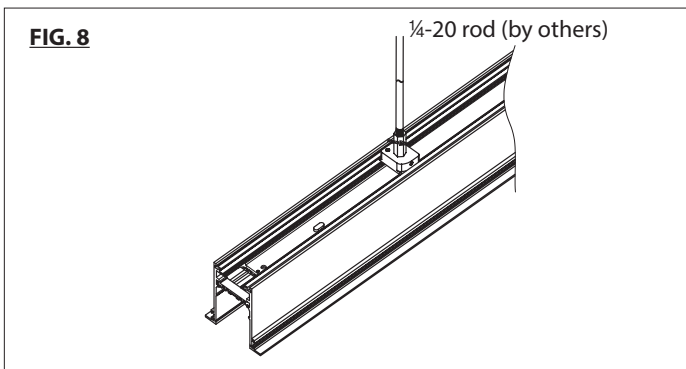



B3. Hang the channel, rotate the hexagonal stud on the mount clip to install and secure the 1/4-20 rod. (See **FIG. 8**).

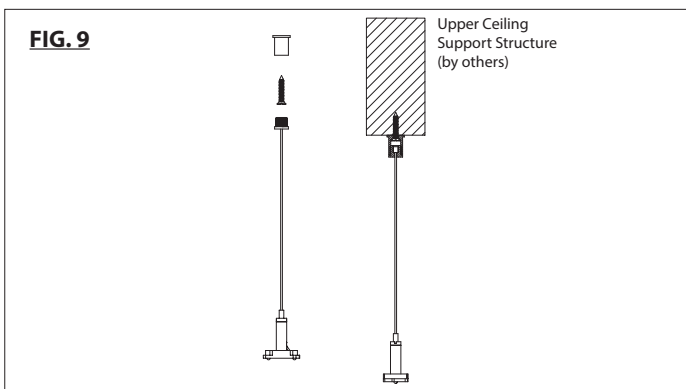

### Option C: Cable Suspension Installation

C1. Remove top from cable suspension mount and install to upper ceiling support structure. Reinstall cable assembly onto top (See **FIG. 9**).

C2. Install the bottom of suspension cable assembly on the channel then secure it in place with allen key. Adjust cable to appropriate height using cable gripper adjustment (See **FIG. 10 & FIG. 11**).

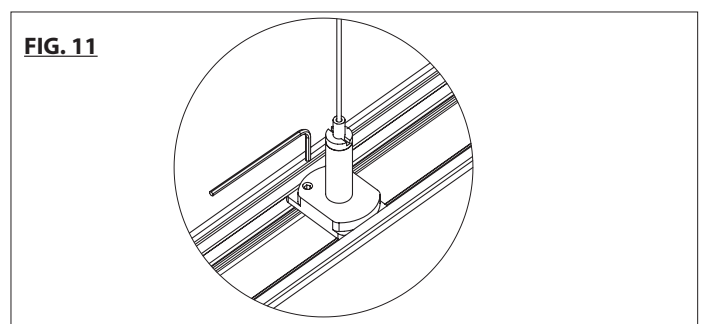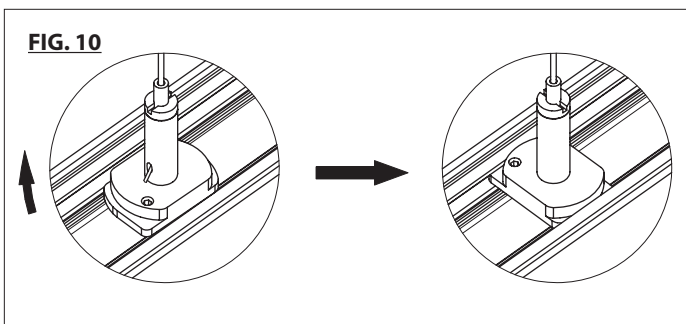

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave


Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel


S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12

**VENTRIX**  
BY WAC

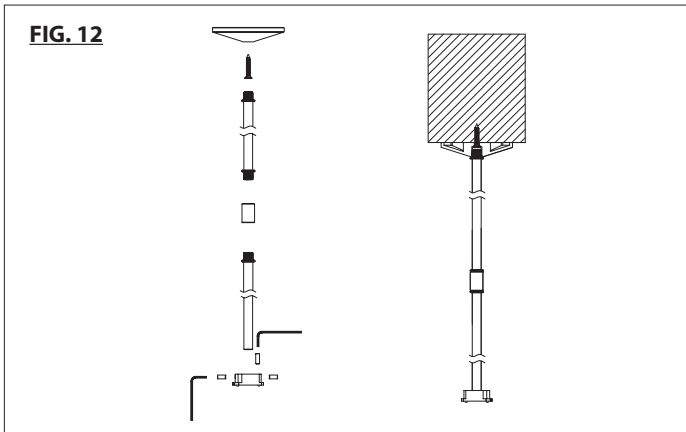


### Option D: Stem Suspension Installation

D1. Remove top from stem mount and install to upper ceiling support structure. Cut (if necessary) bottom of stem to appropriate height. Reassemble stem assembly. Confirm all connection points are secure (See **FIG. 12**).

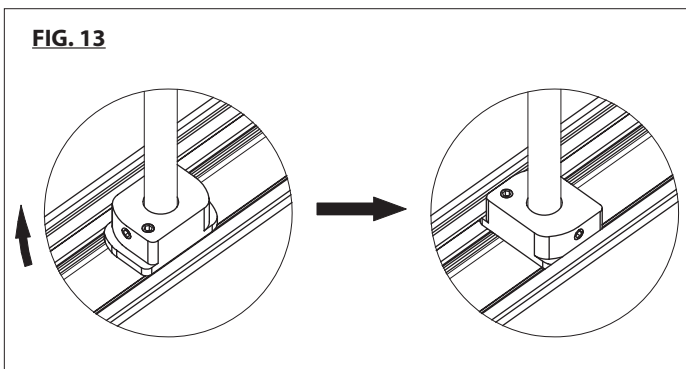

D2. Install the bottom of stem assembly on the channel then secure it in place with allen key. Confirm all connection points are secure (See **FIG. 13** & **FIG. 14**).

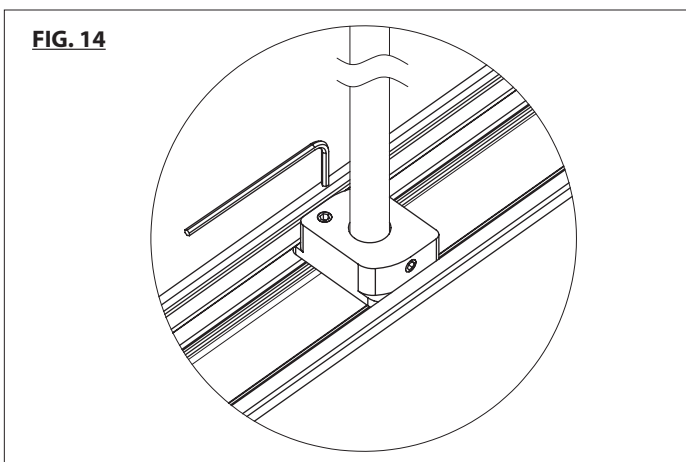

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave





Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12


**VENTRIX**  
BY WAC

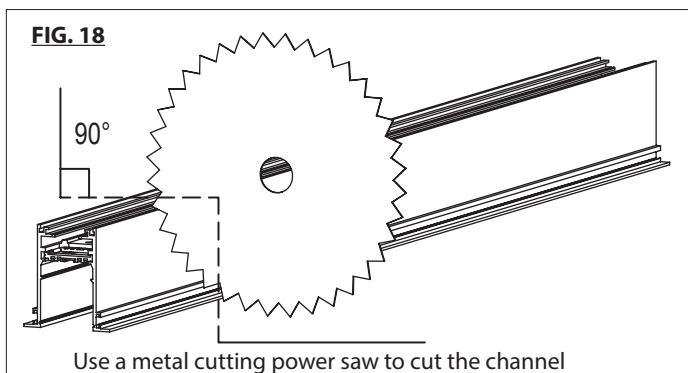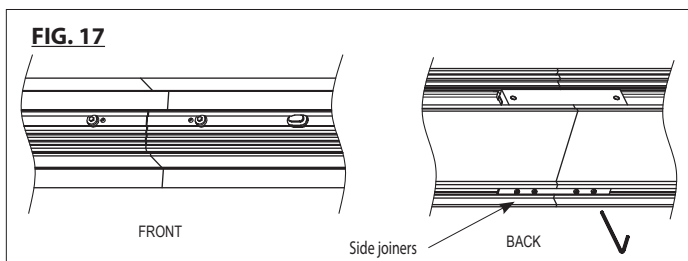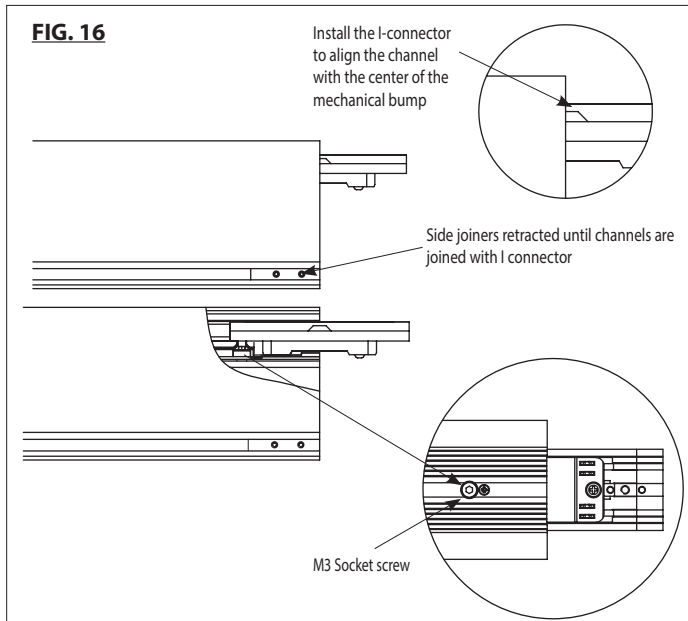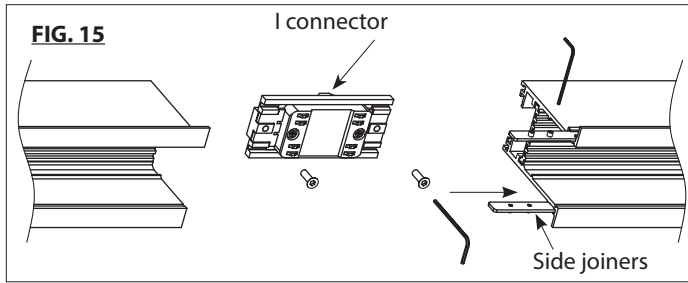

### Channel to channel connection (Factory channel ends for uninterrupted bus bar)

1. Join channel sections mechanically and electrically with I connector and channel side joiners (See FIG. 15).

2. Insert I connector into one channel. Be sure I connector is fully inserted with mechanical bump aligned. A gentle tap with a rubber mallet may be necessary. Insert socket screw straight and gently tighten. Take caution not to strip threads. Note: Use of power tools not recommended (See FIG. 16).

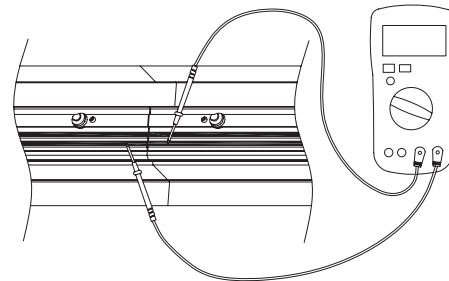

**Note:** Confirm continuity across each of the 4 bus bars after I connector is secured and prior to completing installation.

3. Repeat for other side. Lock I connector with screws from bottom of channel. After I connector is installed on both ends, slide side joiners to span both sides of channels and secure by tightening set screws. **Note:** Use of power tools not recommended (See FIG. 17).

### Channel Cutting

1. Last channel in a run can be field cut to terminate the run. Use a chop saw with good condition blade rated for metal cutting. Confirm cut is perpendicular and remove any burrs or filings. Reattach end cap (See FIG. 18).

**Note:** Field cuts result in end of run condition and accepts end caps. Cut ends are not compatible with general channel connectors.

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave





Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12

**VENTRIX**  
BY WAC

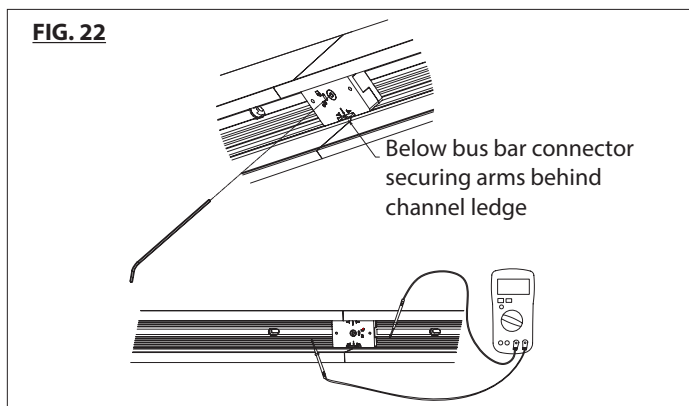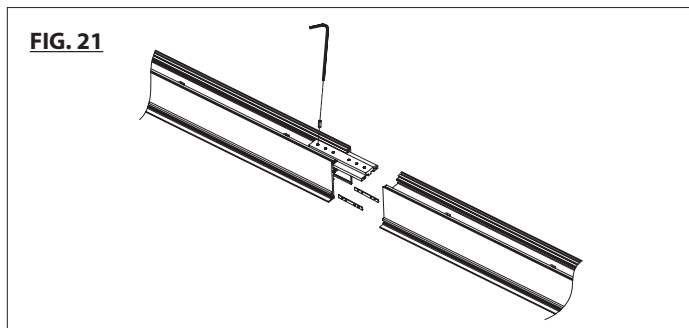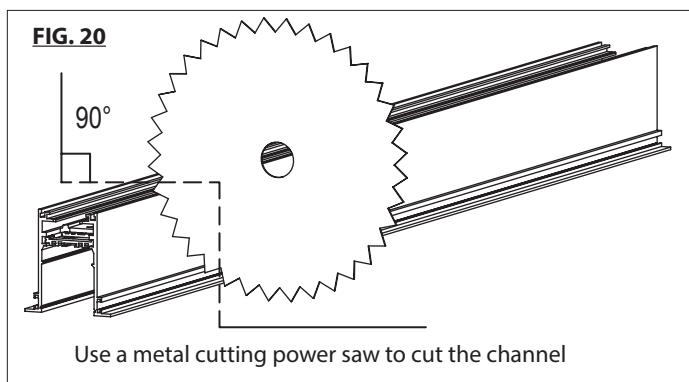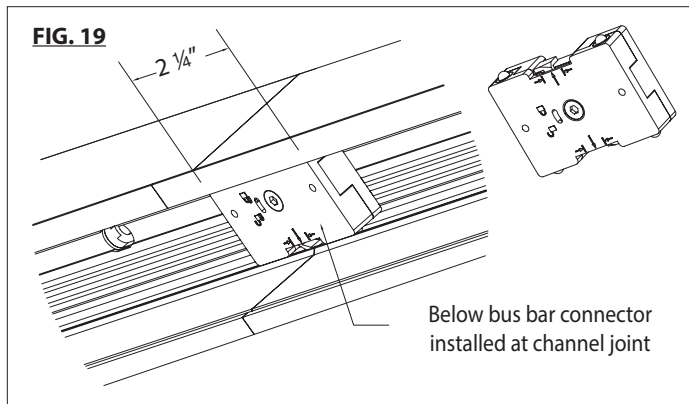

### Channel to channel connection (Field cut channel end(s) for interrupted bus bar)

1. If necessary to field cut channel at channel to channel connection, it is possible to create joint mechanically and electrically using below bus bar I connector kit S2C-IB-BK. Note: with this setup, a connector will be installed below bus bar plane which may interfere with installation of fixture elements. Confirm this will be acceptable in project prior to proceeding (See **FIG. 19**).

**Note:** Some 2' and 4' VENTRIX fixture elements can span below bus bar connector. Reference line drawings on spec sheets.

2. Field cut appropriate channel. Use a chop saw with good condition blade rated for metal cutting. Confirm cut is perpendicular and remove any burrs or filings. (See **FIG. 20**).

3. Insert top connector (S2C-ID) into top side of channel and channel side joiners into side profile. Position connector and joiners centered between channels and tighten all set screws. (See **FIG. 21**).

4. To make electrical connection, insert below bus bar connector into bus bar at channel joint. Center the connector in the appropriate position (channel joint is between connector arrows) and push in firmly. Securing arms should be behind channel ledge. Then, tighten central screw to lock the connector in position. Confirm connector is mechanically secure and has electrical continuity across. (See **FIG. 22**)

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave

Ontario, CA 91761




# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel


S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12

**VENTRIX**  
BY WAC

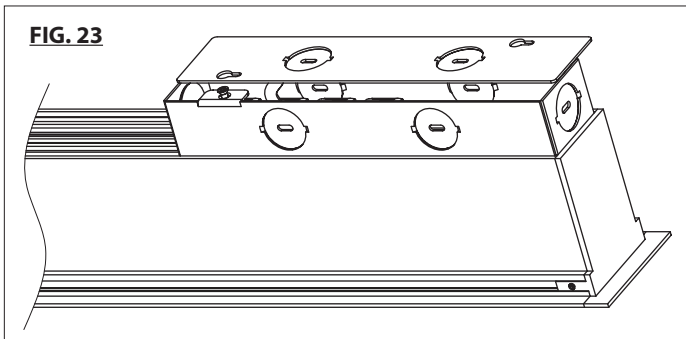

### Channel Wiring (S2CT\*-FE)

1. Loosen the screws on the junction box and remove the cover (See FIG. 23).

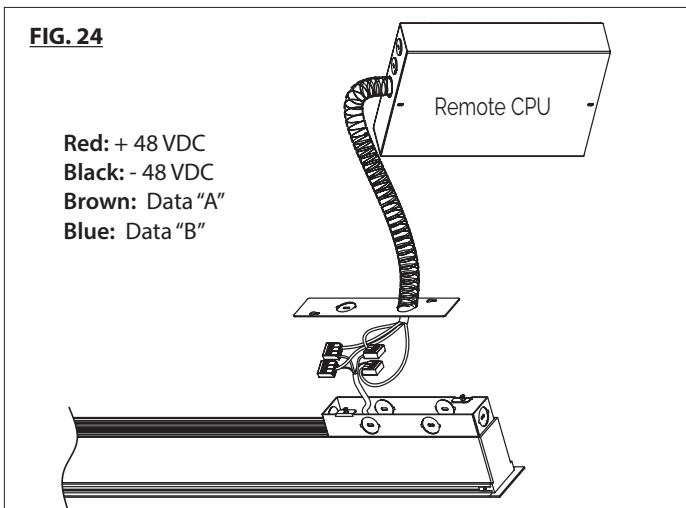


2. Remove desired knockout for wiring. Make wire connection between CPU and Channel with appropriate conductors and conduit (by others) (See FIG. 24).

Reference VENTRIX CPU instructions for CPU specific instructions.



### Wiring inspection

1. It is possible to inspect wiring from inside of channel. Loosen two small screws located at the feed end of the channel to remove small section of channel bus bar and gain access to wiring (See FIG. 25).

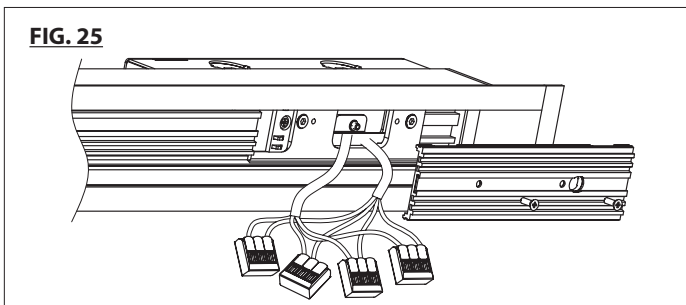

### Channel Wiring with Feed End Junction Box (S2CT-FEB)

1. Join feed end junction box and adjacent channel section with factory cut end mechanically with screw and channel side joiners (See FIG. 26).
2. Loosen the screws on the junction box and remove the cover. Remove desired knockout for wiring. Make wire connection between CPU and Channel with appropriate conductors and conduit (by others). Replace bottom cover after wire connection is completed (See FIG. 27).

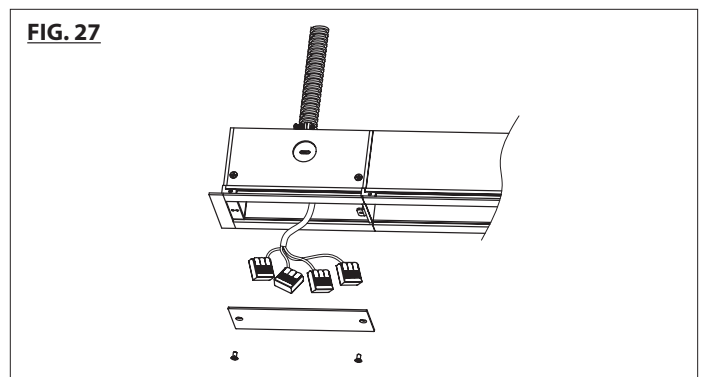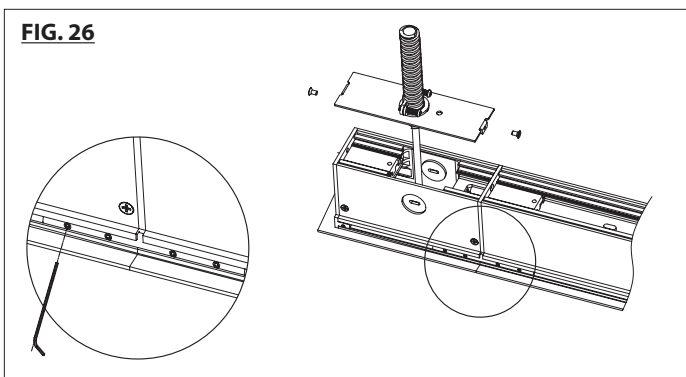

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility





1750 S Archibald Ave

Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## Recessed Trim Channel

S2CT01, S2CT01.5, S2CT04, S2CT06, S2CT08, S2CT12

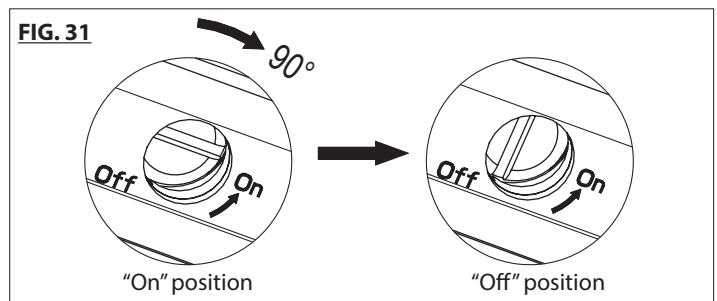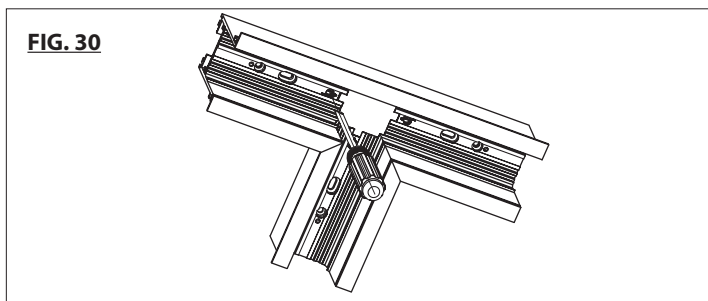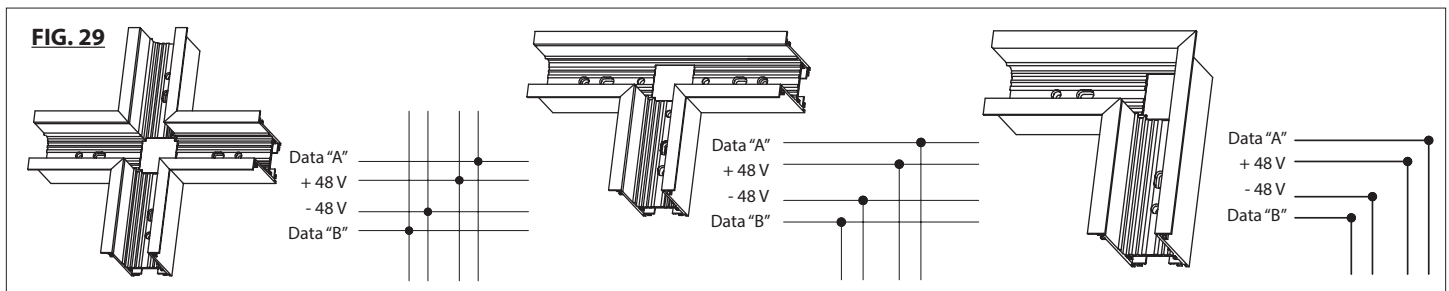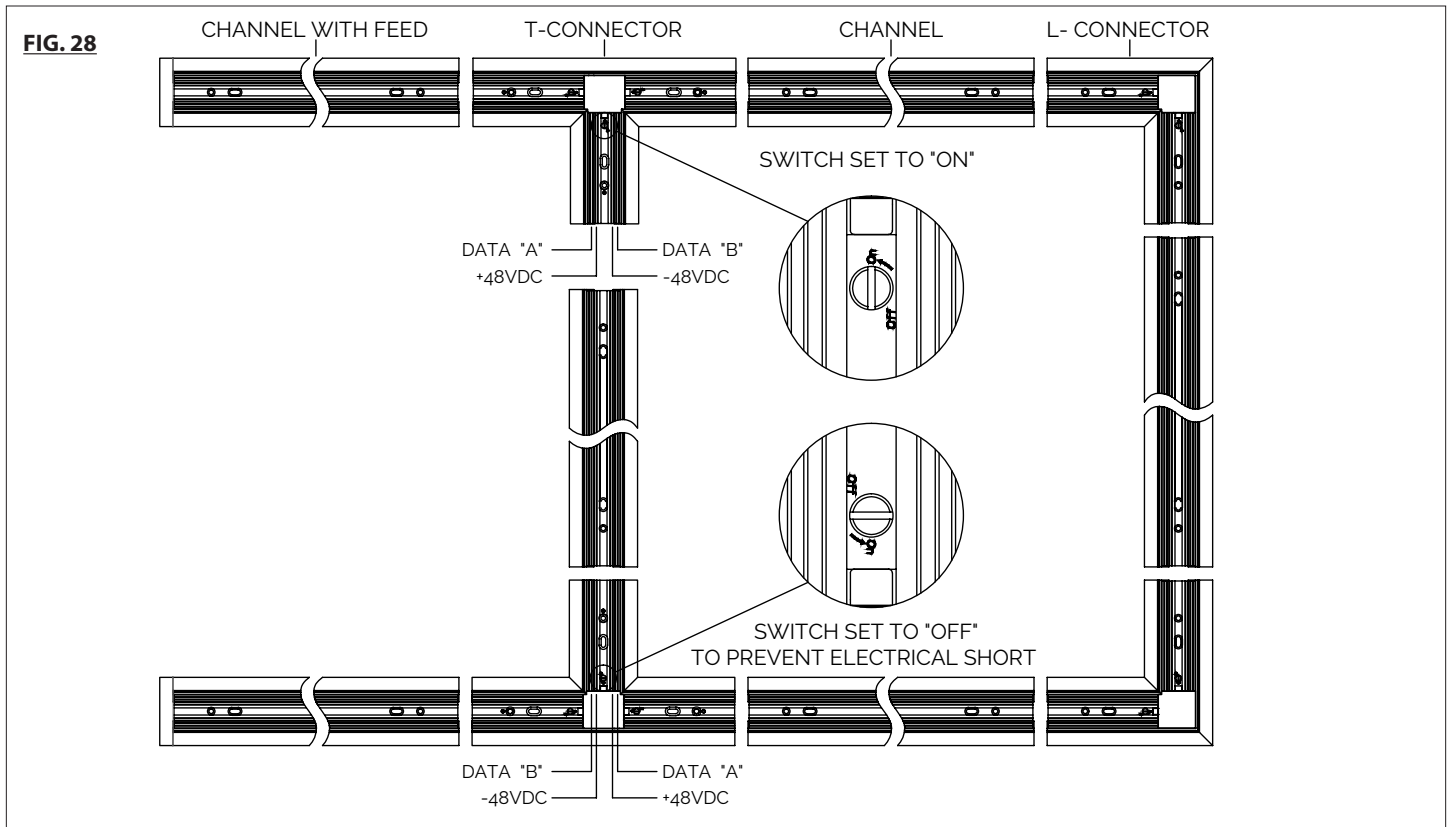

### Channels with Patterns

- For channels consisting of patterns, it is important to confirm no electric short prior to energizing system. Review pattern and confirm if it is possible for short (See **FIG 28**, **FIG 29**) To avoid circuit short, there is a continuity switch on channel connectors. Where appropriate, use the a flat-blade screwdriver to align the slot with on and turn it 90° clockwise, to turn off and disconnect continuity from that leg (See **FIG. 30**, **FIG 31**).

wacighting.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1750 S Archibald Ave

Ontario, CA 91761