

WALL SCONCE FIXTURE INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

1. Secure the cross bar with mounting screws to the outlet box.
 2. Pull out the outlet wire and ground wire from the Outlet Box. Make wire connections:
 - Ribbed wire(w/o marking) from light to White Wire from power source.
 - Smooth wire(w/ marking) from light to Black Wire from power source.
 - Loop the Ground Wire to Mounting bar with a Green Screw.
 3. Attach the back plate against the outlet box and cross bar, secure with the flat head screws on the top and bottom of the back plate.
 4. Put the socket sleeve onto the socket.
 5. Install bulbs: (bulbs not included)
- (Please don't exceed the maximum capacity that recommended on the Sockets).

INSTALLATION IS NOW COMPLETED.

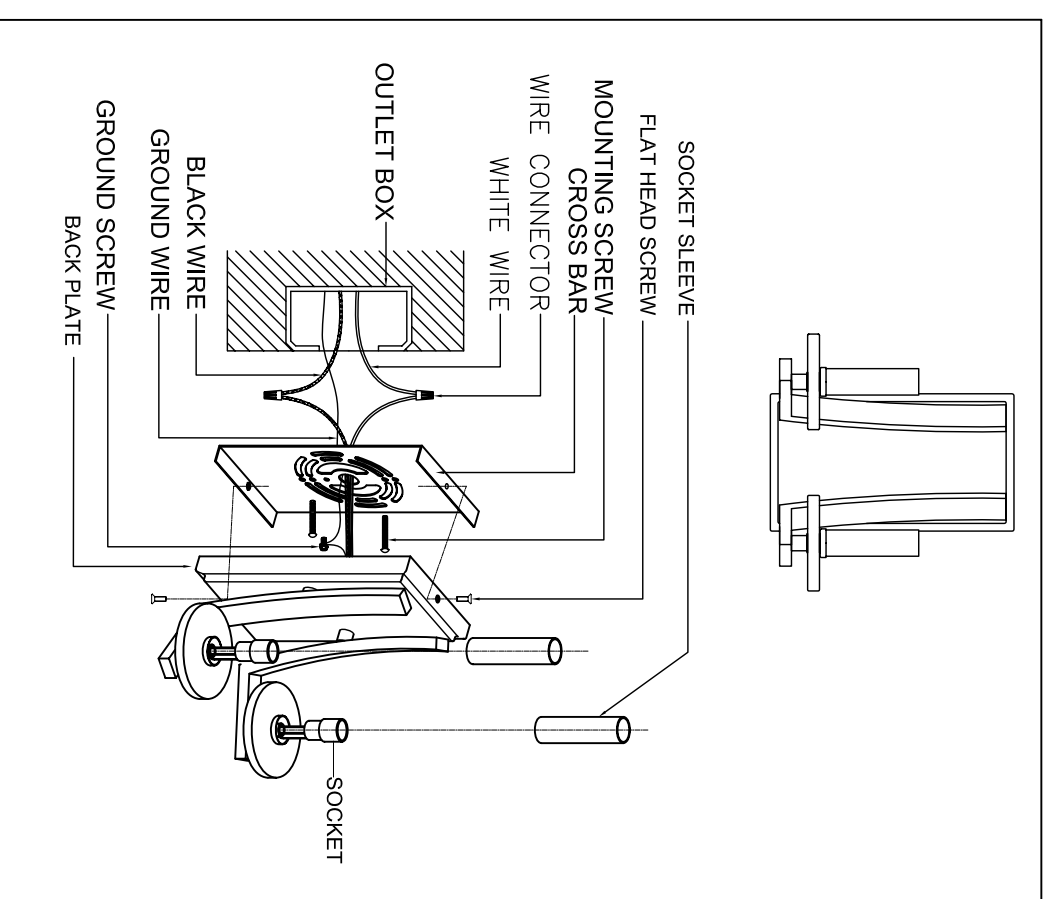

FOR ITEM 2010-2S-BRZ, 2010-2S-BN