

B7492 JUNIPER BATH (GOLD FINISH) INSTALLATION INSTRUCTIONS







DISCONNECT POWER BEFORE RE-LAMPING OR WIRING THE FIXTURE READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

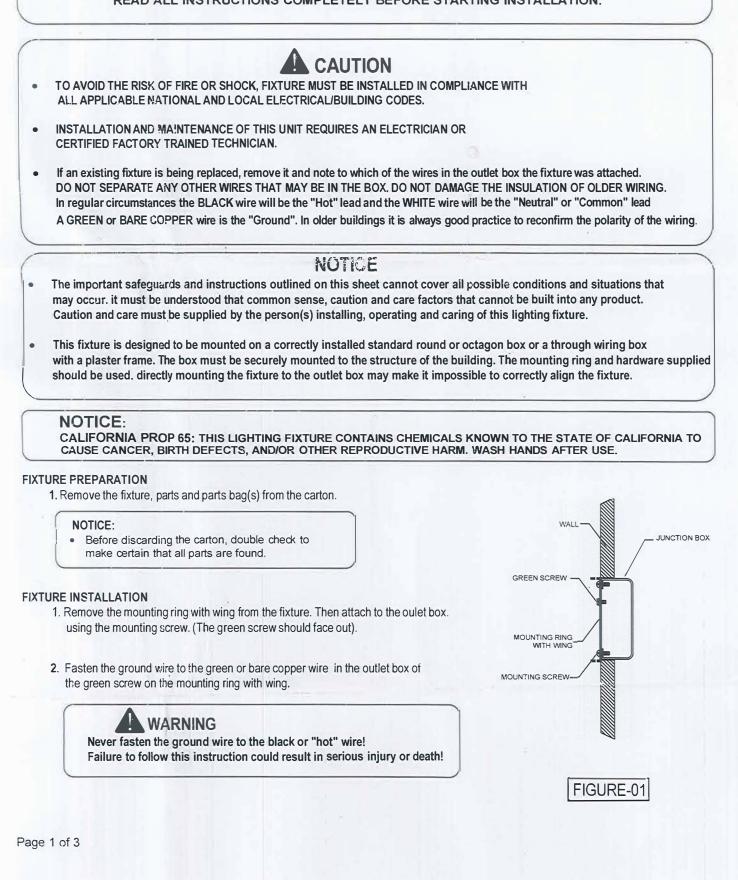


3. Fasten the white fixture lead to the white wire in the outlet box. Fasten the wires together with an approved fastener (wire nut). Starting about 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener.

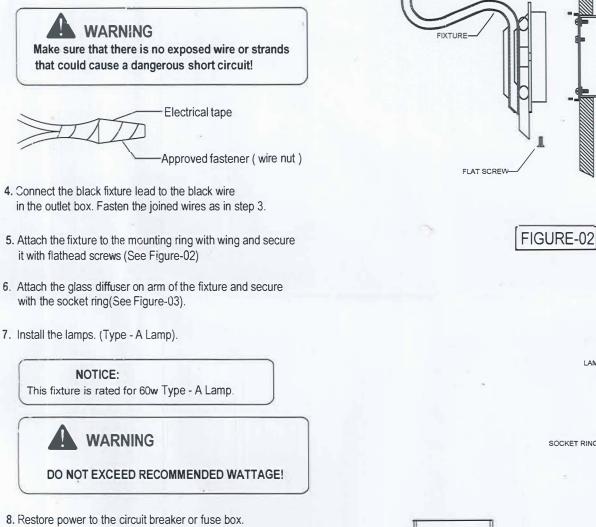

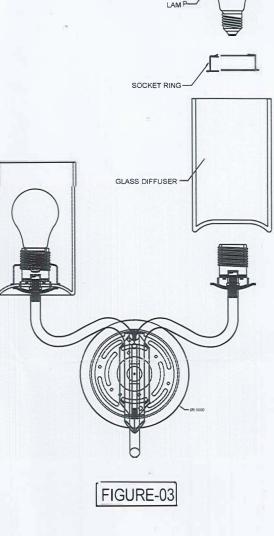

T

ITEM ND.	PART NUMBER	DESCRIPTION
1	R-PM42-HRD	MOUNTING HARDWARE
2	R-PM42-ESK	SOCKET
3	R-PM42-GLS	GLASS

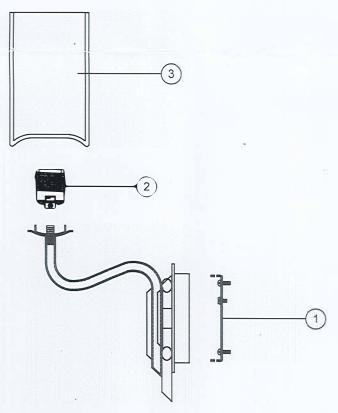

Page 3 of 3