

# Perno Medium Hanging Shade

CP1394 | 1.0

GENERATION LIGHTING  
PENDANT

## GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

**SAVE THESE INSTRUCTIONS!**

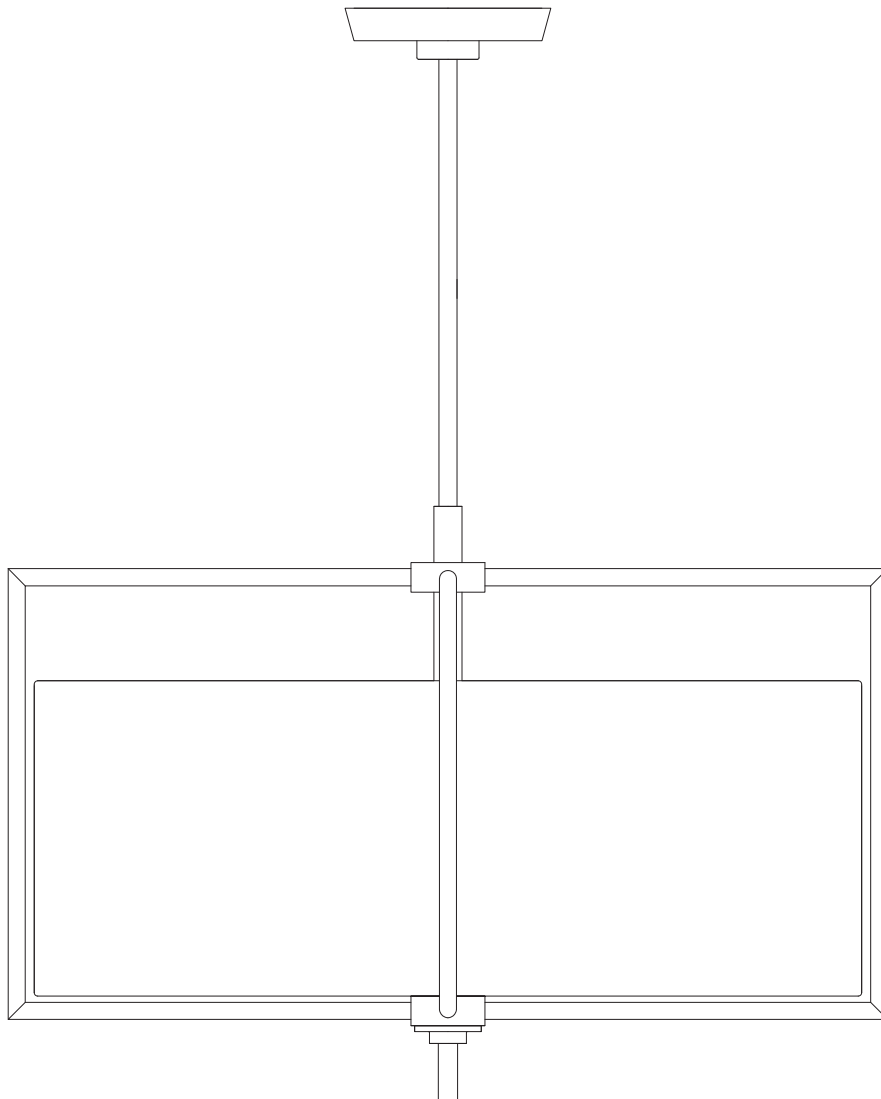

GENERATION LIGHTING  
7400 Linder Ave., Skokie, IL 60077  
T 847.410.4400 | F 847.410.4500  
www.generationlighting.com

# Install the Fixture

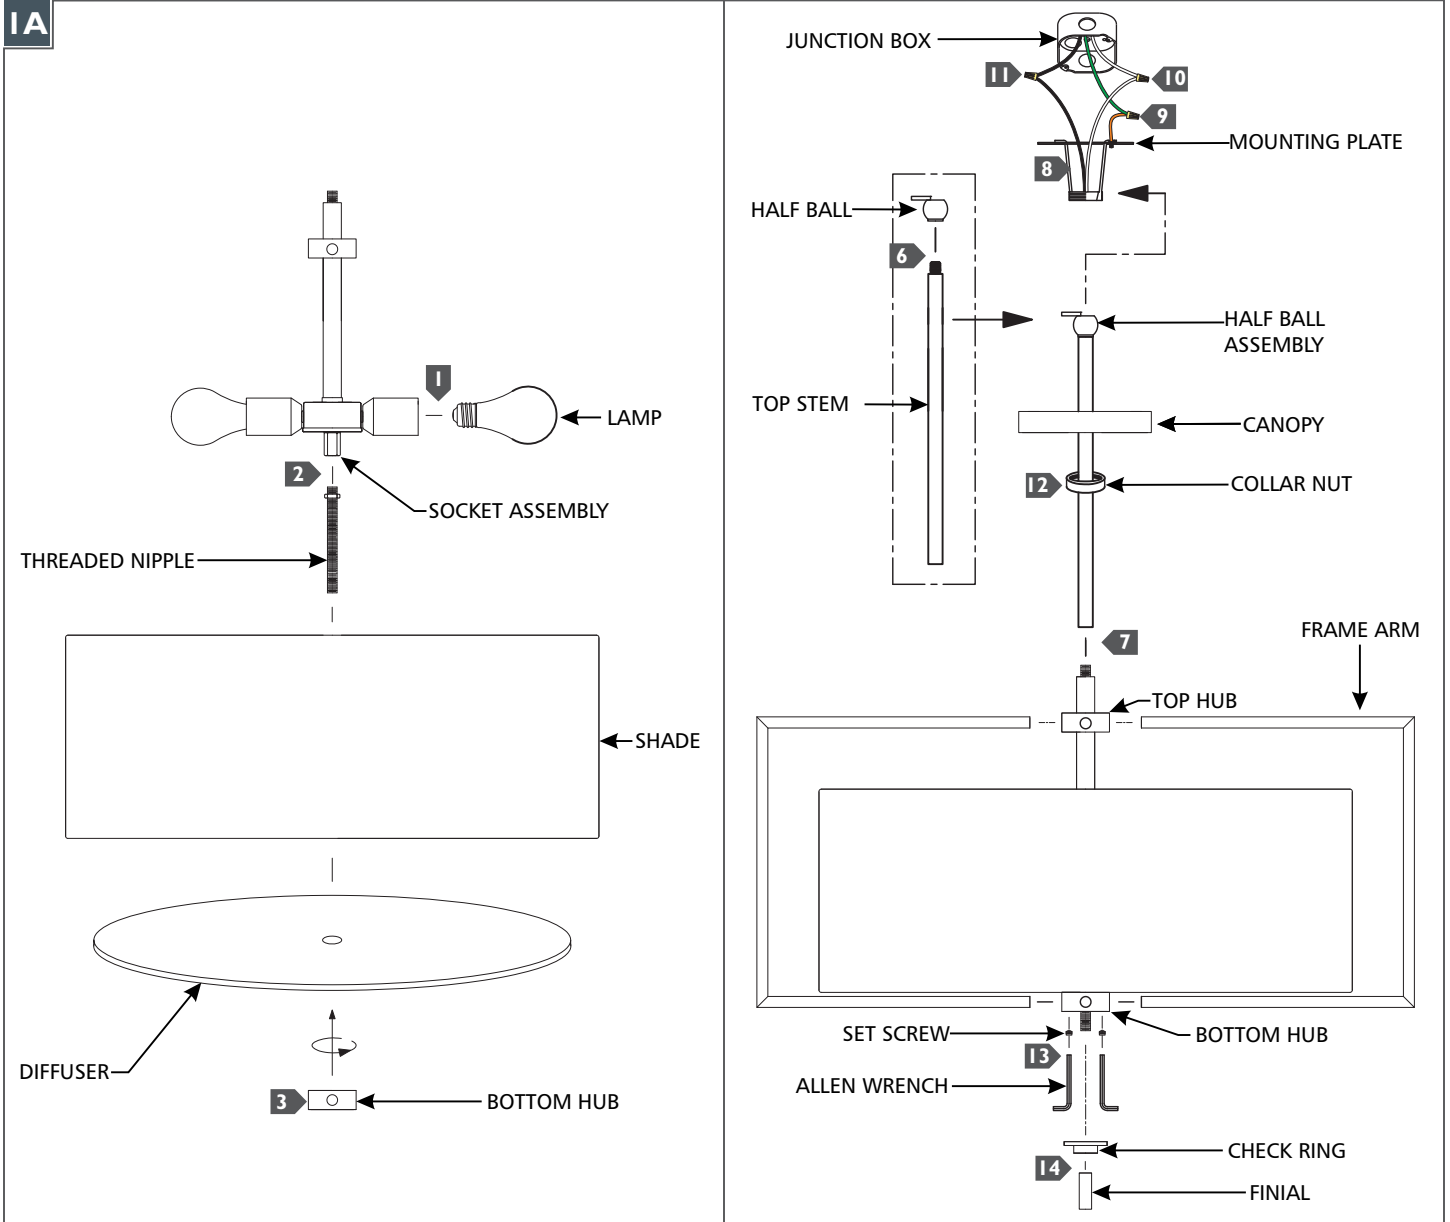

- 1** Screw the lamps into the sockets. Refer to the label on the socket for max wattage information.
- 2** Screw the short end of the threaded rod into the socket assembly.
- 3** Place the shade, then the diffuser onto the threaded rod and secure in place by screwing the bottom hub onto the threaded pipe.
- 4** Determine the wanted height or look of the fixture with the provided stems and assemble them by screwing them together.
- 5** Feed the fixture wires through the stem assembly and screw the assembly to the fixture.
- 6** Screw the half ball to the top stem.
- 7** Feed the fixture wires through the collar nut, canopy, and the half ball assembly then screw it onto the top of the stem assembly/fixture.
- 8** Align and secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 9** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 12** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.
- 13** Install a frame arm by inserting one end in the top hub and the other in the bottom hub, then secure it in place with a set screw, using the provided Allen wrench, in the bottom hub. Repeat for all arms.
- 14** Install the check ring onto the threaded nipple and screw the finial in place.