
UNPACKING NOTICE

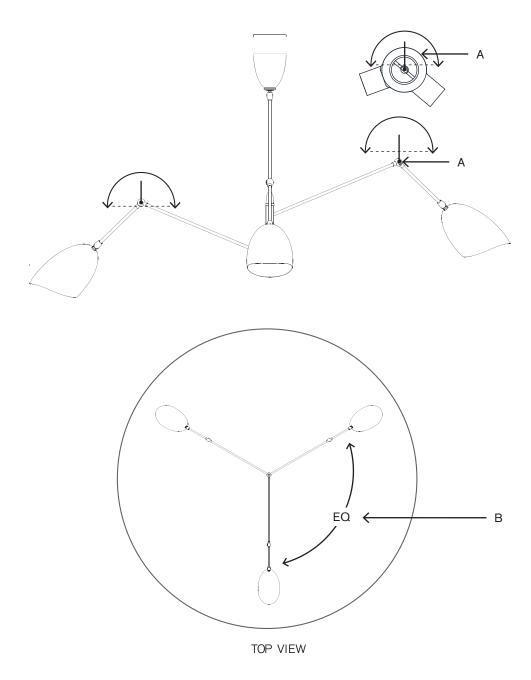


Sommerard Medium Chandelier Item # ARN5008

DUE TO THE SCALE, WEIGHT, AND PIVOTING FUNCTION OF THIS DESIGN, ITEM MUST BE HANDLED WITH CARE TO AVOID POTENTIAL DAMAGES.

Two persons are recommended for this install.

- 1. Loosen the cap nuts with a coin, pivoting arms (A) allow direction of light to be positioned as needed, then tighten it.
- 2. Rotate triple arm position with equal distance (B) for proper balance during installation.

ASSEMBLY INSTRUCTIONS

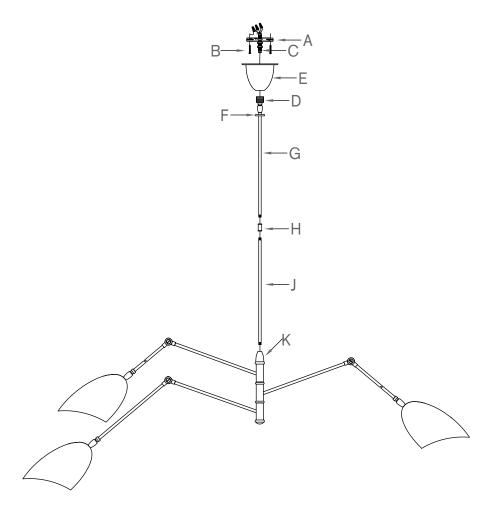



WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- Carefully remove all parts from the carton.
- 2. Screw the bottom nipple of lamp pole (J) into the top opening of light fixture (K).
- Screw connective tube (H) onto the top nipple of lamp pole (J). 3.
- 4.
- Screw the bottom nipple of lamp pole (G) into top opening of connective tube (H) Feed wire through pole (J), connective tube (H), pole (G), mounting loop (D) and come 5. out from the back side of canopy (E).
- 6. Unscrewing canopy ring (F), slide canopy (E) and canopy ring (F) on pole (G).
- Attach mounting strap (A) to ceiling outlet box and secure with mounting screws (B). 7.
- Insert top thread nipple (C) in mounting strap (A). 8.
- Attach mounting loop (D) to thread nipple (C).
- Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green 10. or copper), fasten together with a plastic wire connector. Tighten wrap the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
- Connect neutral wire from fixture (ridges molded wire) to the neutral wire from the junction box 11. (usually white). Fasten both wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Be sure no wire strands are exposed.
- Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black) from the 12. junction box. Fasten each together with a plastic wire conncetor and wrap the connection with eletrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
- 13. Tuck the wire connections neatly into the ceiling outlet box.
- 14. Slip canopy (E) to ceiling and secure with canopy ring (F).
- 15. Insert light bulbs (not included) into sockets.





^{***} Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.