

Please go to www.quoise.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) G9 Clear Xenon Bulbs 40W Maximum, bulbs not included.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact your original place of purchase.

⚠ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.


Do not touch the bulb with bare hands use a cloth or glove.

Package Contents

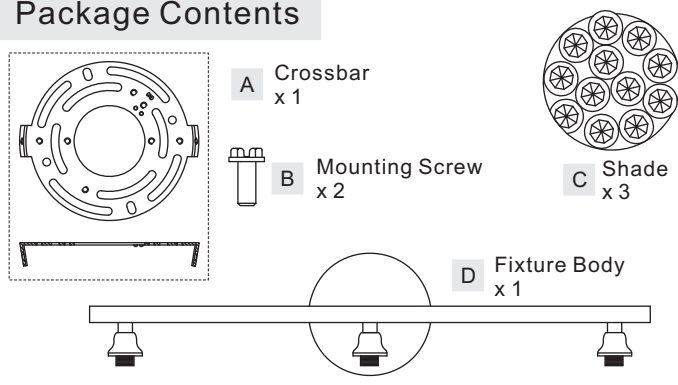


STEP 3 - Install Fixture Body

A. Place the backplate of the Fixture Body (C) over the outlet box and line up the hole on the side of the backplate to the mounting holes on the Crossbar (A). Secure with Mounting Screws (B) and hand tighten until snug.

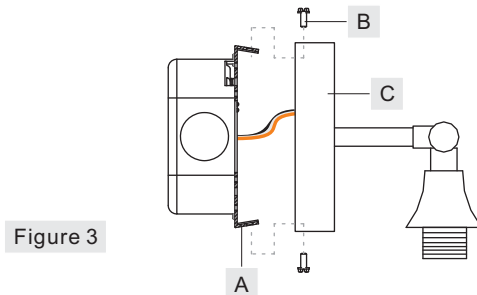

STEP 1 - Install the Crossbar to the junction box


A. Attach the Crossbar (A) to the Outlet Box with the head of the Green Ground Screw facing you. Make sure the Side Bar is vertical before you tighten it to outlet box with outlet box screws (not included). Hand tighten until snug.

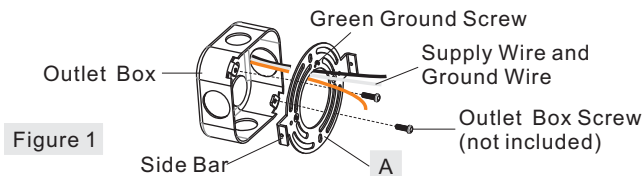

STEP 4 - Install Bulbs and Shades


A. Insert bulbs onto sockets and push snugly into properly.
B. Thread Shade (D) onto the Socket and hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!

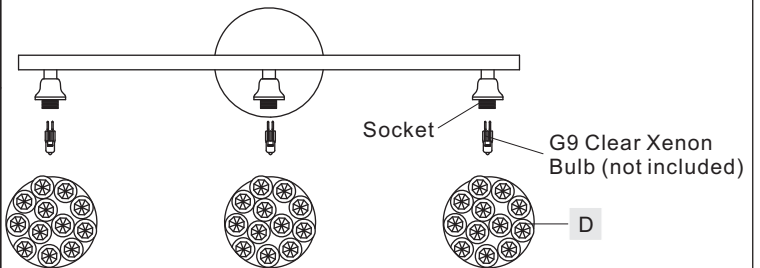

STEP 2 - Wire Connections

A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

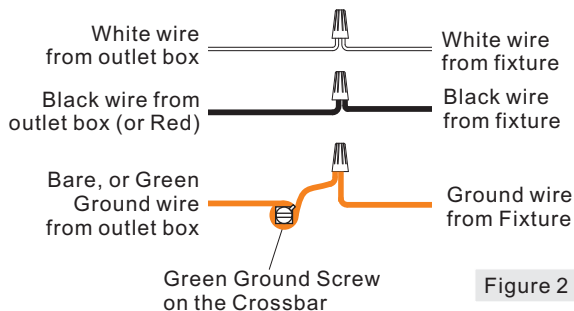

CAUTION FOR BULB REPLACING

- A. When replace bulb, turn off power and allow lamp to cool. For safety purpose, wear gloves and eye protection.
- B. If bulb is scratched or cracked, DO NOT use the lamp to avoid breakage during use or installation.
- C. Use only in fixtures rated for lamps wattage and voltage.
- D. Lamp operate under high pressure generating intense heat. Prevent contact with liquid and combustible materials.

PCSR8603C

FINISH: POLISHED CHROME

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

