


# MOE'S

home collection

## **ASSEMBLY INSTRUCTIONS.**

ABBOTT BOOKSHELF


FR-1041-03

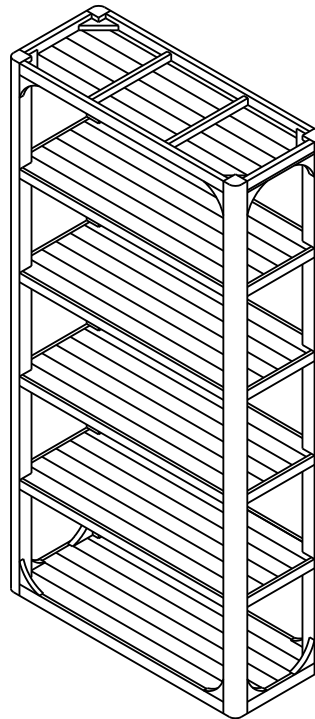







THANK YOU FOR YOUR PURCHASE!

## PARTS AND HARDWARE.

### PARTS LIST

NO.	DESCRIPTION	IMAGE	Q'TY
P1	BOOKSHELF		1

### HARDWARE LIST


NO.	DESCRIPTION	IMAGE	Q'TY
H1	METAL BRACKET		4
H2	NYLON STRAP		2
H3	LONG SCREWS $\varnothing 4 \times 50$		2
H4	SHORT SCREWS $\varnothing 4 \times 20$		2
H5	WALL PLUG M4		2
H6	SCREW DRIVER		NOT PROVIDE

## NOTES.


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

**CAUTION:** The item is heavy, assembly should be performed by two people.

## STEP 1.

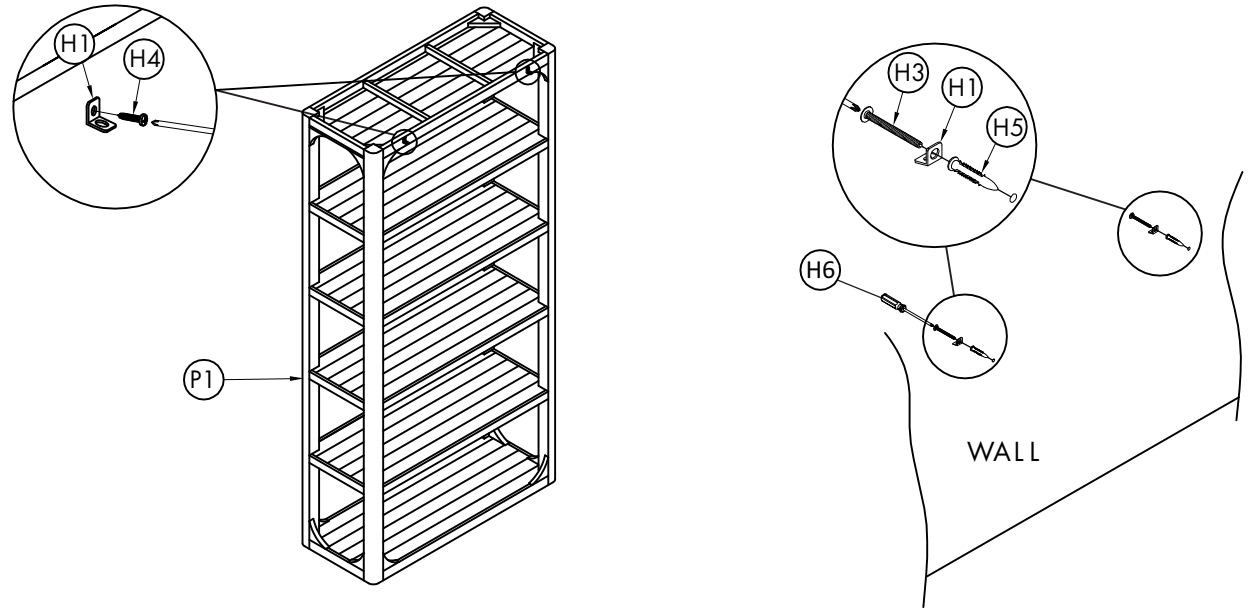

## STEP 2.

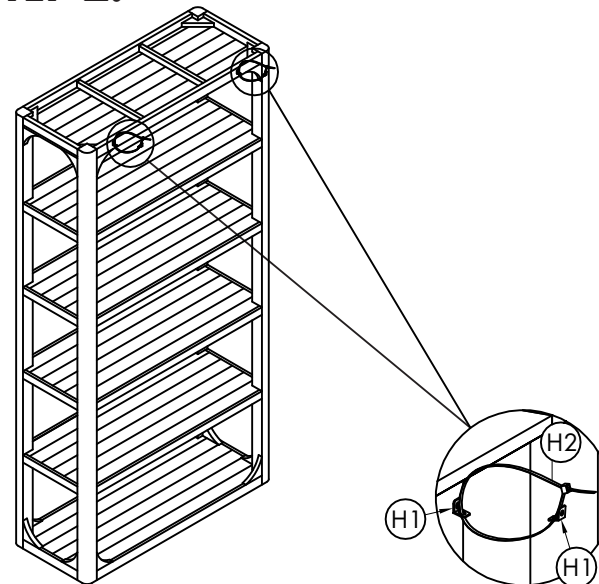

## STEP 3.

