

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DMC23 NAME: Coleman Chandelier

MATERIAL TYPE: Rattan FINISH: Natural

SOCKET TYPE: E26 SOCKET QTY: 4

BULB WATTAGE: 60W/12W CFL/10W LED

VOLTAGE: 110-120 V ITEM NET WEIGHT: 16.6 LBS

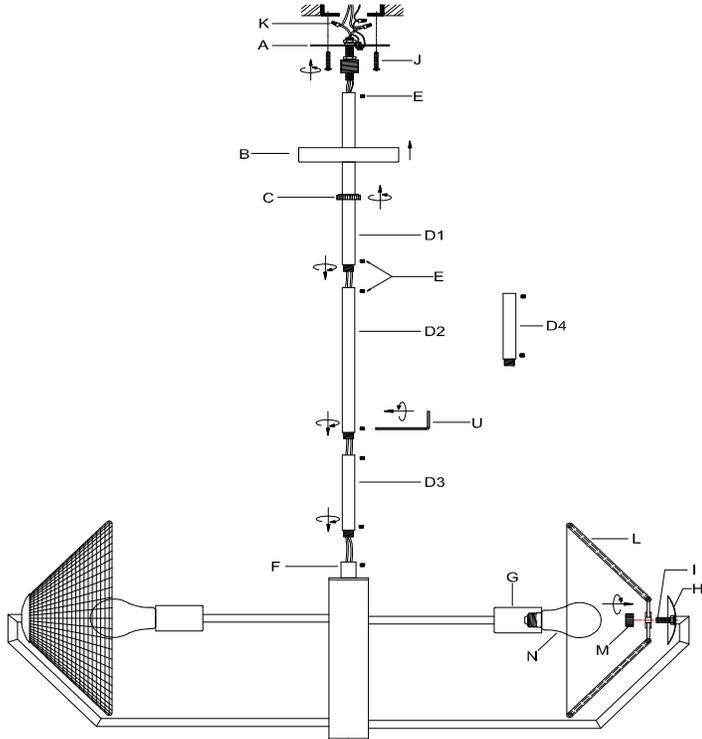

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Sockets (L)	Qty: 4 Pcs
Canopy (B)	Qty: 1 Pc	Metal Cap (H)	Qty: 4 Pcs
Collar Loop (C)	Qty: 1 Pc	Threaded Nipple (I)	Qty: 4 Pcs
Rods (D)	Qty: 4 Pcs	Rattan Shade (L)	Qty: 4 Pcs
Hex Screws (E)	Qty: 9 Pcs	Finial (M)	Qty: 4 Pcs
Lamp Body (F)	Qty: 1 Pc	Bulb(not incl)(N)	Qty: 4 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Connector (K)	Qty: 3 Pcs
Allen Wrench(U)	Qty: 1 Pc

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Please be sure you have all parts indicated before you begin assembly.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Connect lamp body (F) and canopy (B) with rods (D1, D2, D3, D4) when you connect the rods, loosen the small hex screws (E) first then tighten with Allen wrench (U), after all rods are connected. Be sure all the hexangular screws are tight enough. **Note: if you want the fixture to be semi-flush mount, you only need connect lamp body (F) and canopy (B) with rod (D4) .**
6. Remove the mounting plate(A) from the canopy(B) by unscrewing the collar loop (C) in a counterclockwise direction.
7. Pull the electrical cord of j-box through the exit hole of the mounting plate.
8. Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green
9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
10. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
11. Attach the hot fixture wire from the pendant to the to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **Do not reverse the hot and neutral connections or safety will be compromised.**
12. Gently tuck the wire connections neatly into the ceiling junction box.
13. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (J) and tighten screws with a screwdriver.
14. push collar loop upto canopy (B) and tighten onto nipple in mounting plate (A) by turning in a clockwise to secure canopy.
15. Insert 4 type a 60w bulb (H) (or cfl 13w or led 10w, not incl) into the sockets (G).**Do not exceed specified wattage.**
16. Put the 4pcs rattan shade (L) into the end of thr arm of lamp body, and then tighten by the threaded nipple (I) and by final (M) .
17. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.