


MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

ORSON BAR CABINET BROWN



BZ-1157-03

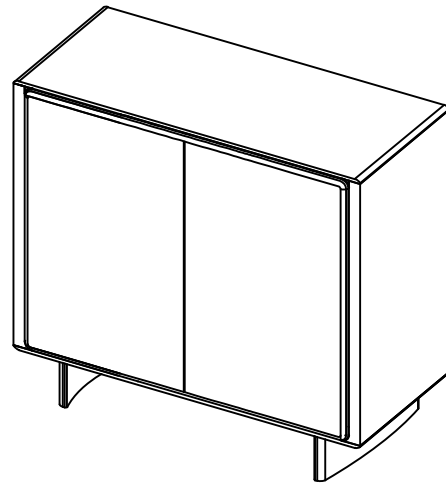

THANK YOU FOR YOUR PURCHASE!



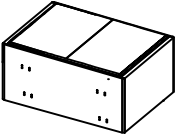

PARTS & HARDWARE.

PART LIST

NO.	DESCRIPTION	IMAGE	Qty
A.	BAR CABINET		1
B.	LEG		2

HARDWARE LIST

HARDWARE LIST


C.	Allen Bolt 6x20mm		16
D.	Washer 8x16mm		16
E.	Spring Washer Ø8mm		16
F.	Allen Key 4mm		1

NOTES.


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that May have come loose
inside the carton during shipping.

CAUTION: The Item is heavy, assembly
should be performed by two people.


STEP 1.

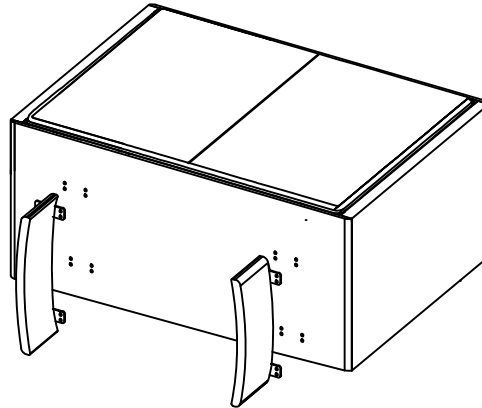

STEP 2.

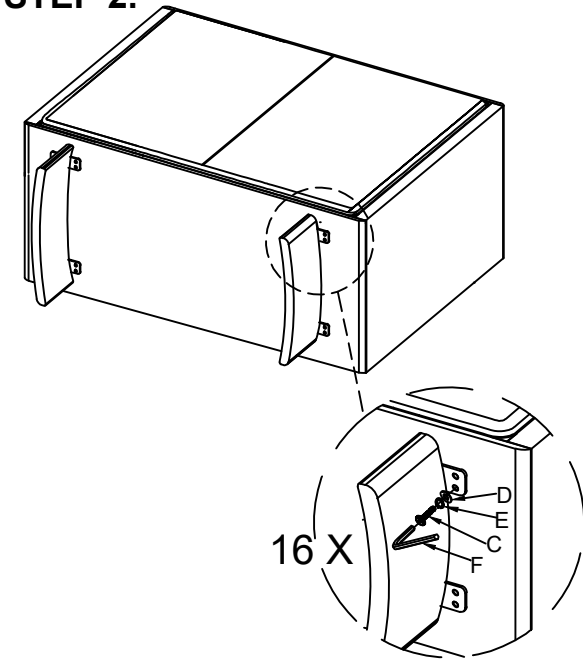

STEP 3.

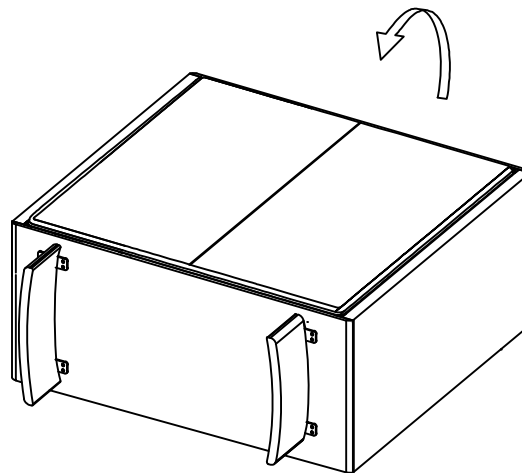

STEP 4.

