

Assembly Instruction Sheet #IS-5430P6

For Style 5430P6

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (2) G9 Base Bulb 40W Maximum (Not Include).


Estimated Assembly Time: 15-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

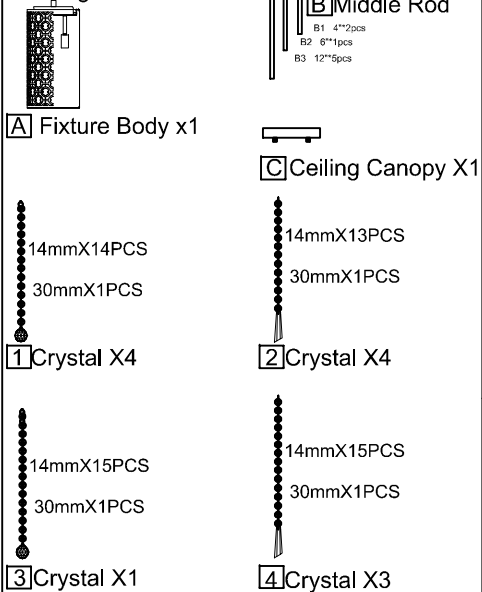

[A] Fixture Body x1

[B] Middle Rod
 B1 4" 2pcs
 B2 8" 1pcs
 B3 12" 5pcs

[C] Ceiling Canopy X1

14mm X 14PCS
 30mm X 1PCS

14mm X 13PCS
 30mm X 1PCS

1] Crystal X4 **2] Crystal X4**


14mm X 15PCS
 30mm X 1PCS

14mm X 15PCS
 30mm X 1PCS

3] Crystal X1 **4] Crystal X3**

Hardware Contents

PART	DESCRIPTION	QUANTITY
BB	Wire nut	2pcs
CC	Screw	2pcs



STEP 1- Release Mounting bracket from Ceiling Canopy .

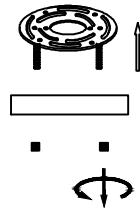


Figure 1

STEP 2-Install Rods to Fixture Body

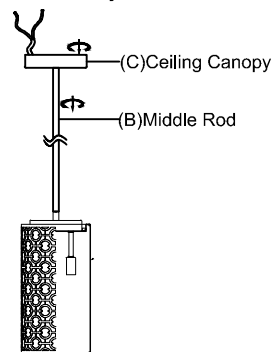


Figure 2

STEP 3-Attach Mounting bracket to Outlet Box

A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws. Tighten until snug.

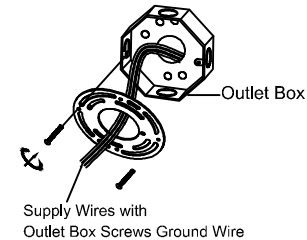


Figure 3

STEP 5 - Install Ceiling Canopy to Ceiling




Figure 5

STEP 4 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

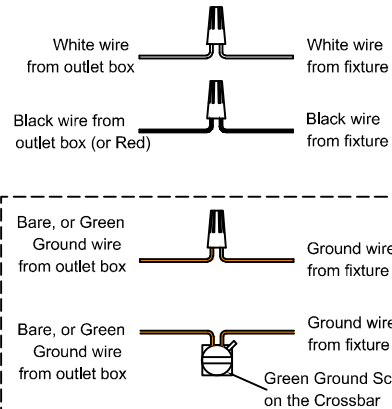


Figure 4

STEP 6 - Install bulb

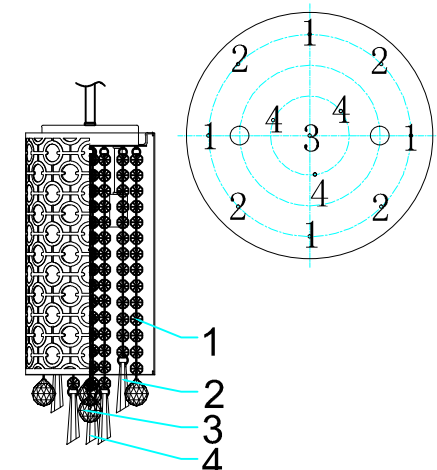


Figure 6